

SUN VISORS

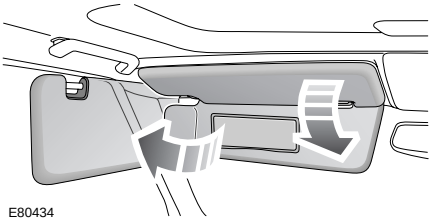

E80434

The sun visor can be pivoted downwards, or to the side as required to reduce glare.

SUN BLINDS

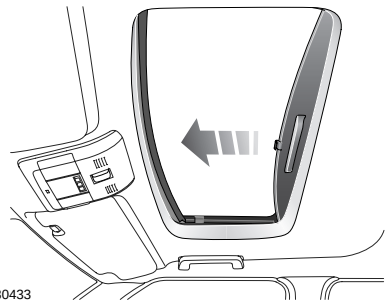


E80433

Pull the sunroof blind, across the sunroof aperture, until it locks in place.

To open, push vertically on the textured part of the blind handle. The blind will retract into the panel between the sunroofs.

INSTRUMENT LIGHTING DIMMER

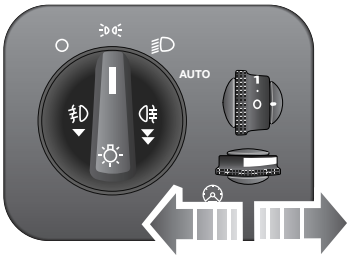


E80432

Rotate the dimmer control to vary the level of instrument pack illumination.

CLOCK

Setting the time - standard audio system

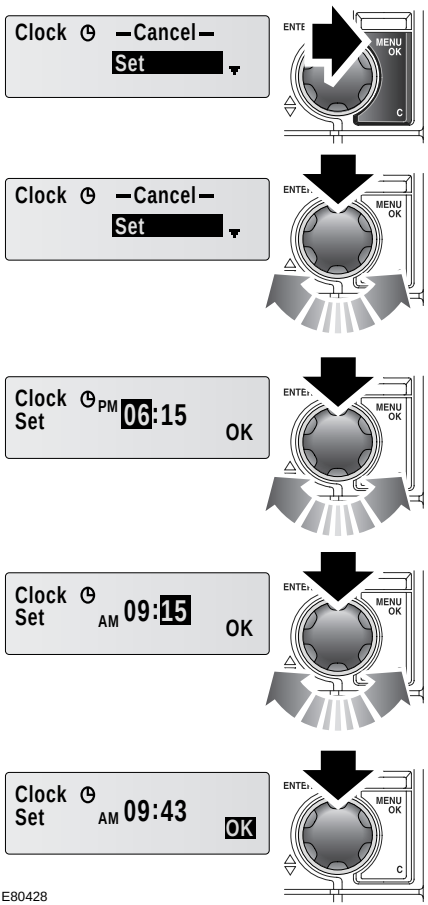


E80428

Press the **MENU OK** button, turn the right-hand rotary control to scroll to the clock menu, then press the rotary control to select **Set**.

To adjust the hours, rotate the control. Press the rotary control to accept the hours setting. The highlight moves on to minutes. Repeat to set the minutes and press the rotary control to accept. **OK** is highlighted and a further press of the rotary control accepts the settings.


Set 12-24 hour display

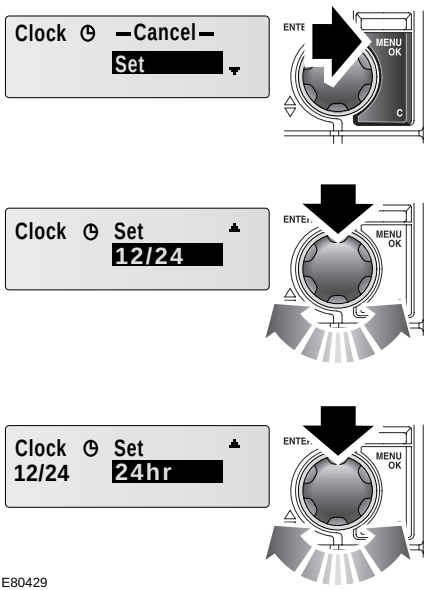

E80429


Press the **MENU OK** button. Turn the rotary control until **Clock Set** is highlighted, and press the control again. Rotate the control to scroll between **12** and **24**, then press the control to confirm.

Setting the time - premium audio system

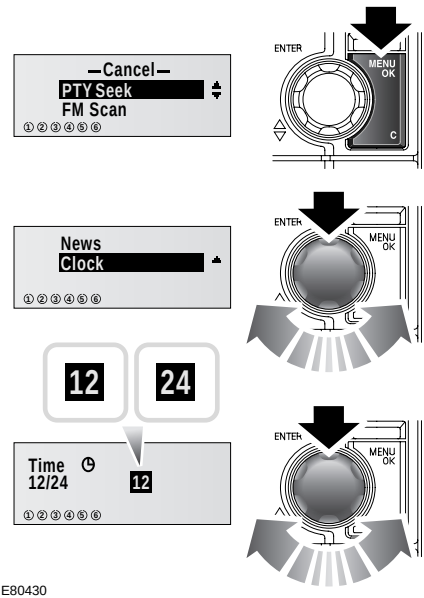

E80430

Press the **MENU OK** button. Use the rotary control to highlight **Clock**, then press the control to select. Rotate the control to scroll between **12** and **24**, then press the control to confirm.

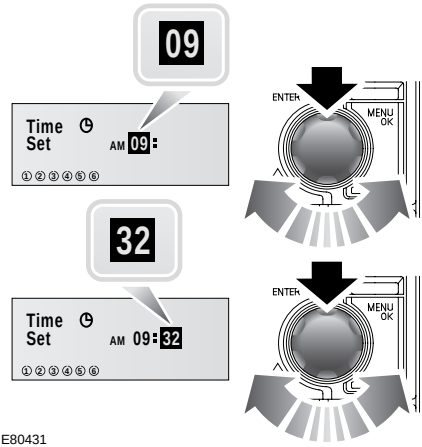


E80431

To adjust the hours, rotate the control. Press the rotary control to confirm.

Once the hours have been confirmed, the minutes can be set in the same way. The display will return to the main menu.

CIGAR LIGHTER

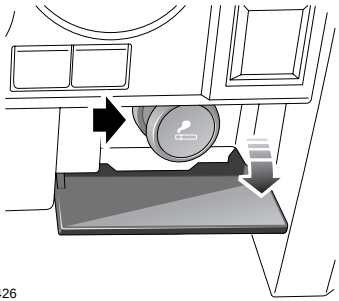

E80426

Push the centre of the faceplate to reveal the lighter.


With the starter switch turned on, press the lighter in to heat up. When it has reached the correct temperature it will partially eject.

- Only hold the cigar lighter by the handle.
- Do not plug accessories into the cigar lighter socket. Use the auxiliary power sockets provided.

ASHTRAY

CAUTION

Do not use the ashtrays for disposing of waste paper or other combustible items. The resulting fire may cause death or serious injury.

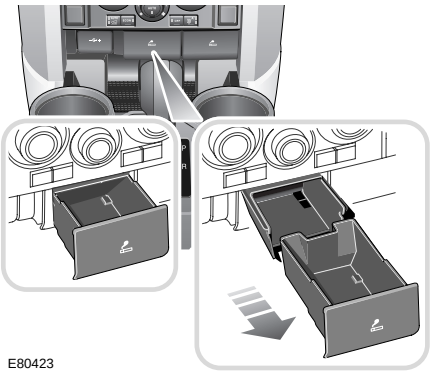

E80423

Push the bottom edge of the ashtray cover to open (left inset).

To remove the ashtray, open fully, then pull the ashtray forwards.

AUXILIARY POWER SOCKETS


CAUTIONS

Only Land Rover approved accessories should be plugged into a power sockets. Using any other equipment may damage the vehicle's electrical systems. If you are in any doubt contact your Dealer.

The engine should be running when using accessories for long periods. Failure to do so can discharge the battery.


Note: *Power sockets can be used to power approved accessories that use a maximum of 180 Watts.*

Front auxiliary power socket

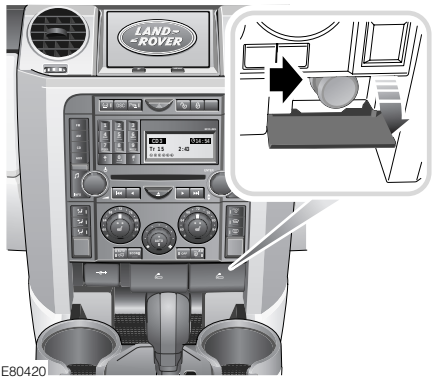


Pull down the hinged cover to access the socket.

Rear auxiliary power sockets

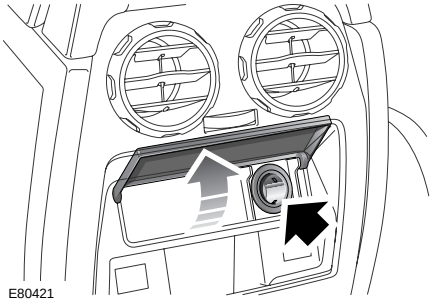


Raise cover to access the auxiliary power socket.

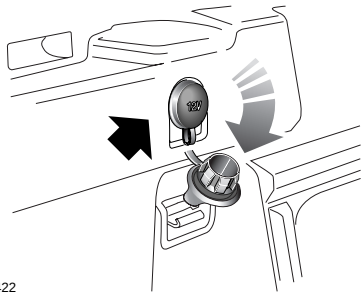

On 7-seat vehicles, a third power socket is fitted in the left-hand side trim in the loadspace area.

CUP HOLDERS

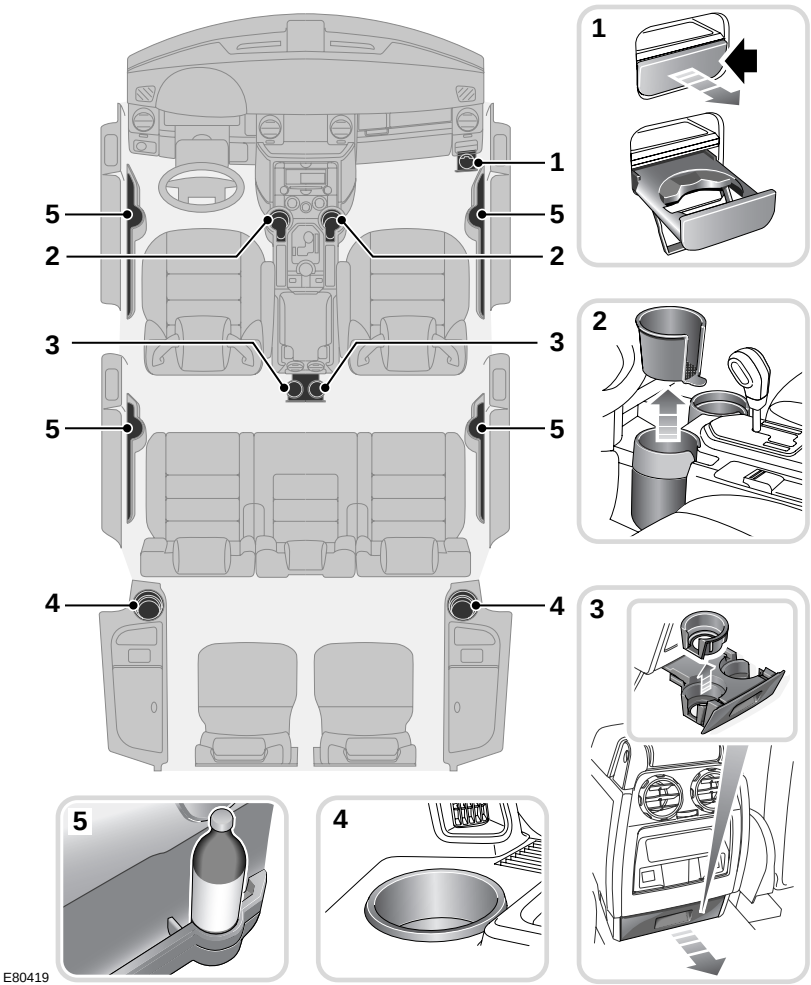

1. Front passenger's cup holder
2. Front seat cup holders
3. Second-row seats cup holders
4. Rear compartment cup holders
5. Door bottle holders

WARNINGS


The cup and bottle holders should only be used for soft containers. Containers which are hard (cans, metal, ceramic, hard plastic etc.) can cause serious injury or death if the vehicle is involved in an accident, or subject to sudden braking or direction change.

Do not drink or use the cup holders when driving. Doing so can affect concentration, which may result in loss of control.

Do not carry open drinks containers. Hot liquids can cause serious injury when spilled and may damage the vehicle.


Note: *The inner cores of the cup holders can be removed for cleaning or to make a holder for a larger drinks container.*

CENTRE CONSOLE

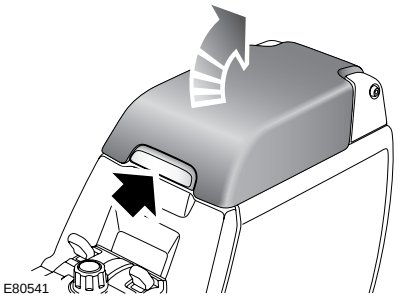

Lift the catch at the front of the lid to access the storage area.

Card holder

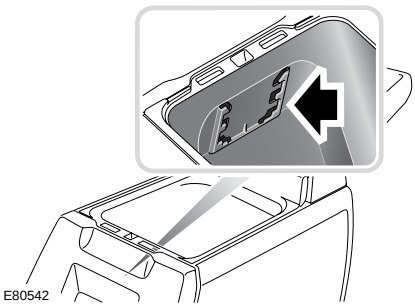

On the front inside face of the centre console is a feature to hold a credit/toll card.

CD storage


A rubber mat in the bottom of the centre console is designed to hold CD cases.

COOL BOX

CAUTION

The cool box should be switched off when it is not needed to protect the vehicle's battery.

When fitted, the cool box replaces the centre console storage area.

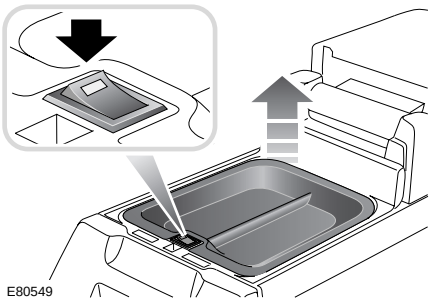


The cool box is switched on/off using the switch on the inside front lip of the cool box. There is a short delay between pressing the switch, and illumination of the indicator.

If the battery voltage is too low to operate the cool box with the engine switched off, the indicator will not illuminate.

Cooling performance is maximised when the cooling tray is used. The tray can be clipped onto the inside of the main lid when not required.

Note: *The cool box will continue to operate for a short period after the starter switch is turned to position* ***0****.*

STORAGE COMPARTMENTS

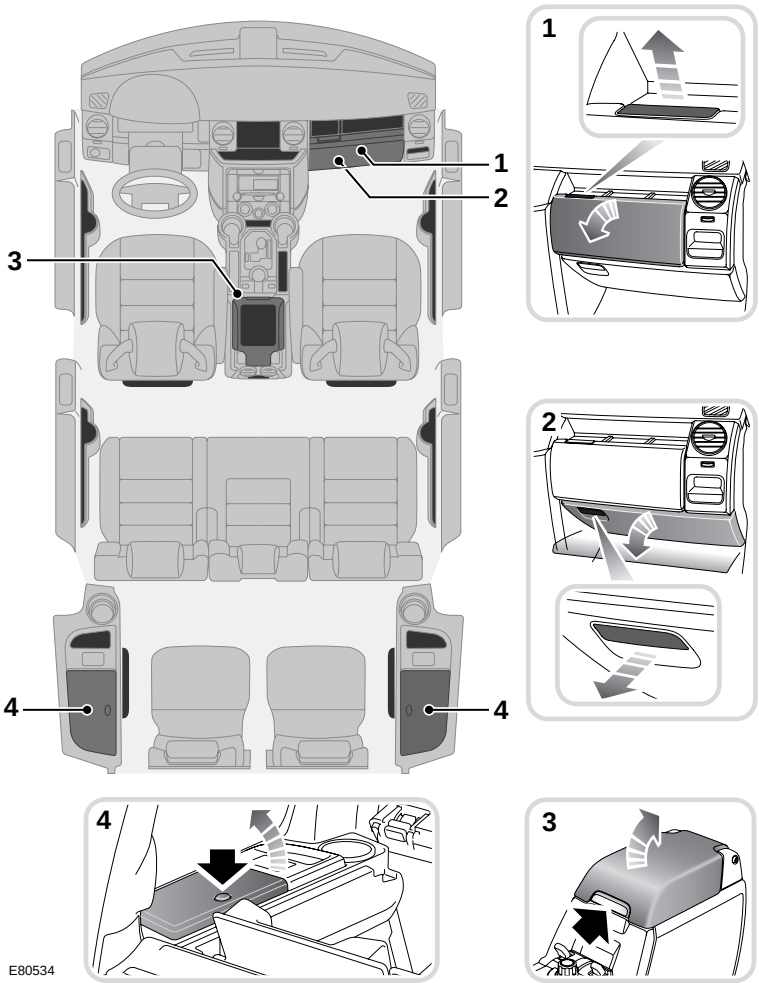

1. Glovebox
2. Lower glovebox
3. Centre console
4. Rear storage bins


WARNING

Ensure that any items stored in the vehicle are secure and cannot move. If the vehicle is involved in an accident, subject to sudden braking or direction change, loose items can cause serious injury.

MEMORY FUNCTION

WARNING

Before activating the seat memory, ensure that the area immediately surrounding the seat is clear of obstructions and that all occupants are clear of moving parts.

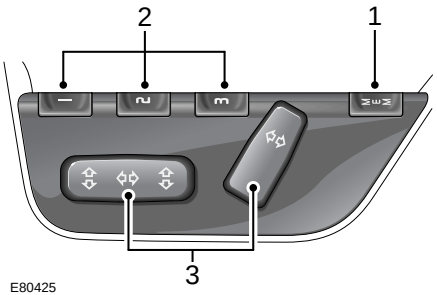

1. Memory store button.
2. Memory pre-set buttons.
3. Seat adjustment controls. See **ELECTRIC SEATS** (page 54).

Up to three driver seat, exterior mirror and electric steering column positions can be stored in the memory. The reverse mirror dipping feature can also be stored. See **EXTERIOR MIRRORS** (page 109).

Setting a memory pre-set

1. Insert the starter key and turn it to position **I** or **II**.
2. Adjust the seat and exterior mirrors.
3. Press the memory store button **1** to activate the memory function.
4. Within five seconds, press the desired pre-set button **2**.
5. **Memory Stored** will be displayed on the message centre and a single chime will sound to confirm.

Recalling a stored seat position

Press the pre-set button associated with the desired driving position. The seat, mirrors and steering column positions will move to the position stored on that pre-set.

When movement is complete, a confirmation message will display in the message centre and a double chime will sound.

Note: *To stop seat movement at any time, press any seat adjustment control.*

Lazy entry

When this feature is enabled, the vehicle stores the seating and mirror positions for each remote control. Next time the vehicle is unlocked using a remote control, the position of the seat, mirrors and steering column will adjust to the last used position.

This feature can be disabled or enabled in the **Settings** option accessed via the trip computer. See **TRIP COMPUTER** (page 115).