PRINCIPLE OF OPERATION

Cruise control enables you to maintain a constant road speed without having to keep the accelerator pedal depressed.

CAUTIONS

Do not use cruise control in traffic conditions where a constant speed cannot easily be maintained or on winding or slippery road surfaces.

Do not use Sports mode when cruise control is selected.

Note: *Cruise control is not available when you are driving in low range gears or if a Terrain Response special program has been selected.*

USING CRUISE CONTROL


WARNINGS

The driver must always ensure that a safe speed is maintained within the speed limit, taking account of traffic and road conditions.

CAUTIONS

When setting the cruise control to the speed limit it is important to remember that it is possible for the vehicle to increase speed when travelling downhill. This may result in the vehicle speed exceeding the speed limit.

Do not use cruise control in traffic conditions where a constant speed cannot easily be maintained or on winding or slippery road surfaces.

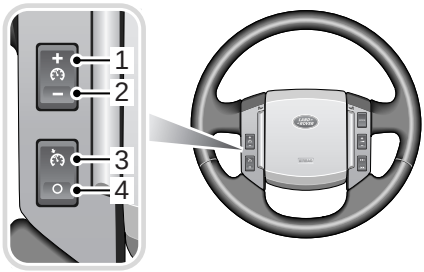

E80444

1 Set + : Set or increase the speed.

2 Set - : Set or decrease the speed.

3 Resume: Resume set speed.

4 Cancel: Cancels without erasing memorised speed.

Accelerate until your desired cruising speed is reached. The speed must be above 30 km/h (18 mph). Press button **1** to maintain that speed.



A warning lamp on the instrument pack illuminates when cruise control is operating. The speed can be increased by normal use of the accelerator e.g. for overtaking. When the accelerator is released, road speed will return to the previously set cruising speed.

Note: *If the accelerator pedal is pressed for more than 60 seconds, cruise control will be cancelled.*

Suspending cruise control

Cruise control can be suspended temporarily by a single press of button **4**. The warning lamp on the instrument pack turns off.

Cruise control is also suspended when the brake or clutch pedal is pressed, when the gear selector is moved into neutral, or if HDC or DSC becomes active. To resume cruise control at the previously set speed, press button **3**.

Note: *The set cruise speed will not be erased by pressing button **4**. The set speed will only be erased when the starter switch is turned to position **0** or the gear selector is moved to **P** or **R**.*

Reducing cruising speed

Press and hold button **2**; the vehicle will decelerate. Release the switch when the desired speed is reached, which then becomes the new cruising speed.

Tap the (**-**) button to decrease the cruising speed step-by-step. Each tap will decrease the speed by 2 km/h (1 mph).

Increasing cruising speed

Increase the vehicle's speed by normal use of the accelerator. When the desired speed is reached, press button **1** to reset the cruise control.

Alternatively, press and hold button **1**; the vehicle will accelerate. Release the switch when the desired speed is reached, which then becomes the new cruising speed.

Tap the (**+**) button to increase the cruising speed step-by-step. Each tap will increase the speed by 2 km/h (1 mph).