
FUEL FILLER FLAP

Fuel filler flap location



A small arrow on the fuel gauge indicates which side the fuel filler flap is located.

Fuel filler flap opening

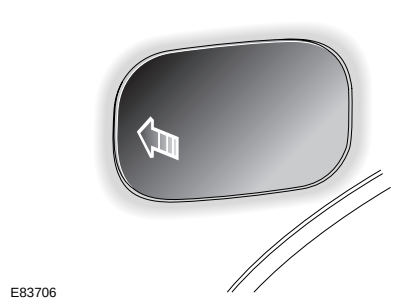


E83706

Press and release the centre of the left edge of the fuel filler flap (where arrowed) to open.

The fuel flap has a spring loaded release, do not force it open.

REFUELLING

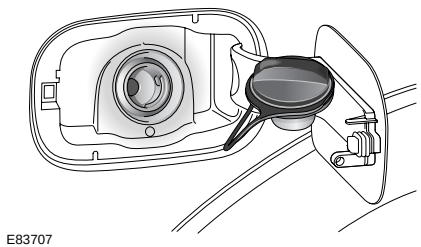

E83707

The filler cap is secured to the vehicle by a strap, and a holder is provided on the flap to locate the cap during refuelling.

Insert the pump nozzle into the filler neck, pushing aside the spring-loaded flap.

When delivery is complete, withdraw the nozzle and replace the filler cap. Turn the cap clockwise until it clicks three times, and close the fuel filler flap.

Fuel tank capacity

- Petrol engine - 86 litres (19 gallons).
- Diesel engine - 82 litres (18.5 gallons).

Fuel specification

CAUTIONS

This vehicle is not suitable for use with fuels containing more than 10% Ethanol. Do not use E85 fuels (85% Ethanol content). Equipment necessary for the use of fuels containing more than 10% Ethanol is not fitted to this vehicle. If E85 fuels are used, serious engine and fuel system damage will occur.

The maximum allowable Bio-diesel mix is 5%, meeting EN 590 specification.

The correct fuel specification for your vehicle is shown on the inside of the fuel filler flap. See **FUEL QUALITY** (page 183).

Incorrect fuelling

CAUTION


If the fuel tank is accidentally filled with the wrong type of fuel, do not start the engine. It is essential that you seek qualified assistance.

TYRE PRESSURES

Air pressure naturally increases in warm tyres; if it is necessary to check the tyres when they are warm (after the vehicle has been driven for a while), you should expect the pressures to have increased by up to 30 - 40 kPa (0.3- 0.4 bar) (4 - 6 lbf/in²). In this circumstance, Do not let air out of the tyres in order to match the recommended cold tyre pressures. See **TYRE CARE** (page 241).

Tyre pressure labels

The correct tyre pressures are shown on a label attached to the driver's door

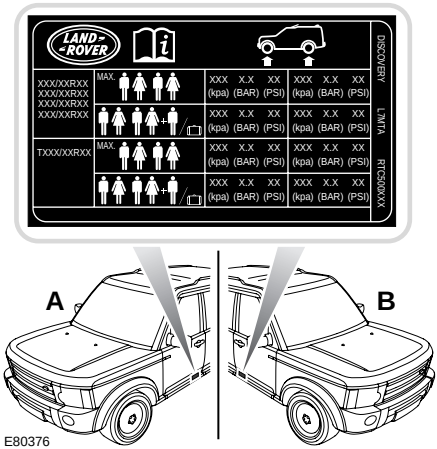

A. Left-hand drive vehicle

B. Right-hand drive vehicle

Temporary spare wheel

The tyre pressure in the temporary spare wheel/tyre should be maintained at 420 kPa (4.2 bar/60 lbf/in²) for all loading conditions.

ENGINE OIL SPECIFICATION

Model	Specification
Diesel vehicles	SAE 5W-30 meeting specification WSS-M2C913-B only
Petrol vehicles	WSS-M2C913-B [1]

[1] If you are unable to find an oil that meets the specification defined by WSS-M2C913-B, you must use an SAE 5W-30 oil meeting specification ACEA:A3/B3. See **ENGINE OIL CHECK** (page 212).

LAND ROVER RECOMMENDS

Castrol

ENGINE COOLANT SPECIFICATION

Top-up to the upper level indicator mark located above the **COLD FILL RANGE** text, on the side of the expansion tank. Use only a 50% mix of water and Castrol SF antifreeze. See **ENGINE COOLANT CHECK** (page 213).