TRIP COMPUTER

Note: *The clock is set via the audio system. See* ***CLOCK*** *(page 130).*



E90923

After starting the engine and the system check is complete, the outside temperature is shown on the display. If the vehicle is moving, it shows the current trip distance.

Note: *The units used can be selected by the driver. See* ***PERSONALISED SETTINGS*** *(page 116).*



E90924


Short presses of the **i** button (less than two seconds) will scroll through the following statistics:

- Range (with current fuel tank contents).
- Average fuel consumption.
- Average speed.
- Overspeed warning function (a long press turns the function on or off).
- A review of active warning messages.
- Outside temperature.
- Trip distance (a long press zeroes the trip distance recorder and then starts to record distance).

PERSONALISED SETTINGS

You can select various trip computer settings to suit your personal requirements. Any selections you make are associated with the remote control that you used during the process. These choices are then recalled when the vehicle is next unlocked using that remote control specifically. See **MEMORY FUNCTION** (page 138).

With the starter key in any position, the vehicle stationary and a blank display, a short press (less than two seconds) of the **i** button activates the **SETTINGS** display.

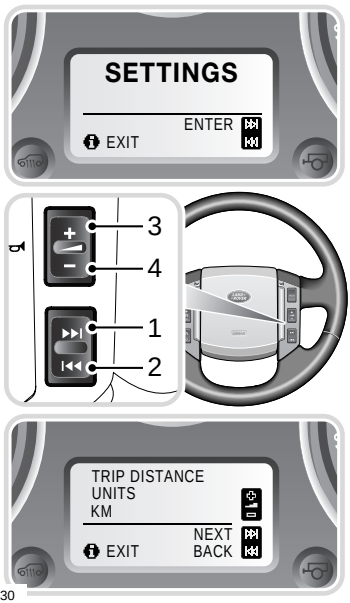

E81030

Press **1** to access the settings that can be personalised.

Press **1** or **2** to scroll through the menu. Press **3** or **4** to make selections.

When selections are complete, short press **i** button to save any changes and return to the trip computer display.

Note: *You cannot make changes while the vehicle is moving.*

TRIP COMPUTER SETTINGS	SELECTION
TRIP DISTANCE UNITS (odometer)	MILES/KM
FUEL USAGE UNITS	MPG l/100km Km/l
EXTERNAL TEMPERATURE	°C or °F
OVERSPEED WARNING	Off 20 - 250 km/h or 15 to 140 mph in 5-unit steps
HEADLAMP OFF DELAY	30/60/120/240 seconds
AUTO DOOR LOCK (speed related locking)	ON/OFF
REVERSE MIRROR DIP†	ON/OFF
LAZY ENTRY†	ON/OFF
RESTORE DEFAULT SETTINGS	YES/NO

† Vehicles with driver's seat memory only.

INFORMATION MESSAGES

CAUTION

Do not ignore warning messages: take appropriate action immediately. Failure to do so may result in damage to the vehicle.



E81033

Driver warning and information messages are displayed in the main message centre when a fault is detected and also when the starter switch is off.

Messages are displayed in order of importance with critical warnings taking priority. Messages are grouped into the following categories.

Critical warning messages

Critical warning messages are accompanied by an audible warning and the message may have a symbol next to it.

Warnings messages

Warning messages are non-critical, but must be treated with some urgency. They may also be accompanied by an audible warning.

All warning messages are displayed for about four seconds, after which this symbol is displayed in the main message centre, indicating that there are messages to be reviewed. To review messages, press the **i** button on the direction indicator lever until the list of messages is displayed.

The message centre will cycle through the messages until the **i** button is pressed again.

Information messages

Information messages are displayed when the starter switch is turned on or off. Where the message requires action, you need to take corrective action as soon as possible.

Languages

The language displayed in the main message centre is set by the dealer.

If navigation is fitted, the language selected for navigation display will be displayed. If the main message centre does not support the navigation language you select, then English is displayed.

Service interval indicator




E81053

When the starter switch is turned to position **II**, and a pre-determined distance or time is reached, a distance countdown to the next service due is displayed. A minus sign preceding the distance indicates that the service interval point has been exceeded by that distance.

After approximately five seconds, the display reverts to total distance travelled.

Note: *During the service, the repairer will reset the distance display for the next service due.*

Gear selector display

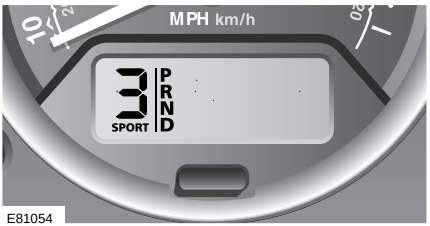

E81054

On vehicles with automatic transmission, the display shows the current gear selector position and indicates when **SPORT** is selected.

On vehicles with manual transmission, the display shows the gear currently engaged.