GENERAL INFORMATION

WARNING


Ensure that any items stored in the vehicle are secure and cannot move. If the vehicle is involved in an accident, or subject to sudden braking or direction change, loose items can cause serious injury or death.

Weights and load capacities

Information and values for the maximum weights can be found in the Weights section. See **TECHNICAL SPECIFICATIONS** (page 269).

Note: *It is the driver's responsibility to ensure that the maximum weights are not exceeded, and that the load is distributed correctly within the vehicle.*

LUGGAGE ANCHOR POINTS

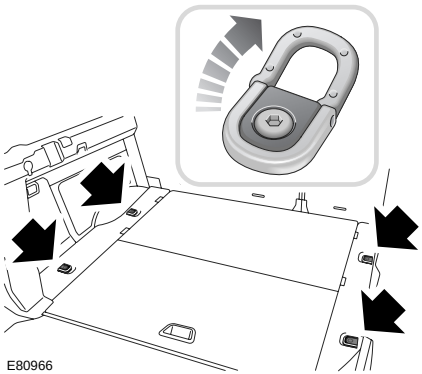


E80966

To assist in safely securing large items of luggage, four fixing points are located in the rear loadspace floor.

Note: *A range of approved luggage retention accessories are available from your Land Rover/Authorised Repairer.*

REAR LOADSPACE HATCHES

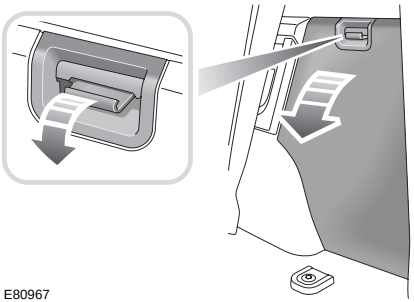

E80967

There are access hatches on both sides of the rear loadspace.

On 7-seater models the right-hand side hatch gives access to the toolkit and the left-hand hatch gives access to the tow bar.

Ensure that the hatch is securely fitted before driving.

LUGGAGE COVERS


WARNING

Never place objects on top of the luggage cover. During an accident or sudden manoeuvre loose objects can cause serious injury or death.

CAUTION

When retracting the cover make sure nothing is left on top. Some items, such as paper or fabrics, may become trapped and jam the mechanism.

If the cover is damaged, this may prevent the cover from operating correctly and cause further damage.

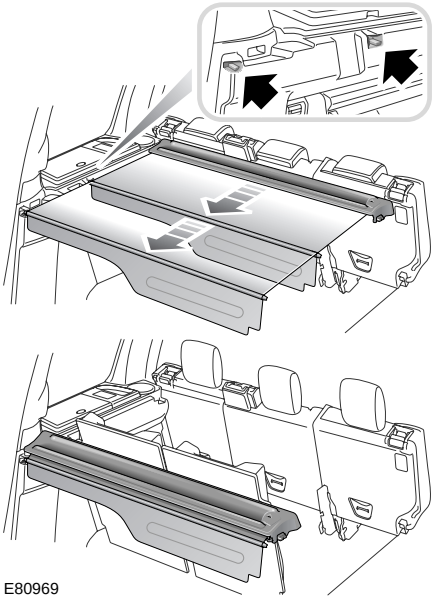

E80969


Operating the luggage cover

1. Pull the rigid portion of the blind to unroll the cover.
2. Engage the end pieces into the recessed features moulded into the loadspace sides.

Stowage of luggage cover

WARNING

When fitting the luggage cover in position ensure that the paddle returns to the flush (horizontal) position. Failure to do so may allow the luggage cover to move during an accident or sudden manoeuvre.

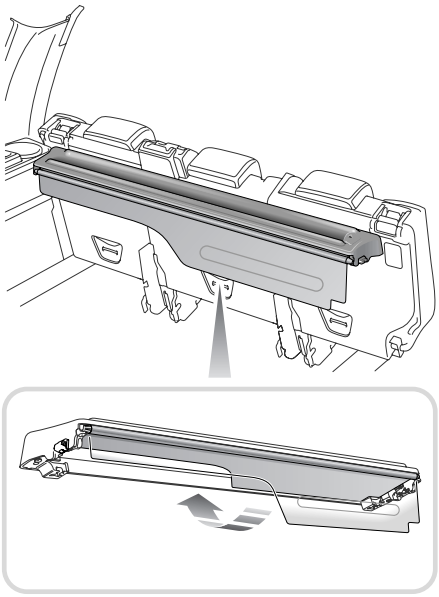

E80970


1. Disengage the ends from the recess and fully retract the cover into the tray unit.
2. Fold the rigid portion of the blind back under the unit and press until the edge engages and is retained.

Removal and refitting of luggage cover

WARNING

Do not store the loadspace cover loose in the vehicle.

Note: *It is easier to remove/refit if the second row seat backs have been tipped forward.*

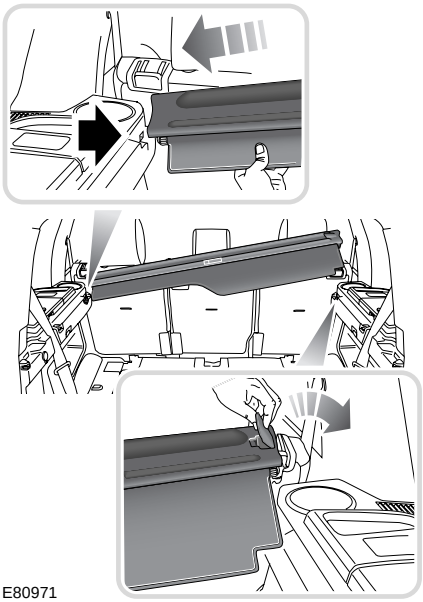

The luggage cover cartridge can be placed at either end of the loadspace. The foremost fitting is close behind the second row of seats; the rearmost is behind where the third row of seats are in a 7-seat vehicle.

1. Pull up the paddle at the right-hand end of the cartridge; this disengages the locking bolt. Lift the right-hand end of the unit and pull it away from the opposite loadspace side.
2. Installation of the cartridge is the reverse of the removal procedure above.

5-seat vehicle

When the luggage cover is removed, it must be stored away from the vehicle.

7-seat vehicle

WARNING


Never fit the luggage cover behind the second row of seats if the third row is to be occupied.

CAUTIONS

Remove the stowed unit before moving the seats.

Do not attempt to raise the second-row seats into the upright position, or tip them forward for third-row access, while the luggage cover is in this stowed position as damage will result.

To fit the blind, the third row seats must be folded down.

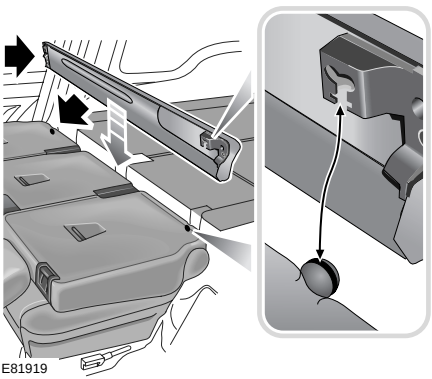

If the luggage cover is removed from a 7-seat vehicle and both the second and third rows of seats are down, the cover can be stowed in the gap between the second and third row seats.

Lower the cover into the gap and engage the receivers onto the studs protruding from the outboard portions of the outboard second-row seat-backs.