
ADJUSTING THE STEERING WHEEL

WARNINGS

Never adjust the steering wheel position while the vehicle is in motion. Doing so will reduce control of the vehicle, and may cause unpredictable steering movements.

Manual adjustment

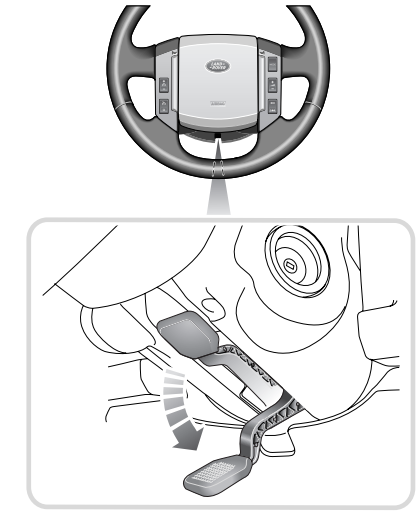

E92262


The steering wheel position can be adjusted in two directions.

Move the lever, located under the steering wheel, fully downwards (see inset).

Adjust the steering wheel up or down, in or out.

Move the lever fully up to lock.

Electric adjustment

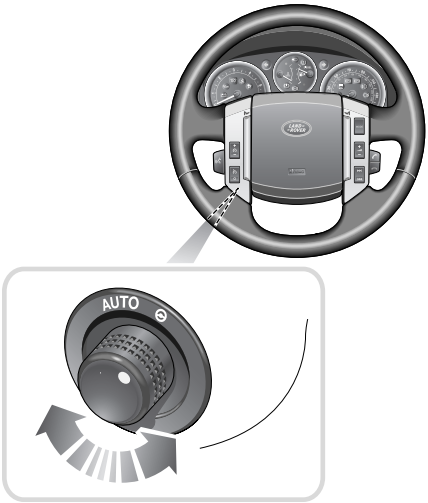

E91595

The steering wheel can be adjusted in four directions, corresponding with the movement of the adjustment control, to suit your driving position.

Move the control up or down to adjust the height of the steering wheel.

Move the control forwards or rearwards to move the steering wheel further away or closer to your body.

Automatic seat movement

If the control is set to the **AUTO** position, the steering column and the driver's seat will automatically move when the starter key is removed. This allows greater clearance when exiting and entering the vehicle.

The position of the steering column and seat will be returned to their previous position next time the key is inserted into the starter switch.

Note: *To prevent automatic movement of the driver's seat, turn the control to its clockwise position.*

Steering wheel position memory


The finalised steering wheel position is stored in memory and assigned to the starter key in use when the position was set.

When that key is next used, the stored settings associated with it are recalled.

This enables different steering wheel settings to be stored on different keys, allowing the driving position to be easily optimised for more than one driver.

If the steering column is subsequently adjusted, you can store the new position along with your current seat and mirror position, in place of your previously-stored positions. See **MEMORY FUNCTION** (page 138).


HORN

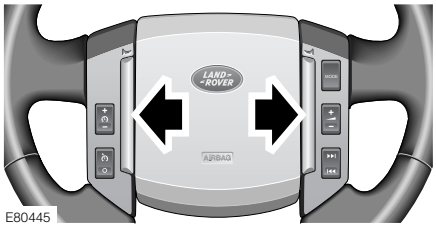

E80445

To operate, press either of the horn switches.

AUDIO CONTROL

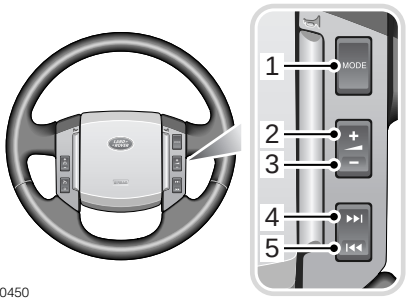


E80450

1. Mode select.
2. Volume up.
3. Volume down.
4. Channel up.
5. Channel down.

VOICE CONTROL

Activating the voice control system

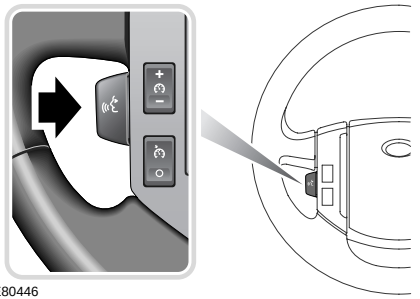

E80446


To activate voice control:

- Briefly pull the control. An audible alert will be heard, and **LISTENING** will be displayed on the main message centre. The system is now waiting for a voice command.

For general information about voice control. See **USING VOICE CONTROL** (page 336).

CRUISE CONTROL

Cruise control is operated via the switches on the steering wheel. See **USING CRUISE CONTROL** (page 163).

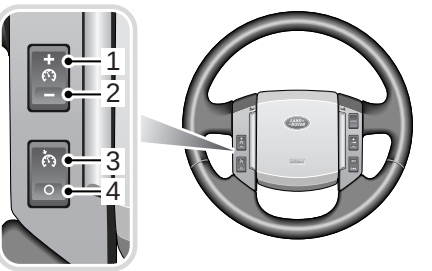

E80444

1. Set **+** : Set or increase the speed
2. Set **-** : Set or decrease the speed
3. Resume: Resume set speed
4. Cancel: Cancels without erasing memorised speed