
Television

GENERAL INFORMATION

TELEVISION CONTROLS

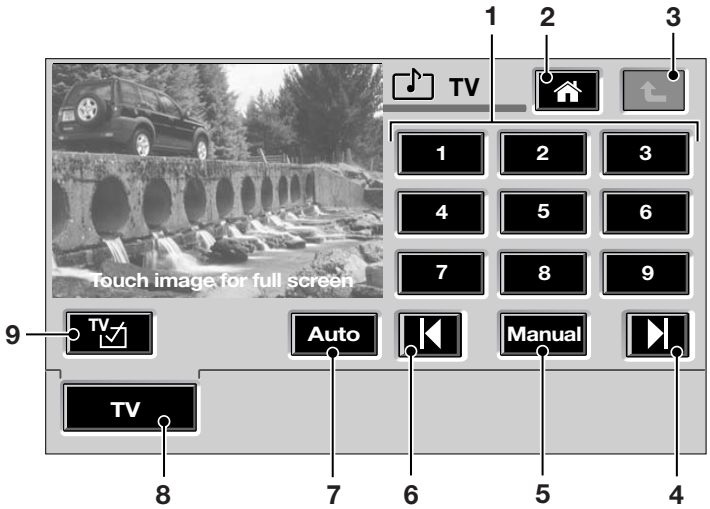

E92606

1. Channel preset icons
2. Home menu icon
3. Return icon
4. Forwards/Next icon
5. Manual tuning icon
6. Backwards/Previous icon
7. Automatic tuning icon
8. TV select icon
9. TV country/format icon

Note: *For occupant safety, when the vehicle is in motion or the parking brake is released, the TV picture is not displayed (but the audio signal can be heard).*

Analogue/Digital television

To cope with changes in technology, the TV tuner is able to receive both analogue and digital TV signals.

In certain areas both analogue and digital signal strengths will vary. When in an area of weak reception, you may experience a break-up in picture and sound quality or a blank screen and audio muting. It may be of benefit to retune the viewed station and possibly switch between analogue and digital TV stations. The analogue and digital stations have been combined into a single list.


USING THE TELEVISION

Selecting TV



E92607

Press the **Driver information** hardkey on the screen surround.

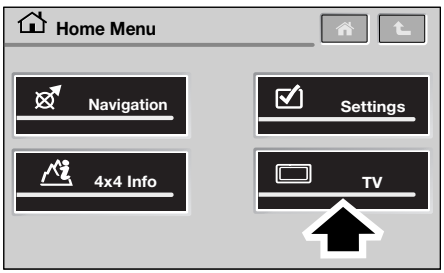


E92608

From the next screen, select TV by pressing the **TV** or **TV-DVD** icon.

The TV menu and a reduced TV image will be displayed.

Note: *If no reduced TV image is visible, this may be due to the vehicle having moved since the stations were stored or that no stations are stored or that the vehicle is in a poor reception area. Whichever the case, tuning/retuning the stations will be necessary. See* ***Automatic station search and store****, below.*

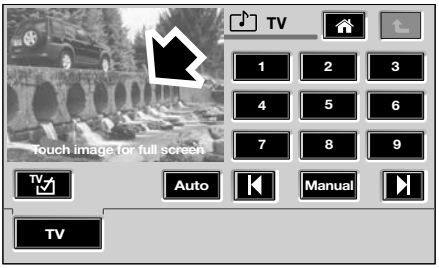

E92609

Touch the reduced TV image for full-screen display.




E92610

The full-screen TV display is accompanied by icons, allowing the user to change channel and adjust the picture format. After five seconds, the icons will disappear from the display. They can be made to reappear by touching the screen again.

Press the return icon in the top right-hand corner of the display to return to the TV menu.


Channel selection

There are two methods of channel selection.

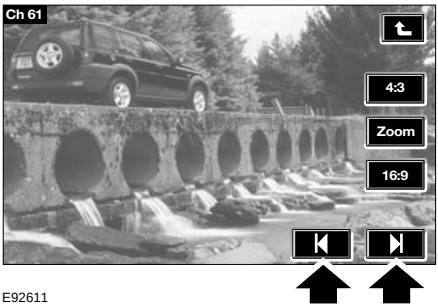

E92611

Once channels are stored, touch the full size TV image to access the icons and press the appropriate **Forwards/Next** or **Backwards/ Previous** icon to select the desired channel.

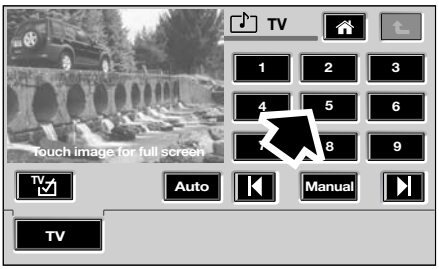



E92612

Alternatively, from the TV menu, press the appropriate channel preset icon (numbered 1-9).

Automatic station search and store

Up to 99 analogue or digital TV stations can be registered automatically in the Auto list.

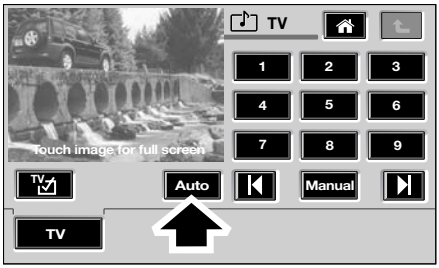

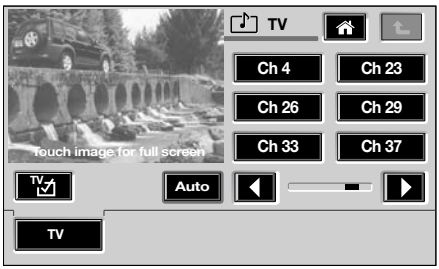


E92613


Press the **Auto** icon to display the list of available stations.

Received stations are stored automatically and each assigned to a channel preset icon.

The stored stations are listed by name, in ascending alphanumeric order.

Selecting an automatically stored station

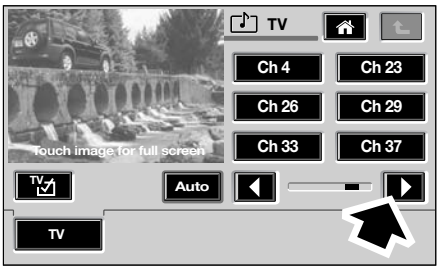

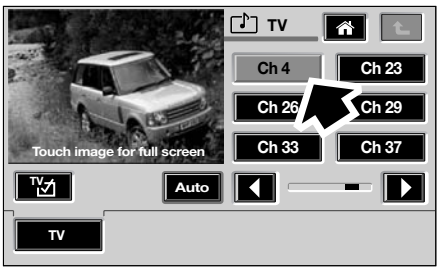

E92614


If there are more than six stored stations, the continuation of the channel list can be accessed by pressing the right arrow icon (left arrow icon for the previous list).


Once the desired channel name or number is visible, press the appropriate station preset icon.

To access the manual station menu, press the **Auto** icon.

Manual station search and store

Up to nine TV stations can be stored manually as presets.

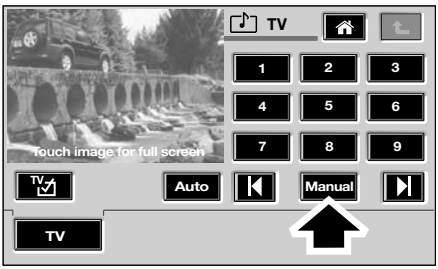


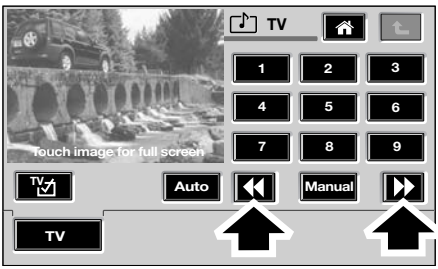

E92615

1. Press the **Manual** icon to initiate the manual station search and store mode.
2. To search manually for a station, press the right or left arrow icon.
3. To assign and store the received station, press and hold one of the station preset icons, until a confirmation tone is heard. The station is now stored.

Selecting a manually stored station

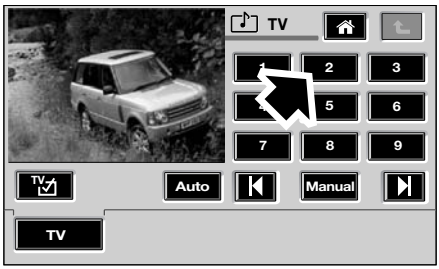


E92616

To select a stored station subsequently, press the required station preset icon.

TELEVISION SETUP


Adjusting picture format

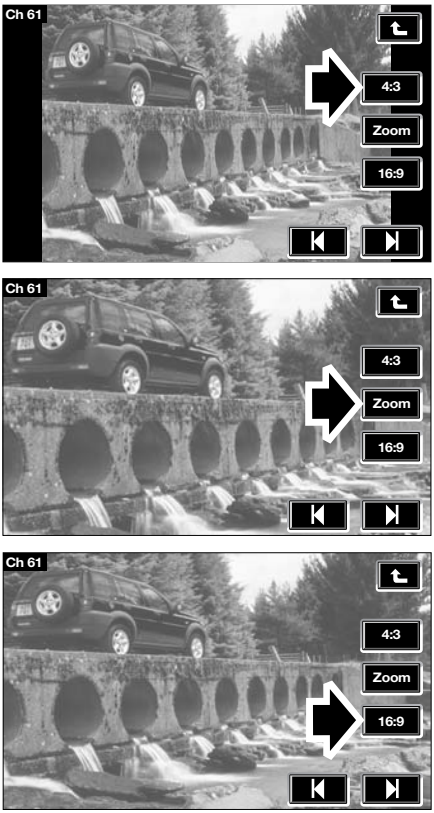

E92617


To adjust the viewable picture format, press the appropriate icon, **4:3**, **Zoom** or **16:9**, for a proportional enlargement.

Selecting TV country/format

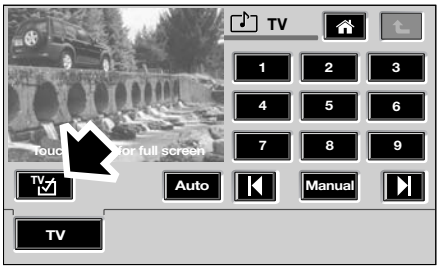

E92618

Press the **TV Country/Format** icon to enter the format menu.

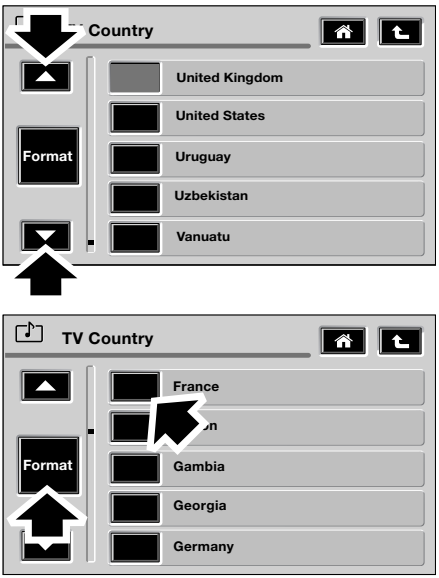


E92619

To select the country in which you are driving, scroll up or down using either arrow icon and press the relevant country icon.

Not all countries use the same TV format. However, you can adapt your unit to accept the format of the country in which you are driving (PAL, SECAM, NTSC).

Note: *During normal operation, the user should not need to adjust the format. Selection of the correct country of operation is sufficient.*

To switch to the TV Format menu, press the **Format** icon.

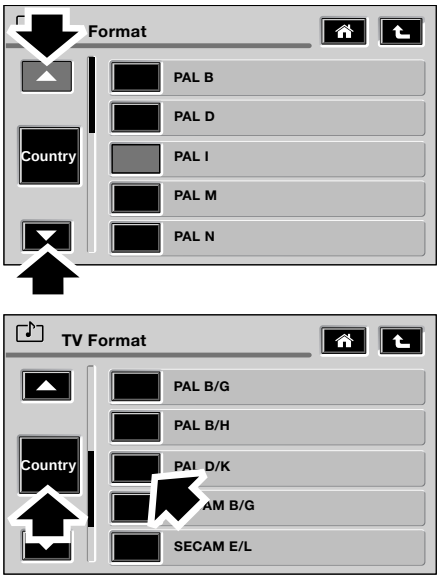

E92620

Scroll up or down using either arrow icon and press the relevant TV format icon for your reception area.

To switch to the TV Country menu, press the **Country** icon.