PRINCIPLE OF OPERATION

Voice control enables operation of the audio and telephone systems without the need to divert your attention from the road ahead in order to change settings, or receive feedback from the system.

Whenever you issue one of the defined commands with the system active, the voice control system converts your command into a control signal for the audio or telephone system. Your inputs take the form of dialogues or commands. You are guided through these dialogues by announcements or questions.

Please familiarise yourself with the functions of the audio and telephone systems before using voice control.

USING VOICE CONTROL

The voice recognition system includes a hands-free microphone mounted in the roof of your vehicle. There are a few points to observe to ensure that the system understands your commands:

- Speak continuously and at normal volume, avoiding unnatural emphasis and pauses between words.
- Do not speak while the voice recognition system is giving an output. The voice system displays **LISTENING** on the message centre, and gives a beep when it is waiting for a voice command.
- It is possible that noise from inside or outside the vehicle could affect commands. Keep the doors, windows, and sunroof closed. Reducing Climate control to a minimum while you are speaking will also help.
- If a command is not heard, or is misunderstood, the voice system responds with >Sorry<, >Command not recognised< or >No speech detected<. If this happens, repeat the command.
- Avoid causing background noise in the vehicle while you are speaking, and ask your passengers not to talk while you are issuing voice commands.
- The hands-free microphone is positioned to pick up the driver's voice.

Activating the system



E82207

To activate voice control:

- Briefly pull the control (the audio will mute). A tone will be heard, and **LISTENING** will be displayed on the main message centre to indicate that the system is waiting for a voice command.

Note: *It is only necessary to operate the control at the beginning of each voice session.*

Defined voice commands

The voice control system understands predefined commands which need to be quoted word for word.

An audio guide of voice commands is available. To activate the guide, pull the control briefly and give one of the following commands:

- **Voice help** - to list all commands.
- **Radio help** - to list Radio commands.
- **CD help** - to list CD commands.
- **Navigation help** - to list Navigation commands. Please refer to the Navigation Handbook for operating instructions.
- **Notepad Help** - to list Notepad commands.

Interrupting voice control

A command can be interrupted by saying the word Cancel or by pressing the control until the system responds by saying >Command cancelled<.


If you receive a telephone call (or Navigation route guidance instruction/TA announcement) while conducting a dialogue, the dialogue is interrupted.


Command not recognised

If a command is not recognised, the system responds with:

>Sorry<, >Command not recognised<.

Voice settings

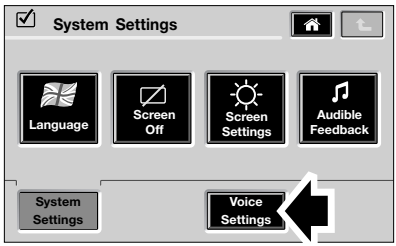

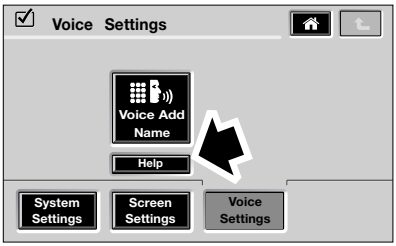


LAN1276

From the System Settings menu, touch the **Voice Settings** icon.

Note: *If required, on screen help can be inittiated by touching the* ***Help*** *icon.*

Voice language

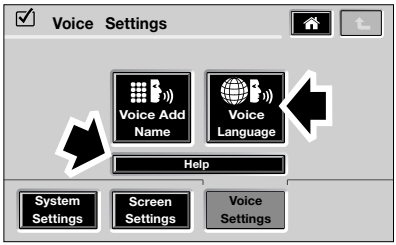




LAN1277

From the Voice Settings screen, touch the **Voice Language** icon.

It should be noted that the Voice Language icon is only available with the extended voice option and not with basic voice.

Touch the up and down arrows to scroll through the list of available languages.

Select the required language by touching the relevant icon.

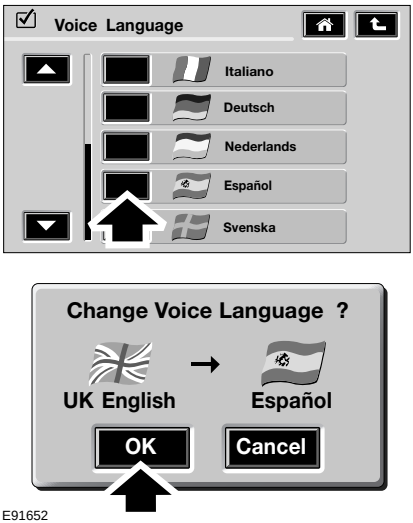

E91652

Touch the button icon next to the language you wish to use. A pop-up menu will appear indicating the current language, the new language and the option to cancel or accept the change.

Once your language choice has been made and you have pressed the **OK** icon, the main settings screen will be displayed.

AUDIO UNIT COMMANDS

Starting a dialogue

Hold the control until the tone is heard. Any audio sources in the vehicle are muted.

Command	System response	Message centre display
“Radio play”	>Radio play<	**RADIO PLAY**
“Radio tune” <nametag>	>Radio tune <nametag><	**Radio Tune**

Nametags

Nametags are a unique name or phrase of your choice which can be used to recall a radio station. The nametags used can be the station name, or a completely separate name of your choosing.

Once you have tuned to a radio station, it is possible to store a name in a directory by using the **Radio store name** command. The system responds with >Name please<. You say the name that you have chosen (e.g. Radio 1).

The system will read out a list of current nametags when given the command **Radio directory**.

Radio stations

Frequencies are said as in the following examples:

Radio tune <nametag> is used to select a station that has been previously stored.

Storing radio stations via voice command

Once you have tuned to a radio station, it is possible to store that station for future use as a pre-set. The following commands apply to the currently tuned station.

The command **Radio store preset <say number (1-9)>** calls up the dialogue for storing a pre-set station.

The command **Radio autostore** enters the autostore function for the selected frequency band (e.g. FM).

Command	System response	Message centre display
“Radio store preset” <preset number (1-9)>	>Radio store preset <preset number (1-9)><	**STORE PRESET** (1-9).
1. “Radio store” name	2. >Radio store name, name please<	**RADIO STORE NAME, NAME PLEASE**
3. “Name”	>Name<	**STORED**
“Radio autostore”	>Radio autostore<	**RADIO AUTOSTORE**
“Radio tune” <name>	>Radio tune <name><	**RADIO TUNE**

Tune/delete from the radio directory

The commands **Radio play directory** or **Radio directory** prompt the system to read aloud the entire list of nametag entries in the radio directory.

The nametag list is read out in stored order, and commands can be entered during the system response.

Replay

After a nametag has been read out by the system, give the command **Replay** and the nametag will be repeated.

Tune

After a nametag has been read out by the system, give the command **Tune** and the radio tunes to the station saved under that nametag.

Delete

After a nametag has been read out by the system, give the command **Delete** and the nametag will be removed from the directory.

After a nametag has been read out by the system, give the command **Cancel** and the current Voice session will end.

Command	System response	Message centre display
Radio play directory You can say "**Replay**", "**Tune**", "**Delete**" or "**Cancel**" after each name.	>Radio play directory< Reads out directory.	**RADIO DIRECTORY Station frequency**

Deleting the directory

The command **Radio delete directory** deletes all entries in the radio directory.

Command	System response	Message centre display
1. “Radio delete directory”	1. >Radio delete directory, confirm yes or no<	1. **DELETE DIRECTORY SAY YES OR NO**
2. “Yes”	1. >Are you sure that you want to delete the whole directory?<	2. **SAY YES OR NO**
3. “Yes”	1. >Directory deleted<	3. **DIRECTORY DELETED**

Selecting disc and track numbers

For CD player commands, say disc and track numbers as in the following examples:

- **CD play disc one**.
- **CD play disc six track ten**.
- **CD play track twenty five**.
- **CD play track forty seven**.

Command	System response	Message centre display
“CD help”	>List of CD commands<	**CD HELP**
“CD play”	>CD play<	**CD PLAY**
“CD play disc” <say number (1-6)>	>CD play disc <say number (1-6)><	**DISC <disc number (1-6)>**
“CD play next disc”	>CD play next disc<	**NEXT DISC**
“CD play previous disc”	>CD play previous disc<	**PREVIOUS DISC**
“CD play track” <say number (1-99)>	>CD play track <say number (1-99)><	**TRACK** <track number (1-99)>
“CD play disc” <say number (1-6)> track <say number (1-99)>	>CD play disc <say number (1-6) track <say number (1-99)><	**DISC** <disc number (1-6)> **TRACK** <track number (1-99)>

NOTEPAD COMMANDS

Using Notepad

Notepad allows you to record short messages as memory aids or reminders.

You can record a maximum of 10 notes, each with a maximum duration of 30 seconds.

Briefly pull the voice control (the audio will mute). A tone will be heard, and **LISTENING** will be displayed on the main message centre. A notepad command can now be given.

Command	System response	Action
“Record note” or “Notepad record”	Notepad gives a beep to indicate the start of recording.	You may start your recording after the beep. To stop recording, hold the voice recognition control.
“Play notepad” or “Rear notepad”	Notepad will recite each note in turn. You can say Replay, Delete or Cancel after each beep or remain silent to hear the next note.	Saying Replay will replay the previous message. Saying Delete will delete the previous message. Saying Cancel will cancel the previous message.
“Clear notepad” or “Notepad delete”	Do you want to clear the notepad?	Say Yes to delete all stored notes. Say No to cancel the command.
“Notepad help”	The system will recite notepad information and all the commonly used commands	