
ELECTRIC WINDOWS

WARNING

All of the windows have an anti-trap protection system. However, before closing a window care must be taken to ensure that none of the occupants have any part of their body in a position where it could be trapped. Even with an anti-trap system serious injury or death can occur.

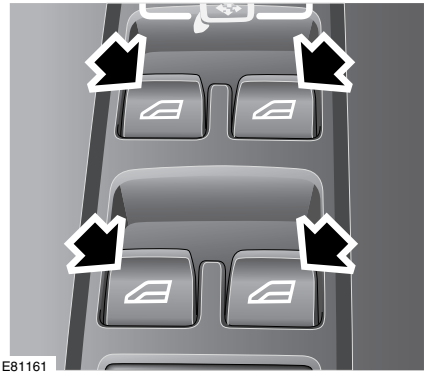

With the ignition on, or engine running, press the switch down to lower the window, pull it up to raise the window. Release the switch at any point to stop window movement.

The windows will operate for five minutes after the engine is switched off, as long as the doors are not opened.

One shot operation

WARNING

Ensure that you remove the remote control when leaving occupants in the vehicle. This will prevent unsupervised operation of the windows, which may result in injury.

All four windows have one-shot operation. Briefly pull the switch up and release, the window will continue to raise until fully closed. Briefly press the switch down and release, the window will continue to lower until fully open. Pressing or pulling the switch again will stop the window.

Overriding anti-trap protection

Anti-trap protection will stop window movement if an obstruction or resistance is detected. Check the window and it's aperture and remove any obstructions, ice, etc. If it is still necessary to raise the window, the override procedure is as follows :-

1. Attempt to close the window, anti-trap will prevent closure and lower the window slightly.
2. Within ten seconds attempt to raise the window again, anti-trap will prevent closure and lower the window slightly.
3. Attempt to close the window for a third time, this time hold the switch in the close position. The window will raise whilst the switch is held. Hold until closed.

Note: *If this procedure fails to remove the blockage, the window operation may need to be reset.*

Window reset

The windows will need to be reset if the battery is disconnected, becomes discharged, or power supply is interrupted.

Reset as follows :-

1. Close the window fully.
2. Release the switch, then lift it to the close position and hold for two seconds.
3. Open the window fully.
4. Release the switch, then push it to the open position and hold for two seconds.
5. Lift and release the switch to operate the one touch function.
6. Repeat the procedure on each window.

Window isolator



E81162

WARNING

If children are carried in the rear seats, the isolator switch should be used to prevent operation of the windows. If the windows are operated by young children there is a risk of serious injury or death.

To prevent operation of the rear windows, press the inhibitor switch. To allow passengers control of the windows, press the switch again.

EXTERIOR MIRRORS

Note: *Depending on the type of lens used, distances may be difficult to judge accurately when only using the mirrors.*

Proximity mirror (Japan only)




E83691

Rotate the mirror as required to give the best view of the areas in front of and beside the vehicle.

ELECTRIC EXTERIOR MIRRORS

Adjusting and folding

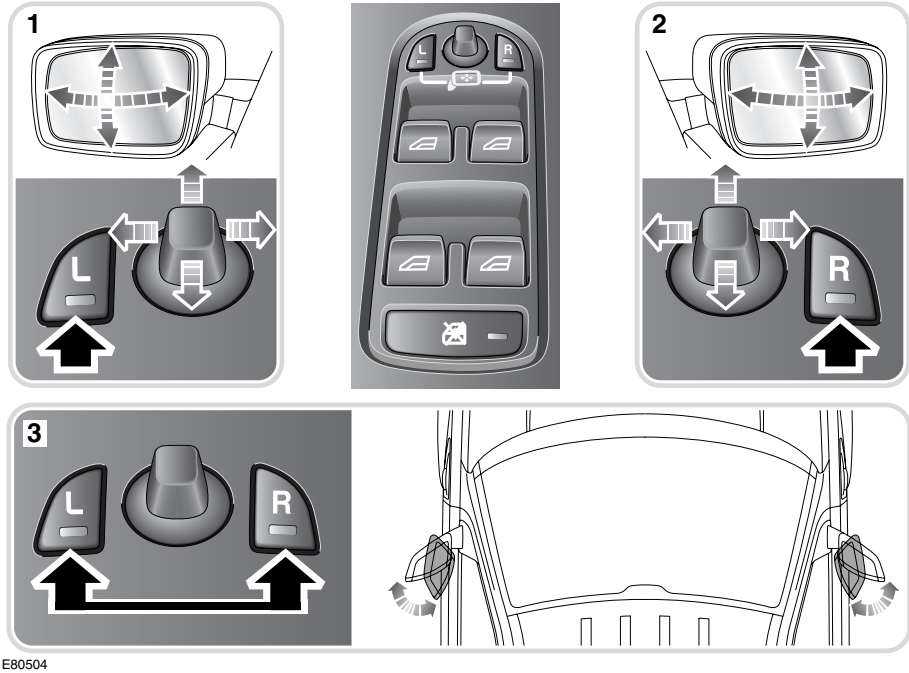

E80504

1. Left mirror adjustment.
2. Right mirror adjustment.
3. Powerfold.

Adjusting

1. Press the left or right mirror button as required. The green tell-tale light will illuminate in the button to indicate that it has been selected.
2. Move the toggle switch to adjust the mirror as required.

Folding

To fold the mirrors back press both left and right buttons at the same time. To unfold the mirrors, press both left and right buttons again.

Note: *If the mirrors are folded manually, or knocked into the folded position accidentally, the mirror head will be loose. To re-engage the mechanism, fold, then unfold the mirrors using the switches.*

The system is protected by a thermal cut-out which will temporarily disable the powerfold feature if the switches are operated repeatedly. If the cut-out operates when the mirrors are folded, they can be unfolded manually.

Powerfold will only operate if the vehicle is stationary, or travelling at 20 km/h (12 mph) or less.

Automatic folding



The mirrors can be configured by your land Rover Dealer/Authorised repairer to automatically fold when the vehicle is locked, and unfold when it is unlocked.

Note: *If the mirrors were folded using the switches, they will not unfold when the vehicle is unlocked.*

Mirror dip when reversing


When reverse gear is selected the driver and passenger door mirrors are automatically adjusted to provide an improved viewing angle for reversing.

The exact dipped position can be adjusted when the mirrors are dipped. The next time reverse is selected, the newly adjusted position will be selected.

When the gear selector is moved out of reverse, the mirrors will return to their previous position.

INTERIOR MIRROR

Auto dimming

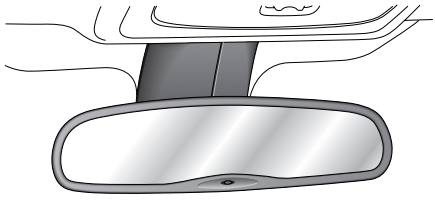


E80553

The interior mirror dimming is adjusted automatically according to the amount of ambient light when the ignition is on. If reverse gear is selected, the automatic dimming feature is turned off to allow maximum visibility for reversing.

Note: *If the mirror becomes detached from the windscreen it should be reattached by a Land Rover Dealer/Authorised Repairer.*

Note: *If the rear screen is obscured, or the light falling on the mirror is reduced by an obstruction, the automatic dimming feature may not operate correctly.*

Manual dimming

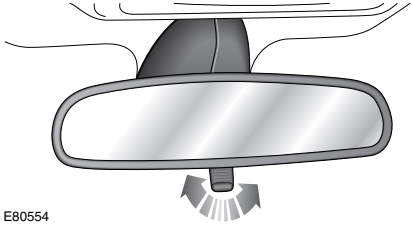

E80554

To dim the light levels reflected by the mirror, push the lever forward. To return it to normal light levels, pull the lever back.