
TYRE PRESSURES

Air pressure naturally increases in warm tyres; if it is necessary to check the tyres when they are warm (after the vehicle has been driven for a while), you should expect the pressures to have increased by up to 30 - 40 kPa (0.3 - 0.4 bar) (4 - 6 lbf/in²). In this circumstance, Do not let air out of the tyres in order to match the recommended cold tyre pressures. See **TYRE CARE** (page 243).

Tyre pressure labels

The correct tyre pressures are shown on a label attached to the driver's door

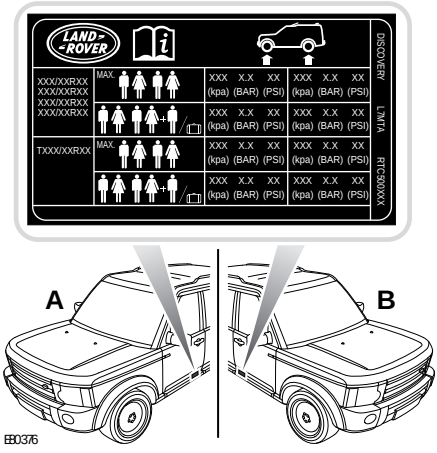

A. Left-hand drive vehicle

B. Right-hand drive vehicle

Temporary spare wheel

The tyre pressure in the temporary spare wheel/tyre should be maintained at 420 kPa (4.2 bar/60 lbf/in²) for all loading conditions.

ENGINE OIL SPECIFICATION

Variant	Specification
Diesel vehicles	SAE 5W-30 meeting specification WSS-M2C934-B only [1]
V6 Petrol vehicles	SAE 5W-30 meeting specification WSS-M2C913-C only [2]
V8 Petrol vehicles	SAE 5W-20 meeting specification WSS-M2C925-A only

[1] If you are unable to find an oil that meets the specification defined by WSS-M2C934-B, an SAE 5W-30 engine oil meeting specification ACEA:C1 can be used.

[2] If you are unable to find an oil that meets the specification defined by WSS-M2C913-C, an SAE 5W-30 engine oil meeting specification ACEA:A3/B3 can be used.

Land Rover recommends:

Castrol

ENGINE COOLANT SPECIFICATION

Top-up to the upper level indicator mark located above the **COLD FILL RANGE** text, on the side of the expansion tank. Use only a 50% mix of water and Castrol SF antifreeze. See **ENGINE COOLANT CHECK** (page 215).

Index

A

ABS driving hints 142
Accessories 11
Adaptive front lighting system (AFS) 80
  Cornering lamps 81
Adjusting the headlamps 80
  Headlamp beam adjustment 80
Adjusting the steering wheel 73
Adjusting the suspension 172
  Access height 173
  Access height from off-road height . . 173
  Additional lift whilst in extended mode 175
  Automatic height change warnings . . . 174
  Crawl mode (locked at Access height) 173
  Door open override 174
  Extended mode 175
  Remote operation 178
  Suspension freeze 175
  Suspension height indicators 172
Adjusting the windscreen washer jets 98
  Front 98
  Rear 98
AFS 80
Air conditioning 108
Air suspension
  Principle of operation 171
Air suspension messages 176
Air vents 105
  Intake air 106
  Third row seats vent 106
Airbag service information 65
Airbag warning lamp 64
Alarm
  Principle of operation 26
Alarm sensors 34
Answer telephone call 340, 346
Antifreeze 215
Arming 16
Arming the alarm 26
  Anti-theft alarm indicator 26
  Interior space protection 26
  Perimetric alarm 26
Ashtray 118
Audio controls 75, 310
Audio unit overview 286
  Standard audio system controls 286
  Touch screen audio system controls . . 287
Auto high beam 77
Automatic climate control 107
  General notes 110
  Operation of controls 108
Automatic transmission 132
  CommandShift™ 134
  Electronically selected automatic modes 135
  Kick-down in automatic mode 133
  Messages 136
  Selector lever positions 132
  Sport mode 134
Auxiliary connections 328
  Connecting a USB device 329
  Connecting an iPod 328
  Connecting more than one device 329
  Portable audio overview 328
Auxiliary heater 111
Auxiliary heating
  Remote operation 114
Auxiliary input (AUX IN) socket 332
  Auxiliary mode 333
Auxiliary input devices 330
  Displaying track information 330
  Playing a portable device 330
  Portable device settings 331
  Searching a portable device 331
Auxiliary power sockets 119
  Front auxiliary power socket 119
  Rear auxiliary power sockets 119

Index

B

Battery care 222
Check and replenish battery electrolyte 223
Battery charging 225
Battery warning symbols 222
Bi-Xenon headlamps 76
Bluetooth setup 345
Bluetooth operation. 345
Bonnet lock 206
Bonnet opening and closing 206
Booster cables. 223
Boosting from another vehicle 224
Boosting procedure. 224
Booster cushions. 72
Brake fluid check 216
Checking the fluid level 217
Topping up the fluid 217
Brakes
Principle of operation 140
Bulb changing 85
Front fog lamp 90
Headlamp 86
Headlamp - Halogen high beam 88
Headlamp - Halogen low beam 87
Headlamp - Xenon 87
Interior lamps 93
Rear fog lamp 92
Rear lamp 92
Side repeater lamp 91
Bulb specification chart 94

C

Call register. 349
Camera 147
Car wash. 200
Care of touch screen. 288
Catalytic converter 185
Centre console 121
Card holder. 121
CD storage 121
Changing a bulb 85
Bulb access 86
Courtesy lamp bulb 93
Front fog lamp bulb 90
Front indicator lamp bulb 89
Front sider lamp bulb 89
Headlamp bulb (Halogen). 87
Headlamp bulb (Halogen) low beam . . . 88
Headlamp bulb (Xenon) 87
Licence plate lamp bulb 92
Map lamp bulb 93
Rear lamp bulb. 92
Side repeater lamp bulb 91
Static bending bulb 88
Stepwell lamp bulb. 93
Tailgate lamp bulb 93
Vanity mirror lamp bulb 94
Changing a fuse 257
Changing a road wheel 230
Changing a wheel. 240
Raising the vehicle (Air suspension) . . 234
Raising the vehicle (Coil suspension). . 237
Spare wheel 232
Stowing the changed wheel 242
Using wheel chocks 234
Wheel changing safety 230
Changing the remote control battery 17
Changing the vehicle battery. 226
Battery disposal 227
Battery replacement 227
Changing the wiper blades 99
Front. 99
Rear 100
Channel automatic tuning 311

Index

Channel options 314
DAB search 315
Finding a channel 314
Finding a subchannel 314
Finding an ensemble 315
Charging the vehicle battery 225
Battery warning indicator 226
Effects of battery disconnection 227
Check engine 156
Checking the oil level 210, 211
Checking the wiper blades 99
Child safety locks 72
Child seat positioning 68
ISOFIX child seat positions 69
Recommended ISOFIX child seats 69
Child seats 66
Child restraint checklist 67
Seat belt automatic locking mechanism 67
Cigar lighter 118
Cleaning the alloy wheels 201
Cleaning the exterior 200
Cleaning after off-road driving 200
Glass and mirrors 201
Polishing 201
Removing tar spots 200
Underbody maintenance 201
Washing the vehicle 200
Cleaning the interior 201
Airbag module covers 202
Carpet and fabrics 202
Instrument pack, clock and audio unit 202
Leather 202
Plastic and cloth 202
Seat belts 202
Climate control 107
Rear passenger 111
Timed 112
Clock 290, 301
Coded keys 25
Compact disc pause 324
Compact disc play options 325
Compact disc player
CD compatibility 319, 322
Loading CDs 320, 323
Controls, radio 303
Controls, steering wheel 74
Cool box 122
Coolant 215, 356
Coolant check 215
Cruise control 75, 158
Increasing cruising speed 159
Principle of operation 158
Reducing cruising speed 159
Suspending cruise control 159
Cup holders 120
Curtain airbags 61

D

Dashboard 28
Date and time 290
Daytime running lamps 76
Detachable tow ball 197
Fitting the tow ball 197
Removing the tow ball 198
Dialling 346
Dialling from the phone book 348
Diesel Particulate Filter (DPF) 157
Digital audio broadcasting
General information 308
Dipstick - electronic 212, 213
Direction indicators 82
Disabling the passenger airbag 62
Airbag switched OFF 63
Airbag switched ON 64
Passenger airbag status indicator 63
Disarming 15
Display options 312
DAB radio text 312
Touch-screen information panel 312
Display settings 290
Drive away locking 34
Driving after a collision 263
Before starting or driving 263
When driving 263

E

Economical driving 156
Driving tips for fuel economy 156
Maintenance and fuel economy. 156
Ejecting compact discs 320, 323
Electric exterior mirrors. 102
Folding the mirror body 103
Mirror glass adjustment 102
Reverse mirror dipping 103
Electric parking brake (EPB) 143
Applying the electric parking brake . . . 143
Dynamic operation 144
Messages 146
Releasing the electric parking brake . . 144
Electric seats 42
Folding armrest. 43
Electric sunroof 115
Anti-trap mechanism. 115
Sunroof calibration 116
Electric windows 101
Anti-trap mechanism. 101
One touch operation 101
Operating the windows 101
Rear window isolation switch 102
Rear window operation 102
Emergency key blade. 17, 21
Ending a telephone call 340, 346
Engine compartment overview 207, 208
Engine coolant check. 215
Checking the coolant level. 215
Topping up the coolant 215
Engine immobiliser
Principle of operation 25
Engine number 269
Engine oil. 209
Engine oil check 210, 211, 213
Checking the oil level 210, 212
Engine oil consumption 211, 213
Engine oil specification 209, 356
Topping up the oil. 210, 212
Engine systems fault 156
EPB 143
Essential towing checks 195
Event data recording 10
Exterior mirrors. 102

F

Facia overview 28
Fastening the seat belts 56
Releasing the belt. 56
Filling station information
Engine coolant specification. 356
Fuel filler flap 355
Refuelling. 355
Tyre pressures 356
Fog lamps
Front. 79
Rear 79
Folding the seats. 47, 51
Front fog lamps 79
Fuel
Petrol fuel guard. 183
Fuel burning heater. 111
Fuel consumption 186
Fuel consumption figures. 186
Fuel cut-off 185
Resetting the fuel cut-off system . 185, 263
Fuel filler flap 182, 355
Fuel guard. 183
Fuel quality 179
Alternative fuels for petrol engines. . . . 180
Diesel engined vehicles 181
Petrol engined vehicles 180
Fuel specification 355
Fuse box locations 256
Engine compartment fuse box 256
Passenger compartment fuse box 257
Fuse specification chart 258
Engine compartment fuse box 258
Passenger compartment fuse box 260

Index

G

Gauges 37
Fuel gauge 37
Tachometer 37
Temperature gauge 37
Gear changing 195
Gear selection 134
General driving points 154
Breakdown safety 155
Extreme driving conditions 154
Vehicle stability 154
Wading 154
General information on radio frequencies . 13

H

Handset 14
Battery 17
Key blade 17
Hazard warning flashers 79
HDC 163
Hill Descent Control faults 165
Hill Descent Control in action 164
Messages 165
Head restraints 45
Front head restraints 45
Rear head restraints 46
Headlamp adjustment 80
Headlamp bulb 85
Headlamp delay 34
Headlamp power wash 98
Headlamp washers 98
Headlamps
High and low beams 77
Headphones 327
Heated mirrors 110
Heated seats 52
Heated steering wheel 74
Heated windows and mirrors 110
Exterior mirrors 110
High beam assist 34
Hill descent control 163
Hill descent control (HDC)
Principle of operation 163
Hints on driving with ABS 142
ABS and off-road driving 142
ABS warning indicator 142
Cornering Brake Control (CBC) 143
Electronic Brake Distribution (EBD) . . . 143
Emergency Brake Assist (EBA) 143
HomeLink® 124
Accessories 126
Compliance 126
Erasing channels 126
Operation 125
Precautions 124
Programming 125
Rolling codes 126
Horn 75

I

Ignition 129
Information messages 30
Critical warning messages 30
Gear selector display 32
Information messages 30
Service interval indicator 32
Warnings messages 30
Inspecting safety system components . . . 264
Instrument lighting dimmer 117
Instrument panel overview 36
Interior lamps
Front interior lamps 82
Rear interior lamps 82
Interior mirror 104
Automatic dimming mirror 104
Manual mirror 104
iPod connection 328
ISOFIX anchor points 70
Tether strap anchorages 71

J

Jacking points 234, 237
Jump starting 223

K

Keyless entry 23
Smart Key check 23
Keyless locking 24
Steering column lock 24
Keyless starting 130
Backup procedure 131
If the engine fails to start 130
Keys
Emergency key blade 17, 21
Keys and remote controls
Principle of operation 13

L

Lamps interior 82
Lamps master switch 77
Language settings 289
Lashing points 267
Last dialled numbers menu 349
Last number redial 346
Levelling 194
Licence plate lamp bulb 92
Lighting
General information 76
Lighting control 77
Automatic control lamps 78
Headlamp courtesy delay 78
High and low beam headlamps 77
Side lamps 77
Load carrying
General information 187
Loading compact discs 320, 323
Loading a CD (player empty) 323
Locking 16
Locking and unlocking 19
Automatic unlocking 19
Interior door handles and door locking levers 19
Master lock and unlock switches 19
Mislock 16
Opening the tailgate 20
Speed-related locking 19
Using the emergency key blade 21
Valet mode 291
Low line audio
Radio controls 296
Tone adjustment 297
Luggage anchor points 187
Luggage covers 188
Operating the luggage cover 188
Removal and refitting of luggage cover 189

M

Maintenance
General information 204
Technical specifications 220
Manual seats 41
Manual transmission 132
Memory function 44
Entry and Exit mode 44
Recalling a stored memory position 44
Saving a memory position 44
Messages
Information 30
Mirror
Interior 104
Mirrors
Exterior 102
Mirrors heated 110
Missed calls 349

N

News information 307
Notepad commands 336

O

Oil check 210, 211, 213
Oil level check 212, 213
Opening and closing the bonnet 206
Closing the bonnet 206
Opening the bonnet 206

P

Paint damage 203
Parking aid 152
  Front parking aid - manual operation . 153
  Principle of operation 152
  System fault 153
  Towing 153
Passenger airbag disable 62
Personalised settings 33, 289
Petrol fuel guard 183
Phone book 347
  Dialling 348
  Display 347
  Scroll 348
  Search 348
Phone controls 343
Phone display 344
Phonebook
  Phonebook 348
Portable audio interface 328
Portable devices 330
Power steering fluid check 218
  Checking the fluid level 218
  Topping up the fluid 218
Power wash headlamp 98
Preset buttons 313
  Recalling a preset channel 313
  Storing channels as presets 313
Principle of operation
  Access height 171
  Battery-backed sounder 26
  Crawl mode 172
  Extended mode 171
  Foot brake 140
  High speed height 172
  Messages 141
  Off-road height 171
  Operation 171
  Vehicle security 26
Priority programme type (PTY) 307
Proximity cameras 148

R

Radio controls 303
Radio data system (RDS) 299, 305
Radio operation
  Band selection 297, 304
  manual tuning 298, 304
  Presets 298, 304
  Seeking stations 304
  seeking stations 298
  Selecting preset stations 298, 304
  station auto store 304
Radio reception 295, 302
Rain sensor 96
RDS
  Information broadcasts 306
  news information 307
  selecting traffic information 299, 306
Rear fog lamps 79
Rear lamps 85
Rear loadspace hatches 187
Rear passenger climate controls 111
Rear seat audio controls 326
Rear seats 46
  Second row seats - 7-seat vehicle 48
  Second-row seats - 5-seat vehicle 47
  Third-row seats 50
Rear view camera system 147
  principle of operation 147
Rear window wiper and washers 97
  Reversing 98
  Tailgate open disable 98
  Washer 97
  Wiper - continuous operation 97
  Wiper - intermittent operation 97
Recommended towing weights 196
  Towing weights - Australia only 196
Reduced engine performance 156
Refitting the vehicle battery 227
Refuelling 183, 355
Rejecting telephone call 340, 346

Index

Remote control 14
Approach lighting 14
Care of the Smart Key 15
Emergency key blade 17
Irregular operation 15
Locking and arming the vehicle 16
Luggage compartment 14
Panic button 15
Smart Key 14
Smart Key system transmitters 22
Unlocking and disarming the vehicle . . 15
Remote control battery 17
Removing a headlamp 83
Refitting the grille 84
Refitting the headlamp 84
Removing the grille 83
Removing the headlamp 83
Removing a rear lamp 85
Repairing minor paint damage 203
Repeat compact disc tracks 320, 325
Restricted performance 156
Reverse camera 148
Road wheel changing 230
Running out of fuel 184
Running-in 155

S

Safety 9
Safety locks 72
Safety precautions 179
Scratchpad 348
Screen settings 290
Seat belt height adjustment 56
Seat belt reminder 55
Seat belts
General information 53
Seat belts during pregnancy 57
Seats
Electric 42
Folding 47, 51
Heated 52
Seats, manual 41
Service interval indicator 32
Settings 33, 316
Announcements 316
Audible feedback 290
audio system 289
Clock 290
clock 301
DAB country 317
DAB format 318
Date 290
date 301
Display language 289
link DAB 316
Time and date 290
time and date 301
voice language 292
Shuffle/random 320, 325
Side airbags 61
Sitting in the correct position 40
Smart Key 14
Replacement 13
Smart Key system transmitters 22
Snow chains 249
Spare wheel 232
Temporary 241, 356
Speed warning 34
Sport mode 134
Stability control 160
Deactivating DSC 160
Principle of operation 160
Reactivating DSC 160
Starting the engine
General information 129
Warming-up 130
Steering column lock 24
Steering wheel adjustment 73
Steering wheel controls 74
Steering wheel heating 74
Stopping the engine 131
Storage compartments 123
Sun blinds 117
Sun visors 117
Sunroof 115
Supplementary restraints system
Principle of operation 58

Index

Surround camera system 148
Principle of operation 148
Suspension 171
Switching off the alarm 27
Switching off the engine 131

T

Tailgate 20
Technical specifications
Adjustments 221
Capacities 221
Dimensions - Air suspension vehicles 272
Dimensions - Coil spring suspension vehicles 274
Lubricants and fluids 220
Technical specifications 270
V6 Diesel. 270
V6 Petrol. 270
V8 Petrol. 271
Weights 271
Telephone 346
Answer incoming call 340, 346
Call register. 349
Call register menu. 349
correcting/clearing number entries. . . 346
Dialling 346
Dialling from the phone book 348
End call. 340, 346
General information 337, 341
Information display. 344
Last dialled numbers menu. 349
Last number redial 346
Missed calls 349
missed calls 349
Phone book display 347
phone book scroll. 348
Phone book search. 348
received calls menu 349
Rejecting incoming call. 340, 346
Scratchpad 348
Storing voice names via touchscreen . 352
Telephone controls 343
Facia 343
Steering wheel 338, 344
Telephone display 344
Telephone voice control 350
Correcting/Deleting and Cancelling inputs 351
Deleting/Clearing the entire phone book 354
Dialling a phone number 351
Dialling/Editing and Deleting from the phone book 354
General commands 350
Storing a telephone name/number. . . . 352
Telephone voice control. 350
Using the voice control phone book. . . 353
Temperature controls. 108
Temperature display. 34
Temporary spare wheel 241, 356
Terrain response 166
Driver override options 169
General. 167
Grass-Gravel-Snow 167
Inappropriate program selection 169
Increased suspension height 168
Messages. 170
Mud-Ruts. 168
Principle of operation. 166
Rock crawl. 168
Sand. 168
Wading. 168
Tilt sensor 27
Time and date. 290
Tone adjustment. 294
Balance and fade 294
Bass, treble and sub-woofer 294
bass, treble and sub-woofer. 294
LOGIC7 294
Source memory 294
Tool kit 229
5-seat vehicles 229
7-seat vehicles 229
Touch screen care 288
Tow ball
Fitting. 197
Removing. 198
Stowage. 199

Index

Towing a trailer 190
Fixed - tow ball 192
Multi-height drop plate - tow bar 193
Trailer socket 190
Towing points 265
Front towing point. 265
Rear towing point 266
Towing the vehicle on four wheels 268
After towing on four wheels 268
Towing weights 196
TPM load setting 34
Track selection 324
Traction control
Principle of operation 162
Traffic information. 299
Transfer gearbox 137
HIGH range (Hi) 137
LOW range (Lo) 137
Messages 139
Range changing 137
Range changing on the move 138
Stationary range changing 138
Transmitter - HomeLink® 124
Transmitters 22
Transporting the vehicle 267
Trip computer 31, 34
Type approvals 276
Tyre care 243
Age degradation 244
Checking tyre pressures 247
Directional tyres 246
Flat spots 248
High performance wheel and tyre combinations 245
Long term storage 248
Pressure compensation for ambient temperature changes 248
Punctured tyres. 244
Replacement tyres 245
Tyre pressures 246
Tyre wear 243
Wear indicator. 244
Tyre glossary
Terms used 254
Tyre pressure monitoring system 250
Messages 253
TPM system operation 250
Tyre pressures 356

U

Under bonnet covers 209
Fitting 209
Removal 209
Unlocking 15
USB devices 329
Using winter tyres
Approved winter tyres 249

V

Valet mode 291
Vehicle build plate. 269
Vehicle identification number (VIN) 269
Vents 105
VIN 269
Voice control. 75, 334
Activating the system 334
Command help 335
Language and accent 334
Notepad 336
Using the system 334
Voice commands 336
Voice help 292
Voice recognition
Storing via touchscreen 352
Voice settings 292
Volume adjustment. 293
Automatic volume control (AVC) 293
Information announcements 293
Manual 294, 297
navigation guidance 293
Telephone. 293
Voice 294

W

Warning indicators 38
Warning symbols
Battery 222
Washer fluid check 219
Washer jets 98
Washing 200
Waveband selection 297, 304
Wheels and tyres
General information 228
Windows 18
Electric 101
Windscreen
Heated 110
Windscreen washer jets 98
Windscreen washers 97
Windscreen wipers 95
Intermittent variable delay 95
Speed dependent intermittent mode . . . 96
Speed dependent mode 95
Winter tyres 248
Wiper blades
Changing 99