
Note: *Tire condition should be checked after the vehicle has been used off-road. As soon as the vehicle returns to a normal, hard, road surface, stop and check for tire damage.*

All of the vehicle's tires (including the spare) should be checked regularly for damage, wear and distortion. If you are in any doubt about the condition of a tire, have it checked immediately by a tire repair center or your Land Rover Retailer/Authorized Repairer.

TIRE PRESSURE LABEL (USA only)

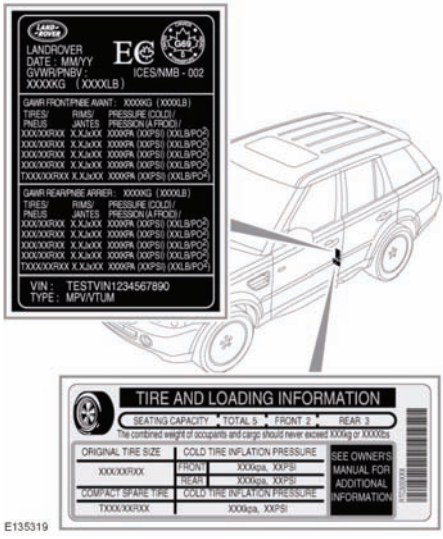

E135319

The recommended tire pressures are listed on a label located in the driver's door opening.

These pressures provide optimum ride and handling characteristics for all normal operating conditions.

The label contains the following information:

- The maximum number of occupants, divided between the front and rear of the vehicle.
- The vehicle capacity weight, which includes the weight of the driver, passengers and cargo.
- Cold inflation pressures for the front, rear and spare tires.
- The size of the tires with which the vehicle was originally equipped.

Note: *The label must not be changed, even if different wheels are fitted at a later stage.*

TIRE PRESSURES

⚠WARNING

Never drive your vehicle if the tire pressures are incorrect. Under-inflation causes excessive flexing and uneven tire wear. This can lead to sudden tire failure. Over-inflation causes harsh ride, uneven tire wear and poor handling.

⚠WARNING

Pressure checks should only be carried out when the tires are cold, and the vehicle has been stationary for more than three hours. A hot tire at or below recommended cold inflation pressure, is dangerously under-inflated.

⚠WARNING

Under-inflation also reduces fuel efficiency and tire tread life and may affect the vehicle's handling and stopping ability.