
STANDARD AUDIO CONTROLS

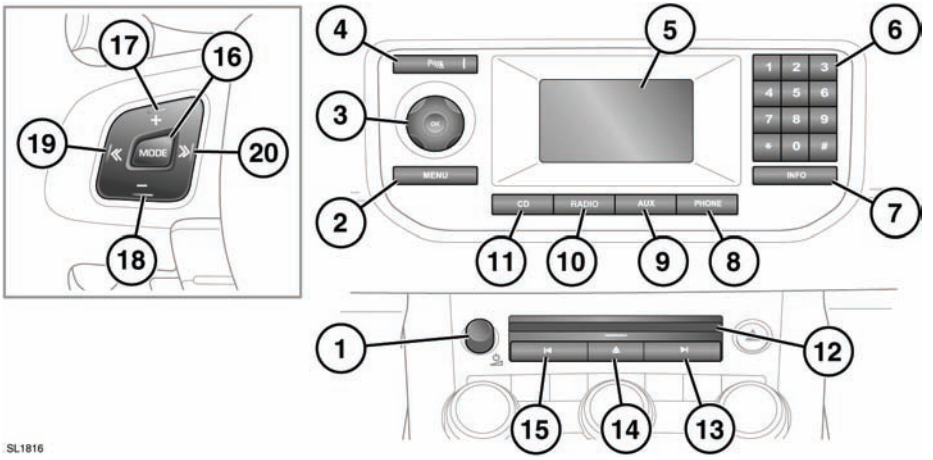

Sustained exposure to high sound levels can damage your hearing.

1. Press to switch on/off.

   Note: *The radio will switch off automatically after approximately 10 minutes if the ignition is turned off.*

   Rotate to adjust volume level.

   Note: *The maximum volume level will be restricted if the audio unit is used with the engine switched off.*

2. **MENU** button:
   - Audio settings
   - Clock settings
   - Language
3. **OK** and navigation menu control.

   Use the navigation control to move to any menu cursor/highlight. When the required option is highlighted, press the **OK** button to select.
4. Parking aid.
5. Audio Information display.
6. Keypad.
7. **INFO**. Traffic/News information.
8. **PHONE** menu.
9. **AUX** input select.
10. **RADIO**. Waveband select (FM, FMAST, AM, AMAST).

    When DAB is fitted, select for DAB1 or DAB2.
11. **CD** menu.
12. CD loading slot.
13. Seek up:
    - Short press:
      - to select the next radio station upward in frequency or,
      - to select the next track on chosen audio source.
    - Long press:
      - to enter radio manual seek mode or,
      - to scan forward through a CD track.

      In radio manual seek mode further short presses will change the frequency in single steps.