
STANDARD RADIO CONTROLS

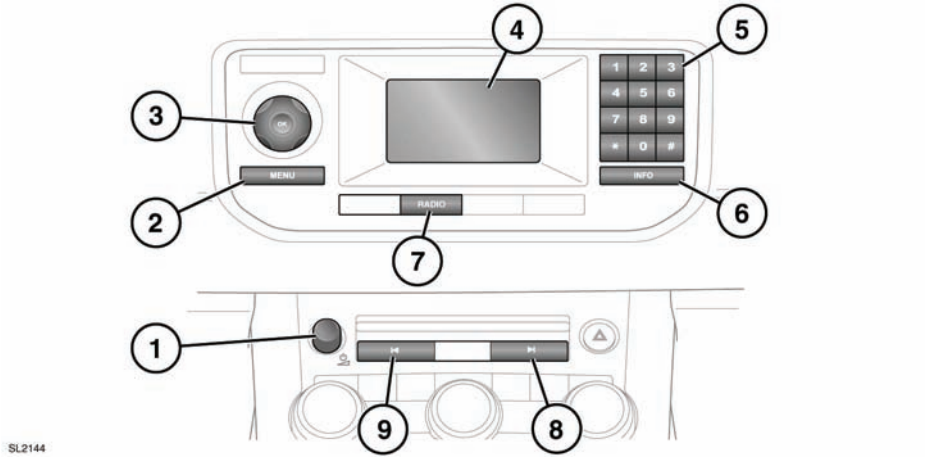

See **164, STANDARD AUDIO CONTROLS**.

1. Press to switch on/off.

   Note: *The radio will switch off automatically after approximately 10 minutes if the ignition is turned off.*

   Rotate to adjust volume level.

   Note: *The maximum volume level will be restricted if the audio unit is used with the engine switched off.*

2. **MENU** button:
   - Audio settings
   - Clock settings
   - Language

3. **OK** and navigation menu control.

   Use the navigation control to move to any menu cursor/highlight. When the required option is highlighted, press the **OK** button to select.

4. Audio Information display.

5. Keypad.

6. **INFO**. Traffic/News information.

7. **RADIO**. Waveband select (FM, FMAST, AM, AMAST).

   When DAB is fitted, select for DAB1 or DAB2.

8. Seek up:
   - Short press:
     - to select the next radio station upward in frequency.
   - Long press:
     - to enter radio manual seek mode. In radio manual seek mode further short presses will change the frequency in single steps.

9. Seek down:
   - Short press:
     - to select the next radio station downward in frequency.
   - Long press:
     - to enter radio manual seek mode. In radio manual seek mode further short presses will change the frequency in single steps.