
DAB RADIO CONTROLS

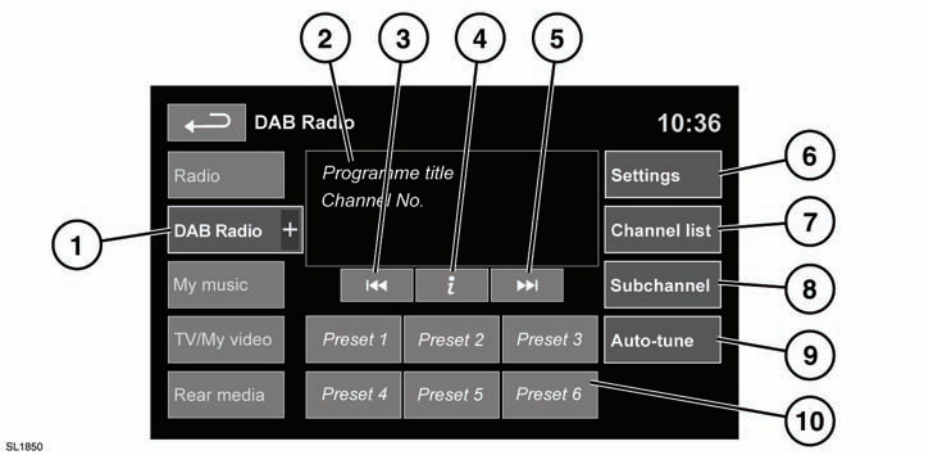

See **108, TOUCH SCREEN HOME MENU**.

1. **DAB Radio**: Band selection. Touch to view and select a DAB band (**DAB 1**, **2** or **3**). The radio will tune to the last used channel on that band. Touch again to close.

   The DAB band selection box will close automatically after 5 seconds without use.

2. Display showing the current channel, the associated Ensemble and relevant DAB radio text.

3. Seek down:
   - Short touch to seek previous available channel.
   - Long touch to seek previous available Ensemble. The first channel in the new Ensemble will be selected.

4. Channel information: Touch to view DAB text and channel information.

5. Seek up:
   - Short touch to find the next available channel.
   - Long touch to find the next available Ensemble. The first channel in the new Ensemble will be selected.

6. **Settings**: Select to view the DAB Settings menu:
   - **Options**: To activate/deactivate FM Traffic and Link DAB and to alter DAB country and DAB format settings (with vehicle stationary).
   - **Announcements**: Select an alarm announcement and up to 3 other announcement types (traffic, news etc.) from the list. The selected announcements will interrupt the current programme when broadcast.

7. **Channel list**: Touch to view a list of available Ensembles and channels. The list can be sorted by **Ensemble**, **Channel**, **Subchannel** or by **Category**.
   - If an **Ensemble** is selected from the list, all available channels from that ensemble will be displayed.