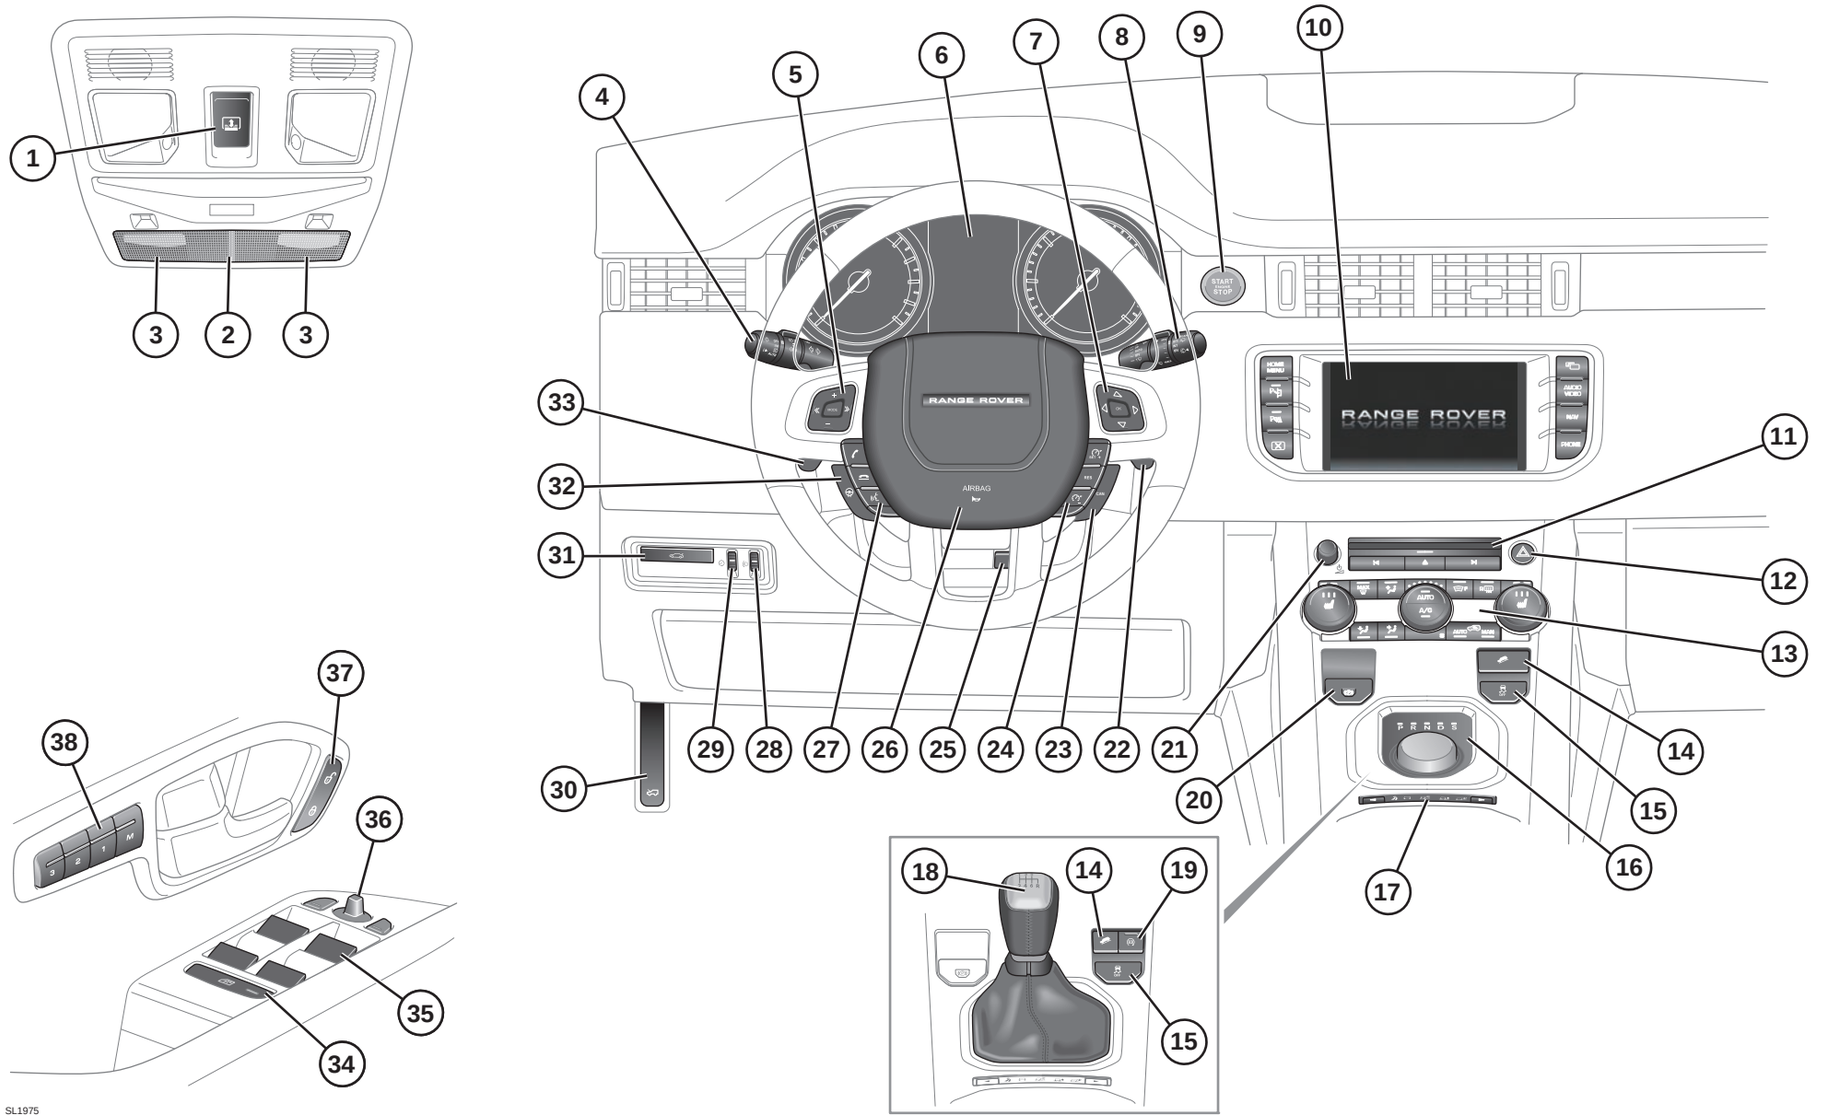
CONTROLS

For further information on the numbered item, refer to the page number in brackets.

1. Roof blind switch **(49)**.
2. Front interior courtesy lamp**(44)**.
3. Front map/reading lamps **(44)**.
4. Exterior lights/trip computer control **(40)** and **(61)**.
5. Audio system control **(112)** and **(164)**.
6. Instrument panel and message centre **(59)**.
7. Instrument panel menu control **(59)**.
8. Wipers and washers control **(46)**.
9. START/STOP button **(80)**.
10. Touch screen display **(108)**.
11. Audio system **(112)** and **(164)**.
12. Hazard warning lights switch.
13. Heater/Air conditioning **(66)**.
14. Hill Descent Control (HDC) switch **(98)**.
15. Dynamic Stability Control (DSC) switch **(92)**.
16. Automatic transmission drive selector **(84)**.
17. Terrain response **(95)**.
18. Manual transmission gear lever **(86)**.
19. ECO switch **(82)**.
20. Electric parking brake **(88)**.
21. Audio on/off/volume switch **(112)** and **(164)**.
22. Upshift gear paddle **(84)**.
23. Cruise control cancel switch **(90)**.
24. Cruise control switches **(90)**.
25. Steering column adjustment lever **(39)**.
26. Horn.
27. Telephone and voice control switches **(144)** and **(166)**.
28. Headlamp levelling control **(42)**.
29. Interior illumination control.
30. Bonnet release lever.
31. Tailgate release/open switch.
32. Heated steering wheel switch **(39)**.
33. Downshift gear paddle **(85)**.
34. Rear window isolator switch.
35. Window switches **(49)**.
36. Mirror adjustment/power folding switches **(51)**.
37. Central locking/unlocking switches.
38. Driving position memory switches **(20)**.


1
3
2
3
4
5
6
7
8
9
10
RANGE ROVER
AIRBAG
START
STOP
RANGE ROVER
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
37
38
36
35
34
SL1975