
CLIMATE CONTROL

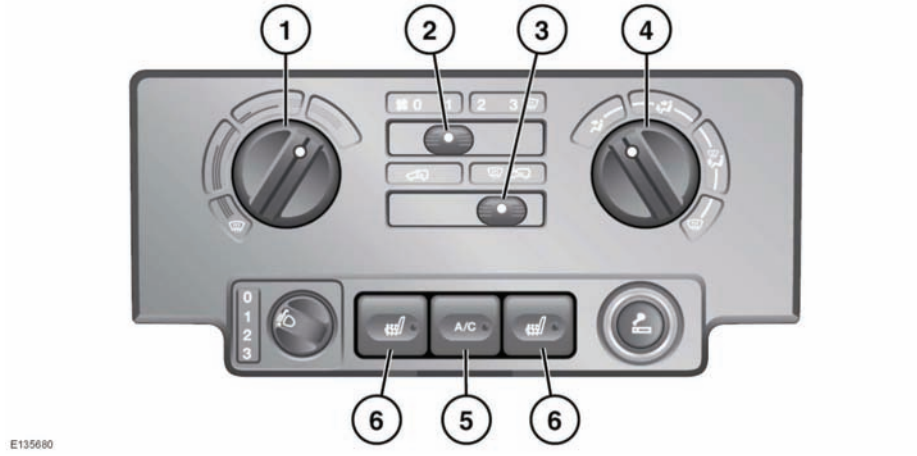

1. Temperature control; rotate to adjust.
2. Blower speed; slide to adjust air flow speed through the vents.
3. Recirculation; slide for recirculated or fresh air. Recirculation helps to maintain a high or low temperature and is useful for preventing fumes from entering the vehicle.
4. Air distribution; rotate to direct air flow.
5. Press to switch A/C on/off. The switch indicator will illuminate when switched on.


   Note: *The blower will switch on automatically if A/C is selected when the blower is set to 0.*

   Note: *If interior temperature is higher than exterior temperature, before operating A/C, fully ventilate the vehicle by using the blower control, windows and sunroof.*

   Note: *During A/C operation, puddles may form under the vehicle. This is normal and does not indicate a fault with the system.*
6. Seat heaters; press to switch on/off.

To prevent battery discharge, seat heaters should be operated only while the engine is running.

HEATED SEATS

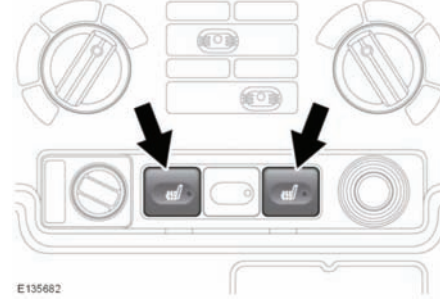

Note: *To prevent the battery from becoming discharged the seat heaters should be operated only when the engine is running.*

With the starter switch at position **II**, press the appropriate switch to activate a seat heater. The seat heaters will maintain a factory set temperature. There are indicators in each switch.

Press again to turn off.