
TELEPHONE SYSTEM OVERVIEW

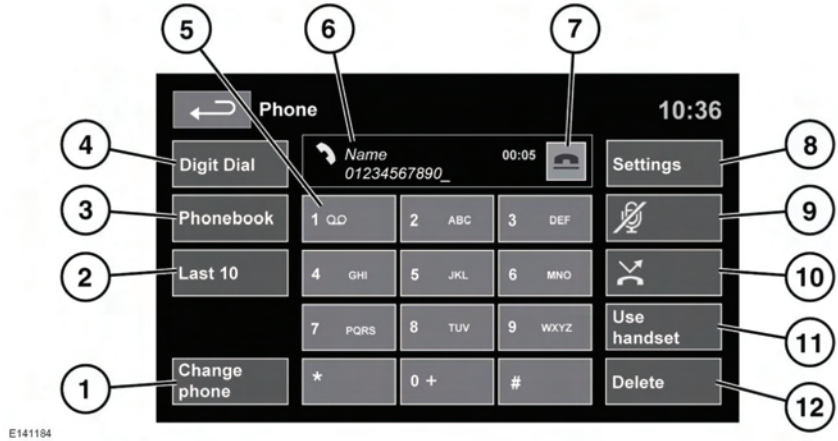

1. **Change phone.** Search new or change to another paired phone.
2. **Last 10.** Access the last 10 dialled, received and missed calls.
3. **Phonebook.** Access the downloaded phonebook.
4. **Digit Dial.** Access Digit Dial mode.
5. Touch and hold to retrieve your Voice mail.
6. Status display: Displays the name and/or number dialled and call duration.
7. Call Connect/Disconnect icons. Touch to send/accept or end/reject a call.
8. **Settings.** Access Voice mail set up, Answer options and Phone options.
9. **Mute microphone.** Initiate Privacy mode. While selected, the caller will not hear you talking.
10. Auto reject. When active, any incoming calls will be rejected or diverted to voice mail (depending on mobile phone settings).
11. **Use handset.** Switch the call to your mobile phone.
12. **Delete.** Touch to delete the last entered digit, and hold to delete the whole entered number.

BLUETOOTH® INFORMATION



Bluetooth® is the name for short-range radio frequency (RF) technology that allows electronic devices to communicate wirelessly with each other.

The Land Rover Bluetooth® system supports Bluetooth® Hands-Free Profile (HFP), Advanced Audio Distribution Profile (A2DP) and Audio Video Remote Control Profile (AVRCP).

Note: *HFP and A2DP/AVRCP profiles can be connected independently, so a phone can be connected via one, while a media device can be connected via the other, at the same time.*