
***Note:*** *A range of approved luggage retention accessories are available from your Dealer/ Authorised Repairer.*

## LOADSPACE FLOOR

⚠ **When removing or replacing the loadspace floor, take care to avoid getting your hands or fingers trapped between the floor panel and the vehicle.**

⚠ **When removing or replacing the loadspace floor make sure children and pets are kept at a safe distance to avoid injury.**

The loadspace floor is reversible to allow for a choice of carpeted or hard surfaces to be made.

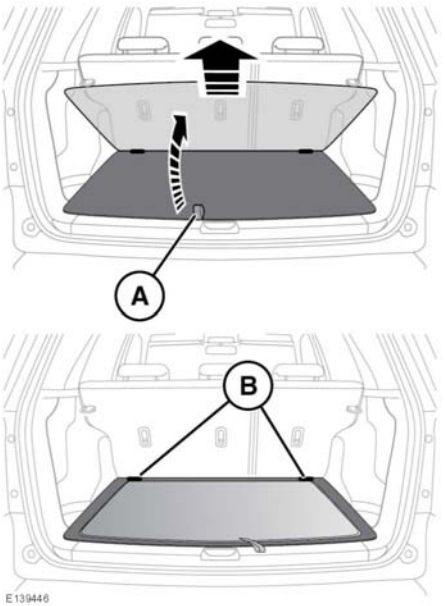


To reverse the loadspace floor:

1. Using the finger loop (**A**), raise the floor panel.
2. Pull the panel towards the rear of the vehicle, to release it from the retaining channels (**B**).
3. Reverse the floor, relocate in the retaining channels (**B**) and lower into position.