
OPENING AND CLOSING THE POWERED TAILGATE

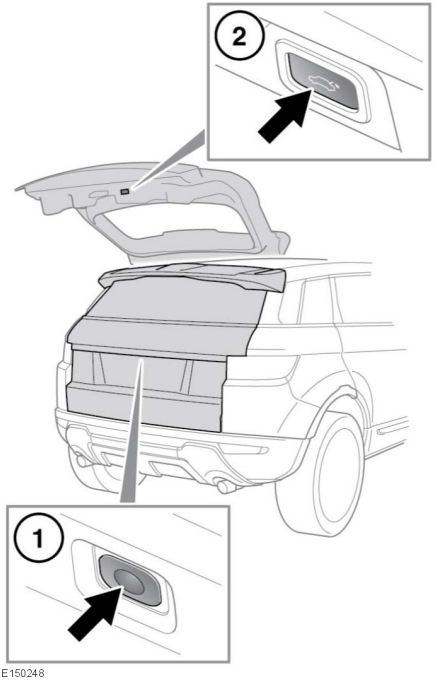

E150248

1. Press to open the powered tailgate.
2. Press to close the powered tailgate.

After the tailgate has opened to its set height, it can be manually raised or lowered. If the tailgate fails to open or close correctly, close it manually then press the tailgate release button again.

As the closing tailgate reaches its lowest position, it will 'soft close' to the fully closed position. If the vehicle was previously locked and armed, the hazard warning lamps will flash to confirm that the vehicle has locked and rearmed to the previous locked and armed state. An audible warning may also sound as confirmation.

Note: *If a tailgate button is pressed while the tailgate is opening or closing, all movement will stop. However, if a button is pressed during the 'soft close' stage, the open request will be ignored.*

Before operating the tailgate, make sure anyone in the vicinity does not have any part of their body in a position where it could be trapped. Note that the 'soft close' action does not incorporate object detection. Death or serious injury could occur, even with an object detection system.

Object detection while opening: If an object is detected that would interfere with the tailgate opening, tailgate movement will stop. Remove any obstructions and press the tailgate button again to open.

Object detection while closing: If an object is detected that would interfere with the tailgate closing, tailgate movement will stop and then reverse to the fully open position. An audible warning will be given to indicate a mislock. Remove any obstructions and press the tailgate close button again to close.

TAILGATE OPENING HEIGHT

The maximum opening height can be set as required. This is useful in parking areas with low ceiling heights or just for ease of use.

1. Open the tailgate to the position which you want to set as the maximum height. Press any tailgate control to stop movement at the required position. Final position can be achieved manually if required.
2. Make sure the tailgate is stationary for at least 3 seconds.
3. Press and hold the tailgate close switch for 10 seconds to set the maximum opening height.