
FLUID FILLER LOCATIONS

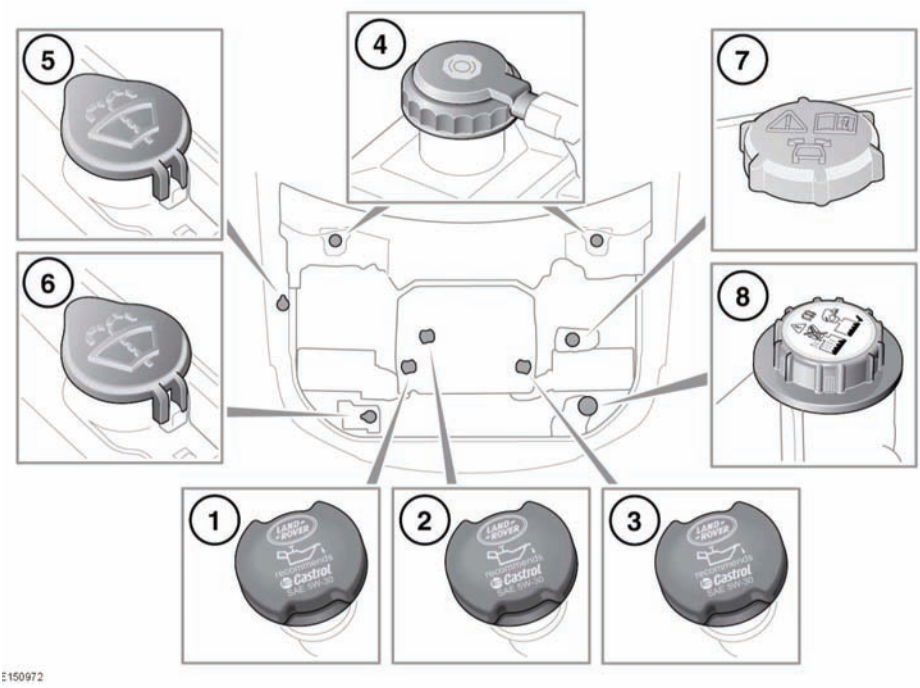

1. Engine oil filler cap (4.4L diesel).
2. Engine oil filler cap (3.0L diesel).
3. Engine oil filler cap (5.0L and 3.0L petrol).
4. Brake fluid reservoir cap.

   Note: *The brake fluid reservoir cap is always located on the driver's side of the vehicle.*
5. Windscreen washer fluid filler cap (all vehicles).
6. Windscreen washer fluid filler cap (cold climate vehicles only).
7. Dynamic response fluid reservoir cap.
8. Engine coolant filler cap.

⚠ **Do not drive the vehicle if there is a possibility that leaked fluid will come into contact with a hot surface, such as the exhaust.**