
2. Grasp the top and bottom of the seatback, lift the seat and return it to the table fold position.
3. Pull the release lever (**1**) forwards.
4. Pull the seatback up and push into place. When fully home, the latching mechanism will click.

Note: *The head restraints should be raised to the correct position before the seats are used by a passenger.*

ACCESS POSITION (7 seat vehicle)

The vehicle must not be driven with the rear seats in the access position. Motion of the vehicle could cause the seatback to fall forwards suddenly, causing injury.

To access the third row of seats by this method, the head restraint on the second row seat must first be fully lowered.

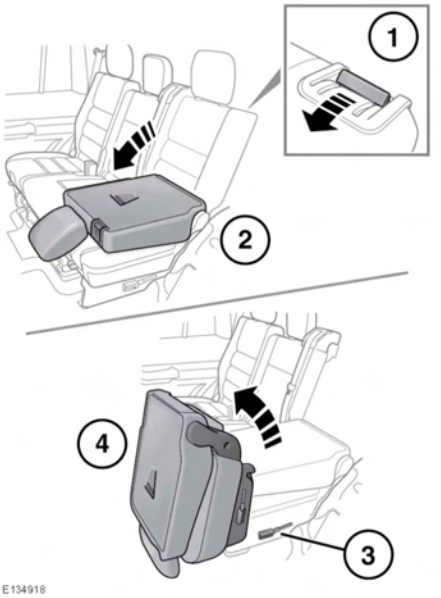

1. Pull the seatback release lever forwards.
2. Lower the seatback into the table fold position.
3. Pull the access lever on the side of the seat.
4. Tilt the seat forwards.

To return the seat to the upright position, lower the seat until the access lever re-engages, then pull the seatback release lever and return the seatback to the upright position.

Note: *A second row seat cannot be moved directly from the loadspace position to the access position. The seatback must first be returned to the table fold position.*

When returning the seat from the access position, make sure nothing is trapped beneath the returning seat.

The seat position should be checked and physically tested to make sure that the cushions and seatbacks are secure, before driving. If the seatbacks are not fully locked in place, red markers will be visible around the seatback release levers.

THIRD ROW SEATS (7 seat vehicle)

Make sure nothing has been left under the third row seats, or in the footwell, when folding down the seat, as this could cause damage to the item or the seat.

Beware of trapping fingers when raising and lowering the third row seats.

Do not attempt to raise the third row seats when the loadspace cover is stowed behind the second row seats. Damage to the loadspace cover or the seats may result.

It is possible to fold the third row seats flat.