
AIRBAGS

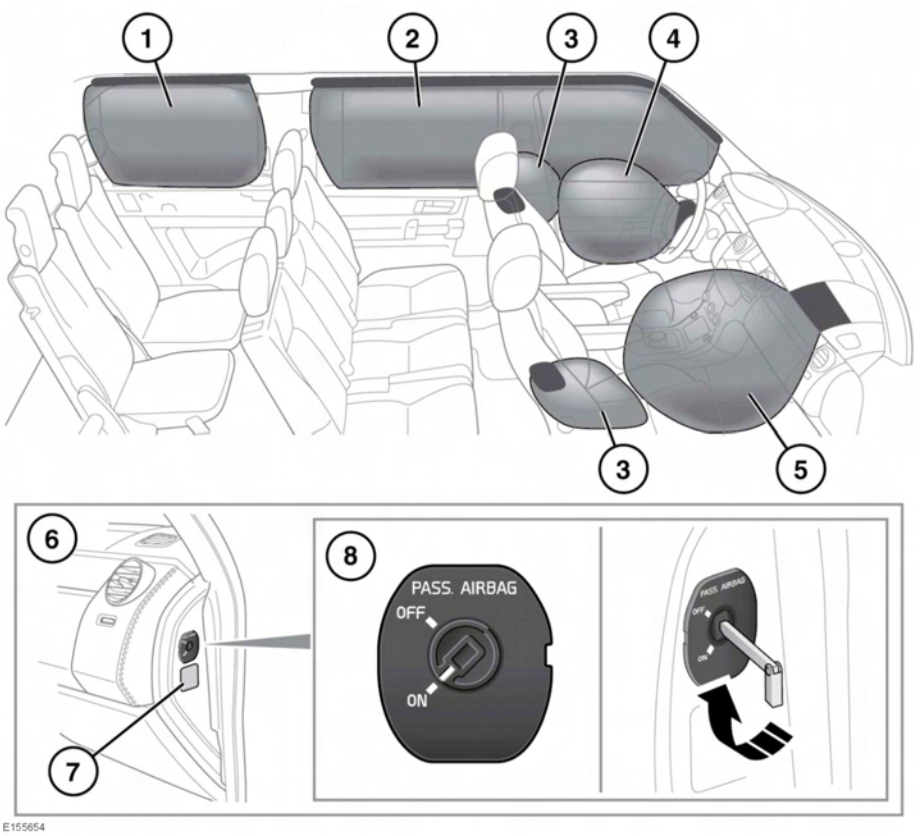

1. 3rd row seats, curtain airbag.
2. Main curtain airbag.
3. Side airbags.
4. Driver's front and side airbags.
5. Passenger front and side airbags.
6. Passenger airbag disable switch location, see **37, DISABLING THE PASSENGER AIRBAG**.
7. Passenger airbag warning label.
8. Passenger airbag disable switch operation.

Note: *The general location of airbags fitted to the vehicle are marked by the word AIRBAG.*

Always contact your Dealer/Authorised Repairer if:

- An airbag inflates.
- The front or sides of the vehicle are damaged.
- Any part of the airbag Supplementary Restraint System (SRS) shows signs of cracking or damage, including trim covering the airbags.