Short press:

- To select the next radio preset.
- To select the next track on the chosen audio source - CD, MP3, etc.
- When the telephone is in use, press to scroll up lists of calls or phonebook entries.
- To select the next TV channel on the Channel list, or the next DVD chapter.

Long press:

- To auto-seek up the frequency to the next radio station.

9. Press to decrease the volume for any source.
10. **MODE**: Press repeatedly to scroll through all of the audio/video sources.
11. Seek down:
    Short press:
    - To select the previous radio preset.
    - To select the previous track, or the start of the current track on chosen audio source - CD, MP3, etc.
    - When the telephone is in use, press to scroll down lists of calls or phonebook entries.
    - To select the previous TV channel on the Channel list, or the previous DVD chapter.

    Long press:
    - To auto-seek down the frequency to the next radio station.

AUDIO SETTINGS


To view the **Audio/Video** menu, press the **AUDIO VIDEO** hard key. Touch the **Settings** soft key, and then select **Audio settings** to access the **Audio settings** menu.

To adjust the sound settings:

- Touch the **Tone** soft key. Touch the **+** or **-** soft keys to adjust the **Bass**, **Treble** or **Subwoofer** levels.

To adjust balance and fade:

- Touch the **Balance/Fade** soft key.

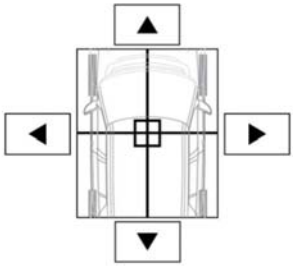

Touch the arrow soft keys to move the sound focal point to the desired area of the vehicle. Alternatively, touch the sound focal point and 'drag' it to the required position.

To adjust the surround sound settings:

- If **Meridian Surround** is available, touch the **Meridian**, **DPLIIx**, or **DTS Neo:6** soft keys to select **2D surround**. Select **Stereo** to switch **2D surround** off.
- If **Meridian Signature Reference** is fitted, **3D surround** is also available. Select the **3D surround On** soft key. Touch **Meridian**, **DPLIIz**, or **DTS Neo:X** to activate **3D surround** mode.

Note: *Surround sound options are not available for certain sources where the surround sound mode is set automatically.*

LOADING DISCS

Do not force the disc into the slot.