

FOLDING ARMREST

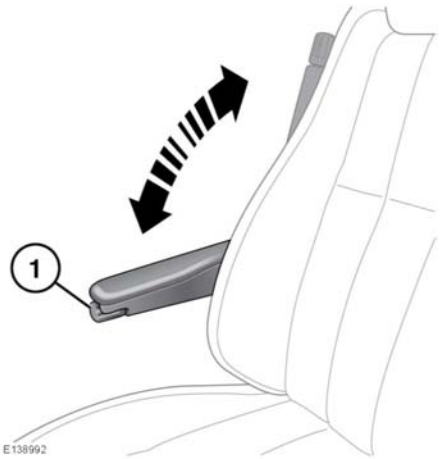

Use the adjuster wheel (**1**) to set the required height. The folding armrest may be stowed by moving to the vertical position.

SEAT POSITION MEMORY

Once you have adjusted the power-operated driver's seat, the steering column (see **27, ADJUSTING THE STEERING WHEEL**) and the exterior mirrors (see **63, EXTERIOR MIRRORS**) for your ideal driving position, the settings can be stored for future use.

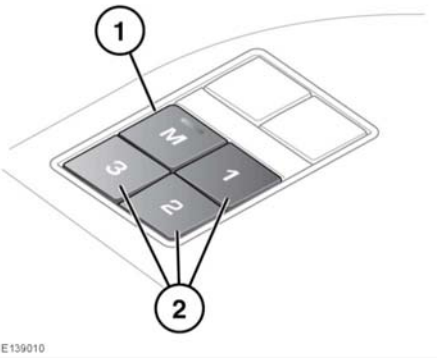

1. Press the memory store (**M**) button to activate the memory function.
2. Press 1 of the preset buttons within 5 seconds to store the current settings. **MEMORY (1, 2 or 3) SETTINGS SAVED** will be displayed in the Message centre, accompanied by an audible chime to confirm the settings have been stored.

   Note: *A seat position will only be stored during the 5 second active period.*

   Note: *Any existing settings will be over-written when storing a new position.*
3. To recall a stored position, press the relevant preset button. **MEMORY (1, 2 OR 3) RECALLED** will be displayed in the Message centre.

Note: *The memory function for all passenger seats will not trigger any messages in the Message centre.*