
TOUCH SCREEN HOME MENU

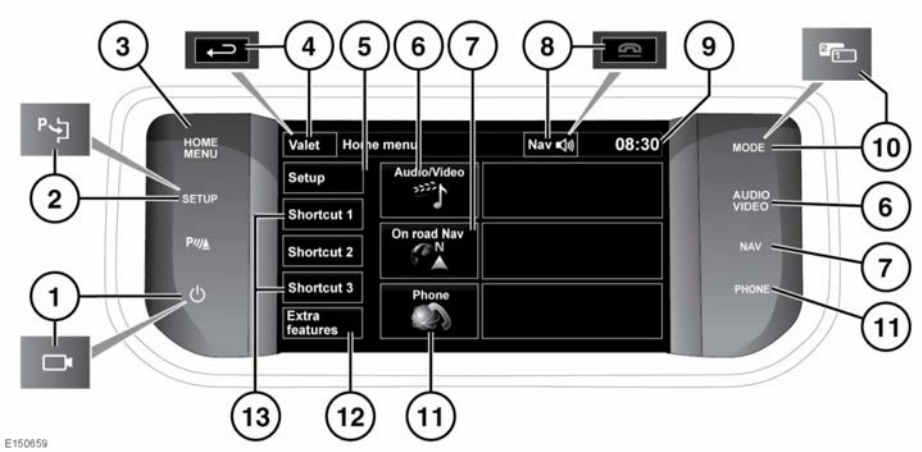

Do not adjust the Touch screen controls or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.

Always run the engine during prolonged use of the Touch screen. Failure to do so may discharge the vehicle's battery, preventing the engine from starting.

Avoid spilling or splashing liquids onto the Touch screen.

Note: *The Touch screen* ***Home menu*** *may differ due to the vehicle's specification and previous* ***Setup*** *selections.*

1. Press to turn the Touch screen on/off. When proximity cameras are fitted, this icon is changed and the button will turn cameras on/off.
2. Press to select the Touch screen **Setup** menu. When Park assist is fitted, this icon is changed and the button should be pressed to activate Park assist.
3. Press to select the **Home menu**.
4. Touch to select **Valet** mode. During menu mode, the icon is changed to the Back soft key, touch to return to the previous screen displayed.
5. Touch to select the Touch screen **Setup** menu.
6. Touch or press to select the **Audio/Video** menu. See **154, AUDIO/VIDEO CONTROLS**.
7. Touch or press to select the **On road Navigation** menu. The current set destination is displayed.
8. While Navigation is operating, touch to repeat the last given navigation instruction. During a phone call, the icon is changed. Touch to end the call.
9. Touch to adjust time/date.
10. Touch to scroll through audio/video sources. When Dual view is fitted, this icon is changed and the button should be pressed to access the Dual view screen display.