
TELEPHONE SYSTEM OVERVIEW

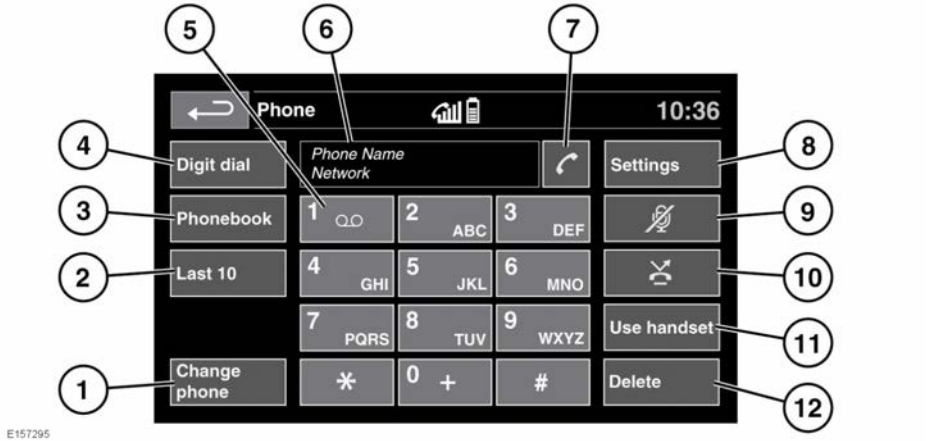

1. **Change phone**: Search for a new phone, or change to another paired phone.
2. **Last 10**: Access the last 10 dialled, received and missed calls.
3. **Phonebook**: Access the downloaded phonebook.
4. **Digit dialling**: Access the Digit dial mode.
5. Touch and hold to retrieve your voice mail.
6. Status display: Displays the name and/or number dialled and call duration.
7. Call Connect/Disconnect icons. Touch to send/accept or end/reject a call.
8. **Settings**: Access the Voice mail set up, Answer options and Phone options.
9. **Mute microphone**: Initiate Privacy mode. While selected, the caller will not hear you talking.
10. **Auto reject**: When active, any incoming calls will be rejected or diverted to voice mail (dependent on the current mobile phone settings).
11. **Use handset**: Switch the call to your mobile phone.
12. **Delete**: Touch to delete the last entered digit and hold to delete the whole entered number.

BLUETOOTH® INFORMATION

Bluetooth® is the name for short-range Radio Frequency (RF) technology that allows electronic devices to communicate wirelessly with each other.

The Land Rover **Bluetooth** wireless technology system supports **Bluetooth**® Hands-Free Profile (HFP), Advanced Audio Distribution Profile (A2DP) and Audio Video Remote Control Profile (AVRCP).

Note: *HFP and A2DP/AVRCP profiles can be connected independently, so a phone can be connected via one, while a media device can be connected via the other, at the same time.*