
TELEPHONE SYSTEM OVERVIEW

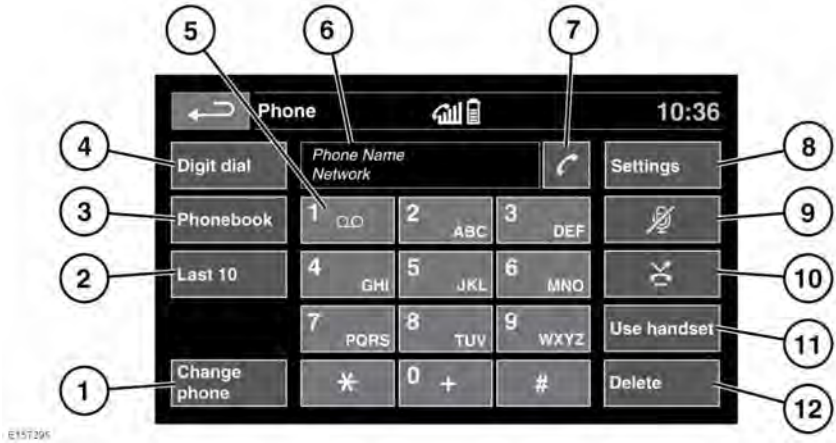

To access the **Phone** menu: Press the Phone button, or touch the Phone menu icon from the Touch screen **Home menu**. See **84, TOUCH SCREEN HOME MENU**.

1. **Change phone**: Search for a new or change to another paired phone.
2. **Last 10**: Access the last 10 dialled, received, and missed calls.
3. **Phonebook**: Access the downloaded phonebook.
4. **Digit dial**: Access digit dialling mode.
5. Touch and hold to retrieve your voicemail.
6. Status display: Displays the name and/or number dialled and call duration.
7. Call Connect/Disconnect icons. Touch to send/accept or end a call.
8. **Settings**: Access **Voice mail set up**, **Answer options** and **Phone options**.
9. Mute microphone: Initiate **Privacy** mode. While selected, the caller will not hear you talking.
10. Auto reject: When active, any incoming calls will be rejected or diverted to voicemail (depending on the connected phone settings).
11. **Use handset**: Switch the call to your connected phone.
12. **Delete**: Touch to delete the last entered digit, and hold to delete the whole entered number.

BLUETOOTH® INFORMATION

Bluetooth® is the name for short-range Radio Frequency (RF) technology that allows electronic devices to communicate wirelessly with each other.