AUDIO CONTROLS

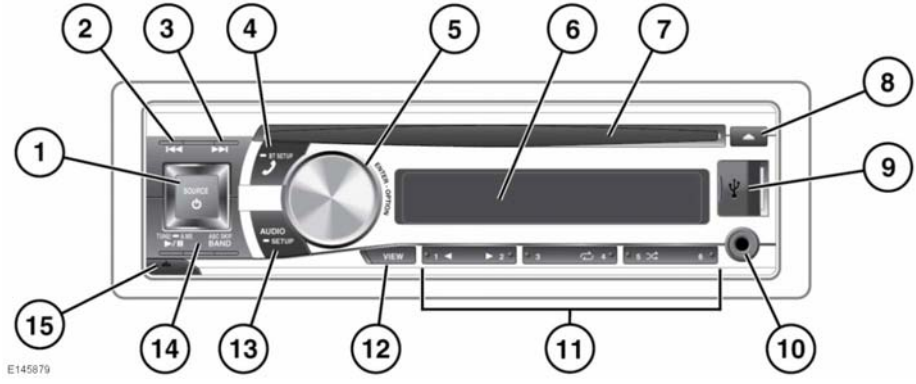

1. Power/source.
- Press and hold to turn on/off the audio system.
- Press briefly to switch source between **TUNER**, **DISC**, **USB AUDIO/iPod**, **BT AUDIO**, and **AUXILIARY**.

2. Seek down.
- Short press:

  - to auto seek down the frequency to the previous radio station.

  - to select the previous track on the chosen audio source (CD, MP3 etc.
- Long press:

  - to seek continuously down through the radio frequencies.

  - to scan back through the track on the chosen audio source (CD, MP3 etc).

3. Seek up.
- Short press:

  - to auto seek up the frequency to the next radio station.

  - to select the next track on the chosen audio source (CD, MP3 etc).
- Long press:

  - to seek continuously up through the radio frequencies.

  - to scan forward through the track on the chosen audio source - (CD, MP3 etc).

4. Accept/disconnect a telephone call. Press and hold to access the Bluetooth setup menu.

5. Volume control/menu select.
- Rotate to adjust the volume. When a menu is open, rotate to select the various menu items.
- Press to select a menu item.

6. Audio information display.

7. CD loading slot.

8. CD eject.

9. USB connection.

10. Auxiliary audio input.

11. Preset buttons.

12. Change the displayed information.

13. AUDIO/SETUP.
- Short press: access the audio settings.

- Subwoofer.
- Bass.
- Mid.
- Treble.
- Balance.
- Fade.
- Loudness.
- Defeat.
- Volume.

• Long press: access the audio setup menu.

14. Select tuning mode or pause/play current audio source (CD, MP3 etc.).

15. Release button. Release and remove the audio system face plate for security or to access the system reset button.