PORTABLE MEDIA CONTROLS (STANDARD SYSTEM)

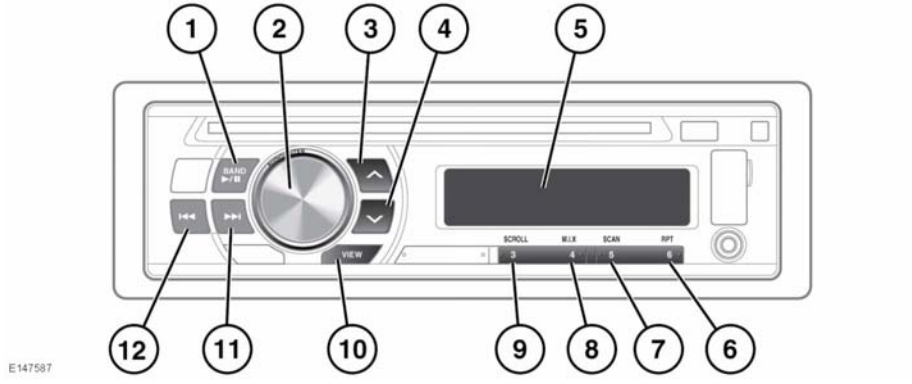

1. Pause/play.

2. Volume control/menu select:

- Rotate to adjust the volume. When a menu is open, rotate to select the various menu items.
- When a menu is open, rotate to switch between menu items and press to confirm a selection.

3. Previous folder (MP3 mode).

4. Next folder (MP3 mode).

5. Information display screen.

6. Repeat.

- Short press - continuously play the current track.
- Long press - continuously play the tracks in the current folder (MP3 mode).

Note: *By default, the current folder/CD will be played continuously.*

7. Scan.

- Short press - play the first 10 seconds of every track on the disc.
- Long press - play the first 10 seconds of the first track in each folder (MP3 mode).

8. Shuffle.

- Short press - play each track on the disc in a random sequence (CD mode).
- Long press - play each track in the selected folder in a random sequence (MP3 mode).

9. Scroll through longer track names etc on the display screen.

10. Change the displayed information.

11. Seek up.

- Short press - play the next track on the chosen audio source.
- Long press - scan forward through the current track.

12. Seek down.

- Short press - select the previous track on the chosen audio source.
- Long press - scan back through the current track.