


### REMOTE KEY FOB TRANSMITTER LOCATIONS

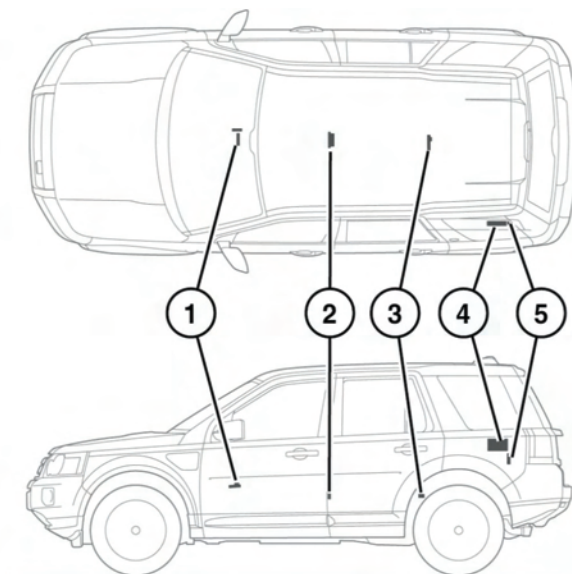

E147448

1. Cabin front transmitters.
2. Cabin middle transmitter.
3. Loadspace interior transmitter.
4. Keyless start module.
5. Loadspace interior transmitter.



**Any implanted medical device should be kept at a distance, of at least 9 inches (22 cm) away, from any of the vehicle transmitters/receivers during their normal operation. This is to avoid any possibility of interference between the vehicle system and the medical device.**