


SMART KEY TRANSMITTER LOCATIONS

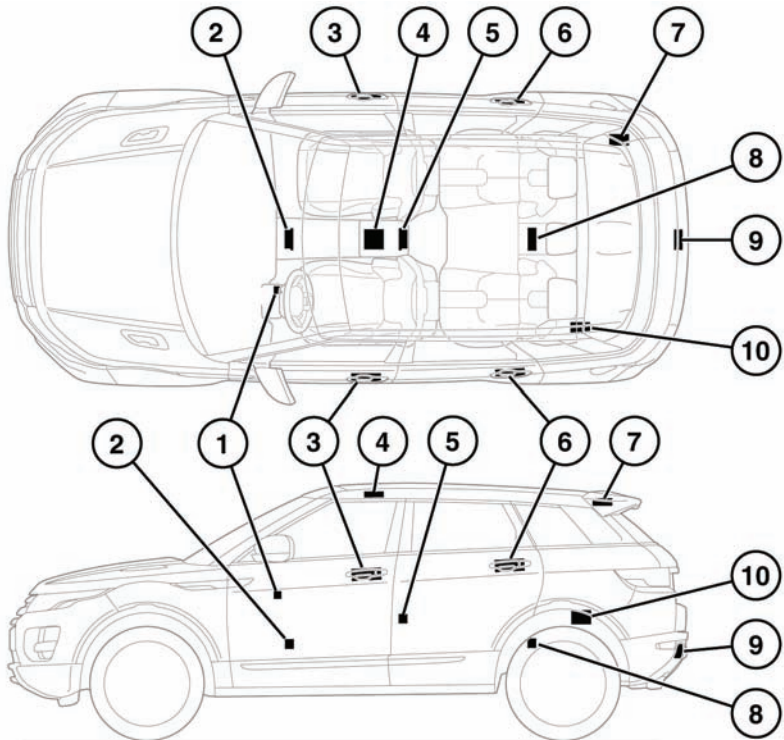

SL1765

1. Steering column backup transmitter.
2. Front cockpit transmitters.
3. Front exterior door handle transmitters.
4. Roof keyless receiver.
5. Floor console front transmitter.
6. Rear exterior door handle transmitters.
7. Loadspace transmitter.
8. Floor console rear transmitter.
9. Tailgate passive entry receiver.
10. Keyless start module.



Any person fitted with an implanted medical device should ensure that the device is kept at a distance of at least 22 cm (8.7 in) away from any transmitter mounted in the vehicle. This is to avoid any possibility of interference between the system and the device.