


REMOTE KEY FOB TRANSMITTER LOCATIONS

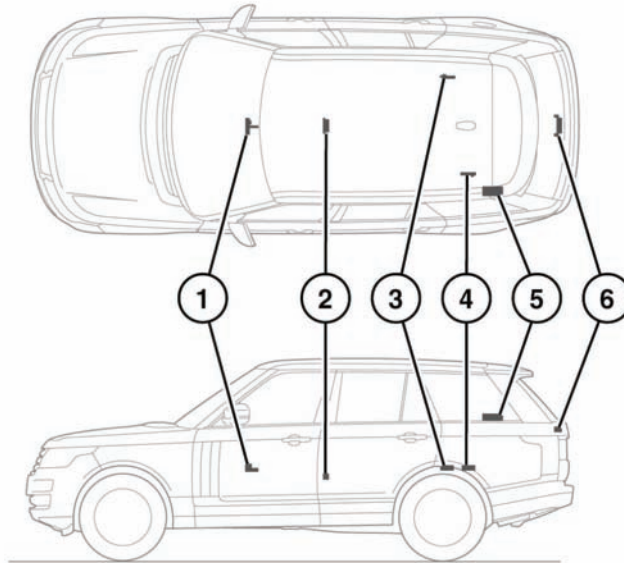

E142094

1. Cabin front transmitters.
2. Cabin middle transmitter.
3. Loadspace interior transmitter.
4. Loadspace interior transmitter.
5. Keyless start module.
6. Loadspace exterior transmitter.



Any person fitted with an implanted medical device should ensure that the device is kept at a distance of at least 22 cm (8.7 inches) away from any transmitter mounted in the vehicle. This is to avoid any possibility of interference between the system and the device.