


REMOTE KEY FOB TRANSMITTER LOCATIONS

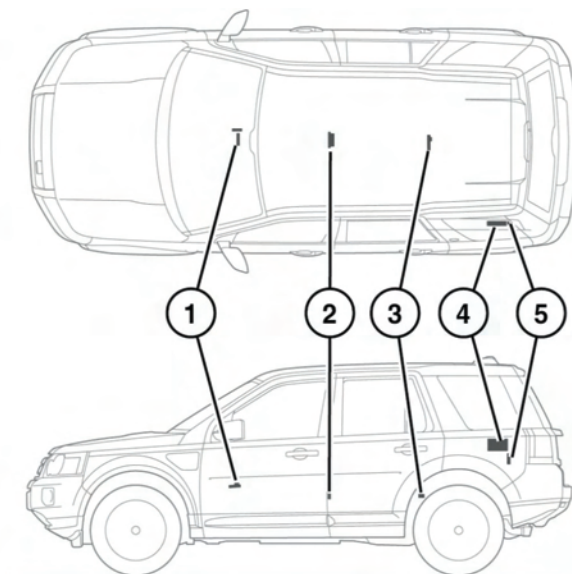

E147448

1. Cabin front transmitters.
2. Cabin middle transmitter.
3. Loadspace interior transmitter.
4. Keyless start module.
5. Loadspace interior transmitter.



Any implanted medical device should be kept at a distance, of at least 9 inches (22 cm) away, from any of the vehicle transmitters/receivers during their normal operation. This is to avoid any possibility of interference between the vehicle system and the medical device.