


REMOTE KEY FOB TRANSMITTER LOCATIONS

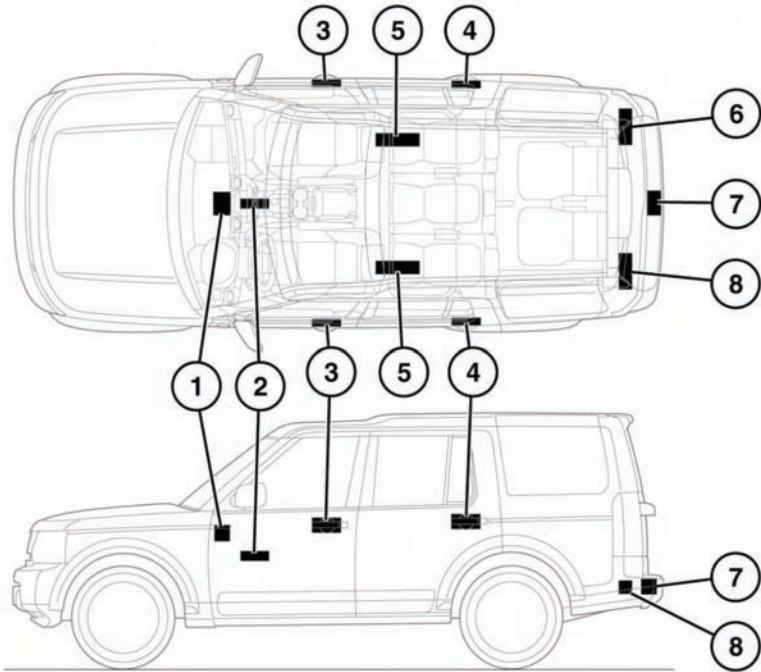

E134876

1. Cabin front transmitter.
2. Keyless start module.
3. Front exterior door handle transmitters.
4. Rear exterior door handle transmitters.
5. Cabin headlining transmitter.
6. Right-hand side loadspace transmitter.
7. Luggage compartment.
8. Left-hand side loadspace transmitter.



Any person fitted with an implanted medical device should ensure that the device is kept at a distance of at least 22 cm (8.7 inches) away from any transmitter mounted in the vehicle. This is to avoid any possibility of interference between the system and the device.