


SMART KEY TRANSMITTER LOCATIONS

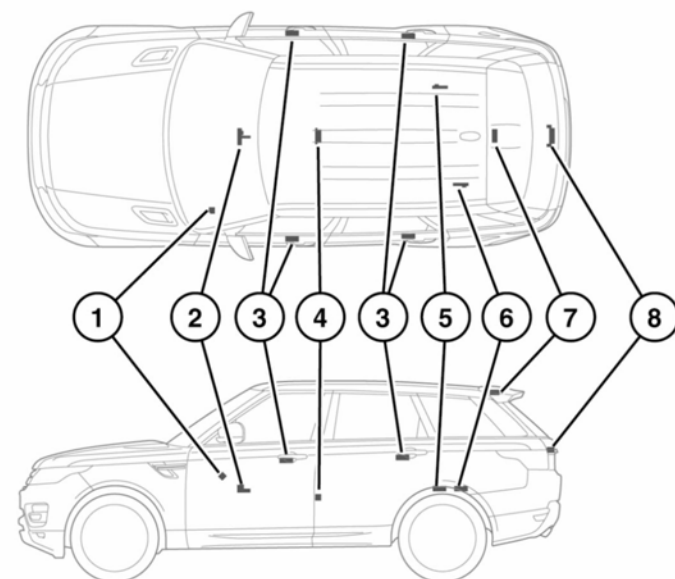

E151136

1. Security transmitter.
2. Cabin front transmitters.
3. Door transmitters.
4. Cabin middle transmitter.
5. Loadspace interior transmitter.
6. Loadspace interior transmitter.
7. Radio frequency transmitter.
8. Loadspace exterior transmitter.



Any person fitted with an implanted medical device should make sure the device is kept at a distance of at least 22 cm (8.7 inches) away from any transmitter mounted in the vehicle. This is to avoid any possibility of interference between the system and the device.