
## SMART KEY TRANSMITTER LOCATIONS

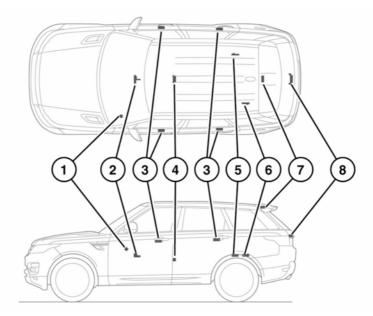

E151136

- 1. Security transmitter.
- 2. Cabin front transmitters.
- 3. Door transmitters.
- 4. Cabin middle transmitter.
- 5. Loadspace interior transmitter.
- 6. Loadspace interior transmitter.
- 7. Radio frequency transmitter.
- 8. Loadspace exterior transmitter.



Any person fitted with an implanted medical device should make sure the device is kept at a distance of at least 22 cm (8.7 inches) away from any transmitter mounted in the vehicle. This is to avoid any possibility of interference between the system and the device.