


SMART KEY TRANSMITTER LOCATIONS

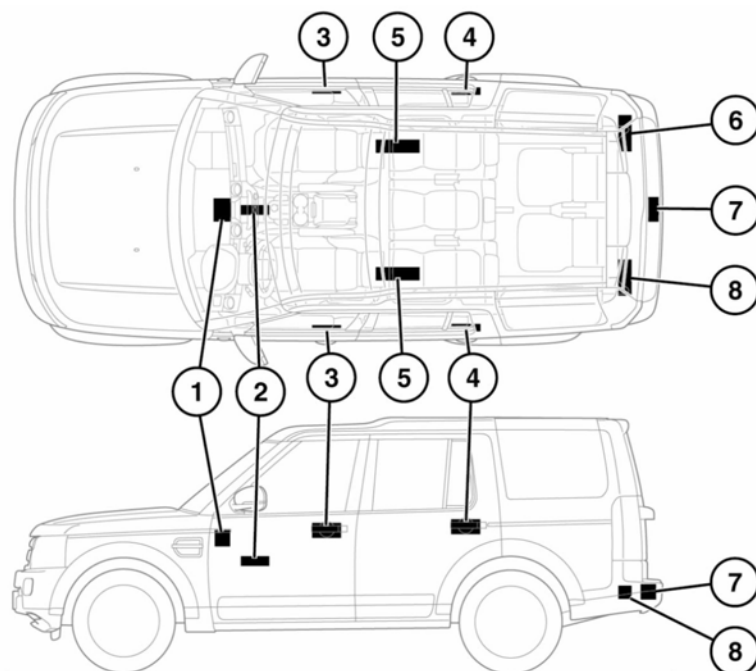

E 155596

1. Cabin front transmitter.
2. Keyless start module.
3. Front exterior door handle transmitters.
4. Rear exterior door handle transmitters.
5. Cabin headlining transmitters.
6. Right side loadspace transmitter.
7. Centre loadspace transmitter.
8. Left side loadspace transmitter.



Any person fitted with an implanted medical device, should make sure that the device is kept at a distance of at least 22 cm (8.7 inches) away from any transmitter mounted in the vehicle. This is to avoid any possibility of interference between the system and the device.