


## SMART KEY TRANSMITTER LOCATIONS

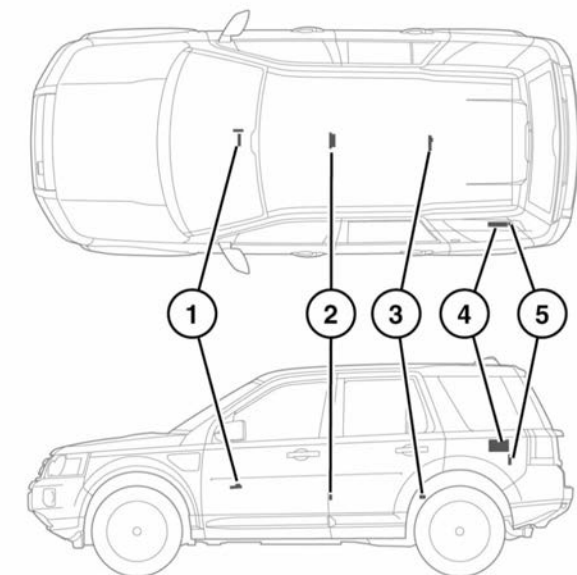

E154791

1. Cabin front transmitter.
2. Cabin middle transmitter.
3. Loadspace interior transmitter.
4. Keyless start module.
5. Loadspace interior transmitter.



**Any implanted medical device should be kept at a distance, of at least 22 cm (9 inches) away, from any of the vehicle transmitters/receivers during their normal operation. This is to avoid any possibility of interference between the vehicle's system and the medical device.**