


FUSE BOX LOCATIONS

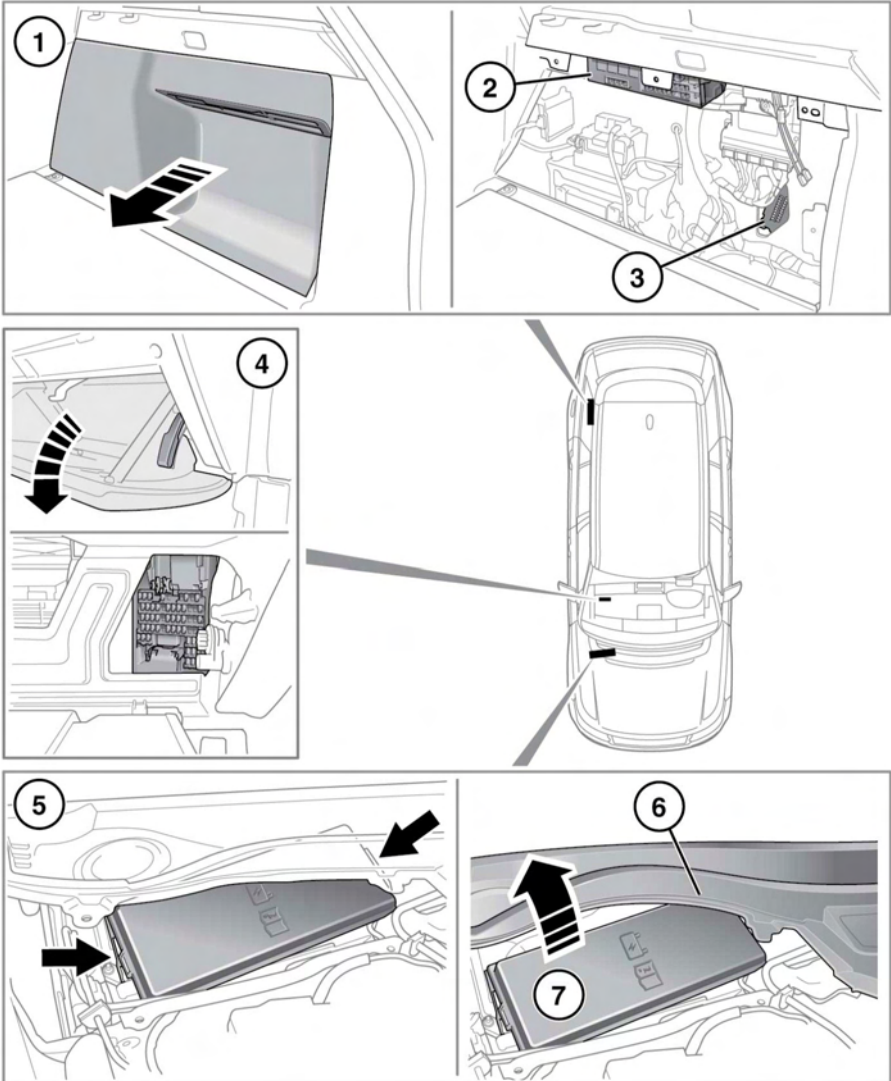

E149369

NOTICE

When a fuse box is exposed, take care to protect the box from moisture. Refit the cover and/or access panel as soon as possible.

1. To access the luggage compartment fuse boxes, open the tailgate. See **12, OPENING AND CLOSING THE POWERED TAILGATE** Grip the top of the access panel and pull sharply. A label on the rear of the access panel shows the circuits protected and the fuse locations.
 - When refitting the access panel, ensure that the 3 locating/securing pegs are aligned with their respective holes before pushing the panel fully home.
2. Luggage compartment upper fuse box.
3. Luggage compartment lower fuse box.
4. To access the passenger compartment fuse box open the glove box. See **94, STORAGE COMPARTMENTS** Press the top of the support stay at each end, and lower the glove box into the foot well. A label on the rear of the glove box shows the circuits protected and the fuse locations.
5. To access the engine compartment fuse box remove the under hood cover. See **195, UNDER HOOD COVERS - REMOVAL** Release the clip at each end of the fuse box cover.
6. Lift up the edge of the leaf screen panel just enough to allow removal of the fuse box cover.
7. Remove the fuse box cover. A label on the inside of the cover shows the circuits protected and the fuse locations.

CHANGING A FUSE

NOTICE

Fit Land Rover approved replacement fuses of the same rating and type, or fuses of matching specification. Using an incorrect fuse, may result in damage to the vehicle's electrical system and can result in a fire.

NOTICE

If the replacement fuse blows after installation, the system should be checked by your Land Rover Retailer/Authorized Repairer.

Note: Land Rover recommend that relays should only be replaced by qualified persons.

NOTICE

Always switch off the ignition, and the affected electrical circuit, before replacing a fuse.

ENGINE COMPARTMENT FUSE BOX

Fuse number	Rating (Amps)	Fuse color	Circuits protected
1	25	White	Engine management system.
2	15	Blue	Engine management system.
3	20	Yellow	Oxygen sensors.
4	10	Red	Cooling fans.
5	-	-	-
6	-	-	-
7	10	Red	Engine management system.
8	5	Tan	Digital monitoring tank leakage (DMTL).
9	5	Tan	Engine management system.
10	20	Yellow	Oxygen sensors.
11	20	Yellow	Oxygen sensors.
12	5	Tan	Adaptive cruise control (ACC). Active cornering enhancement (ACE).
13	-	-	-
14	5	Tan	Engine management system.
15	-	-	-
16	5	Tan	Electric power assist steering (EPAS).
17	15	Blue	Active cornering enhancement (ACE).
18	5	Tan	Anti-lock braking system (ABS).
19	15	Blue	Intercooler water pump.
20	5	Tan	Engine management system.
21	30	Green	Headlamp wash.
22	-	-	-
23	-	-	-
24	15	Blue	Horns.
25	-	-	-
26	-	-	-
27	-	-	-
28	10	Red	Heated washer jet.
29	-	-	-
30	15	Blue	Transmission. Terrain response.

Fuses

PASSENGER COMPARTMENT FUSE BOX

Fuse number	Rating (Amps)	Fuse color	Circuits protected
1	5	Tan	Radio frequency receiver. Tire pressure monitoring system (TPMS). Auxiliary heater. Front roof console.
2	-	-	-
3	15	Blue	Front fog lamps.
4	-	-	-
5	5	Tan	Tow bar module.
6	5	Tan	Ignition relay.
7	20	Yellow	Sunroof.
8	10	Red	Message center module.
9	5	Tan	Electric parking brake (EPB).
10	5	Tan	Front active seatbelts.
11	10	Red	Trailer reverse lamp.
12	-	-	-
13	-	-	-
14	5	Tan	Brake switch.
15	30	Green	Heated rear windshield. Radio frequency filter.
16	10	Red	Cubby box cooler.
17	5	Tan	Keyless vehicle module (KVM).
18	-	-	-
19	5	Tan	Engine control module (ECM).
20	10	Red	Heated steering wheel.
21	10	Red	Front roof console. Seat climate control.
22	5	Tan	Rotary gear selector. Automatic transmission control module. Transfer box. Rear differential. Terrain response switch.
23	5	Tan	Ambient lighting.
24	-	-	-
25	-	-	-
26	-	-	-
27	10	Red	Trailer side lamps.
28	20	Yellow	Sunroof.

Fuse number	Rating (Amps)	Fuse color	Circuits protected
29	20	Yellow	Sunroof.
30	-	-	-
31	5	Tan	Rain sensor. Ambient light sensor.
32	25	White	Driver's door.
33	20	Yellow	Dual climate seats.
34	10	red	Electric fuel flap actuator.
35	-	-	-
36	5	Tan	Battery back-up sounder.
37	20	Yellow	Keyless vehicle module (KVM).
38	15	Blue	Front windshield washer.
39	25	White	Rear left door.
40	5	Tan	Touch screen display. Driver's door switch pack. Rear climate control.
41	5	Tan	Gateway module.
42	30	Green	Driver's electric seat.
43	15	Blue	Rear screen washer.
44	25	White	Rear right door.
45	30	Green	Passenger's electric seat.
46	30	Green	Driver's electric seat.
47	10	Red	Passenger's electric seat.
48	5	Tan	Electric deployable tow bar.
49	5	Tan	Adaptive front lighting (right-sidehand unit).
50	5	Tan	Adaptive front lighting (left-side unit).
51	5	Tan	Steering wheel switches.
52	20	Yellow	Auxiliary power socket-cubby box.
53	15	Blue	Auxiliary power socket-luggage compartment.
54	15	Blue	Auxiliary power socket-rear (right-side).
55	20	Yellow	Auxiliary power socket-rear (left-side).
56	10	Red	Supplementary restraint systems (SRS).
57	10	Red	Glove box lamp. Front roof console lamps. Windshield fogging sensor.
58	25	White	Passenger door.
59	-	-	-

Fuses

Fuse number	Rating (Amps)	Fuse color	Circuits protected
60	5	5	Seat occupancy module.
61	5	5	Immobiliser antenna unit.
62	10	Red	Climate control module.
63	20	Yellow	Front cigar lighter.
64	-	-	-
65	-	-	-
66	5	Tan	Diagnostic socket.
67	-	-	-
68	-	-	-
69	-	-	-

LUGGAGE COMPARTMENT FUSE BOX

Upper

Fuse number	Rating (Amps)	Fuse color	Circuits protected
1	-	-	-
2	25	White	Front heated seat.
3	25	White	Rear heated seat.
4	15	Blue	Rear seat. Torch socket.
5	15	Blue	Trailer.
6	15	Blue	Fuel pump. (V8 diesel only).
7	5	Tan	Chassis control module.
8	15	Blue	Front seat.
9	20	Yellow	Rear wiper motor.
10	5	Tan	Breather heater. (diesel only).
11	-	-	-
12	-	-	-
13	-	-	-
14	10	Red	Headlamps. Park distance control. Blind spot monitoring. Rear view mirror. Proximity camera.
15	15	Blue	Fuel pump. (diesel only).
	30	Green	Fuel pump. (gasoline only).
16	5	Tan	Adaptive cruise control (ACC).
17	30	Green	Passenger front seat.
18	30	Green	Rear blower motor.
19	30	Green	Electric park brake (EPB).
20	10	Red	Chassis control module.
21	30	Green	Electric park brake (EPB).
22	15	Blue	Trailer.
23	15	Blue	Chassis control module.
24	20	Yellow	Rear climate seats.
25	30	Green	Deployable sidesteps.
26	20	Yellow	Rear climate seats.
27	30	Green	Rear seat (left-side).
28	30	Green	Rear seat (left-side).

Fuses

Fuse number	Rating (Amps)	Fuse color	Circuits protected
29	30	Green	Rear seat (right-side).
30	30	Green	Rear seat (right-side).

Lower

Fuse number	Rating (Amps)	Fuse color	Circuits protected
1	15	Blue	Touch screen. Front integrated control panel.
2	10	Red	Audio amplifier.
3	-	-	-
4	10	Red	Satellite digital audio radio service (SDARS). Navigation. Television tuner.
5	15	Blue	Audio head unit.
6	15	Blue	Audio video input/output panel.
7	-	-	-
8	-	-	-
9	-	-	-
10	-	-	-
11	-	-	-
12	-	-	-
13	-	-	-
14	-	-	-
15	10	Red	Front and rear integrated control panels.
16	20	Yellow	Fuel fired booster heater.