
## Towing

## FITTING THE MULTI-HEIGHT DROP PLATE TOW BALL



 $\triangle$ 

The tow ball/draw bar is heavy, care must be taken when handling it.

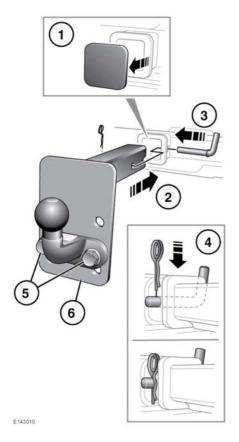

Never leave the tow bar loose in the vehicle. It could become a projectile in the event of heavy braking or an accident.

- The drop plate tow bar is stored in a bag and should be strapped to an anchorage point in the rear stowage area. Remove the plastic cover from the tow bar mounting and stow safely.
- 2. Insert the tow bar assembly into the receiver.
- 3. Insert the securing bar.
- Insert the straight part of the securing pin into the securing bar and push down firmly.
  Make sure the pin is locked in position.
- **5.** If the tow ball/hitch height is adjustable, remove the fixing bolts.
- **6.** Move the tow ball/hitch to an alternative position on the drop plate and refit the bolts. Tighten to 170 Nm.