


### KEYLESS LOCKING



**Never double lock the vehicle with people, children or pets inside. In the event of an emergency they would be unable to escape and the emergency services would be unable to release them quickly.**



The Smart key may not be detected if it is placed within a metal container or if it is shielded by a device with a back-lit LCD screen, such as a smart phone, laptop (including when inside a laptop bag), games console etc.

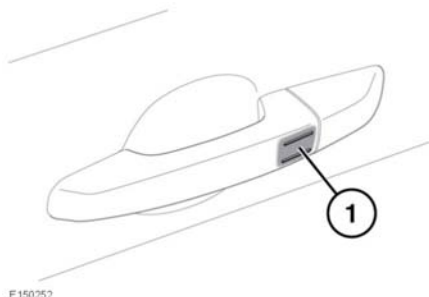

E150252

The vehicle will not lock automatically.

**Note:** Keyless locking will activate only if the Smart key is detected outside the vehicle. If no Smart key is present, no locking will occur.

- To single lock the vehicle, only touch the lock sensor on the door handle (1) once without grabbing the door handle.

**Note:** The appearance of the lock sensor may vary.

**Note:** Do not place fingers round the back of the handle while touching the sensor, doing so will prevent the vehicle from locking.

The hazard warning lamps will flash once to confirm locking.

- To double lock the vehicle, touch only the lock sensor (1) twice within 3 seconds without grabbing the door handle.

**Note:** Do not place fingers round the back of the handle while touching the sensor, doing so will prevent the vehicle from locking.

The hazard warning lamps will flash twice to confirm (with a long second flash). An audible confirmation may also be given (if enabled).

**Note:** When locking the vehicle via Keyless locking, if one or more of the doors, the bonnet or the tailgate is not fully closed, or the ignition is ON, the vehicle will NOT lock. There will be NO audible mislock error warning. The hazard warning lamps will NOT flash and the door mirrors (if enabled) will NOT fold in. Check that all of the doors, the bonnet and the tailgate are closed properly. Make sure the ignition is turned OFF and lock the vehicle again. If the mislock persists, consult your Dealer/Authorised Repairer.

### INTERIOR PROTECTION

The interior protection feature of the full alarm system may be temporarily disabled via **Alarm sensors** in the **Vehicle set-up** menu. See **42, INSTRUMENT PANEL MENU**.

**Note:** If the interior protection is temporarily disabled, it will be automatically enabled the next time the vehicle is Double locked with the Smart key.

### BATTERY-BACKED SOUNDER

In certain markets, a battery backed sounder is fitted. This device will sound if it or the vehicle battery is disconnected while the security system is armed.