

Fluid level checks

⚠ WARNING

If the fluid comes into contact with the skin or eyes, rinse immediately with plenty of water.

⚠ WARNING

Take care not to spill power steering fluid onto a hot engine - a fire may result.

NOTICE

Do not start the engine if the fluid level has dropped below the **MIN** mark. Severe damage to the steering pump could result.


NOTICE

Seek qualified assistance immediately if there is a noticeable drop in the fluid level. Severe damage to the steering pump could result.

NOTICE

If fluid loss is slow, the reservoir may be topped up to the upper level mark to enable the vehicle to be driven to a repair facility for examination. However, it is recommended that you seek qualified assistance before driving.

Check and top up the fluid with the vehicle on level ground, the engine switched off, and the system cold. Make sure that the steering wheel is not turned after stopping the engine.

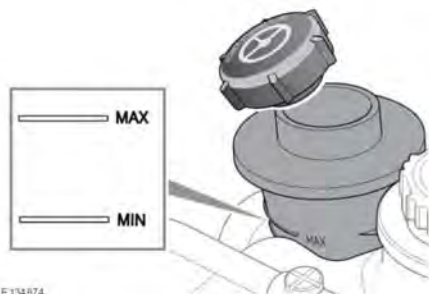

E134874

The level of fluid can be seen through the translucent body of the reservoir.

The fluid level should be between the **MIN** and the **MAX** marks.

TOPPING UP THE POWER STEERING FLUID

NOTICE

Power steering fluid will damage painted surfaces. Soak up any spillage with an absorbent cloth immediately and wash the area with a mixture of car shampoo and water.

NOTICE

Do not fill the reservoir above the **MAX** mark.

1. Clean the filler cap before removing, to prevent dirt from entering the reservoir.
2. Remove the filler cap.
3. Using the approved PAS fluid, top up the reservoir until the fluid level is between the **MIN** and **MAX** marks. See **268, LUBRICANTS AND FLUIDS**.
4. Replace the filler cap.