

Exiting the vehicle




The Smart key may not be detected if it is placed within a metal container, or if it is shielded by a device with a back-lit LCD screen, such as a smartphone, laptop (including when inside a laptop bag), games console, etc. Keep the Smart key clear of such devices when attempting Keyless entry, Keyless locking or Keyless starting.

Note: The vehicle will not lock automatically.

Note: Loose coins, in the same pocket as the Smart key, may also affect its detection.

Note: Keyless locking activates only if the Smart key is detected outside the vehicle. If no Smart key is present, no locking will occur.

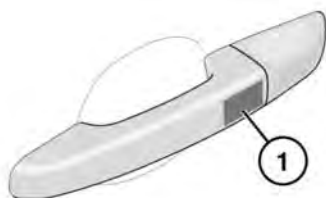

1. Lock sensor area: To single lock the vehicle, touch only the lock sensor once, without grabbing the door handle. The hazard warning lamps flash once to confirm locking. To Double lock the vehicle, touch the lock sensor twice within three seconds, without grabbing the door handle. The hazard warning lamps flash twice to confirm (with a long second flash). An audible confirmation (if enabled) may also be given.

Note: Do not place your fingers around the back of the handle while touching the sensor; doing so prevents the vehicle from locking.

Note: When locking the vehicle via Keyless locking, if one or more of the doors, the bonnet or the luggage area is not fully closed, or the ignition is ON, the vehicle will NOT lock. There will be NO audible mislock error warning. The hazard warning lamps will NOT flash and the Power fold mirrors (if fitted and enabled) will NOT fold in. Check that all of the doors, the bonnet and the luggage area are closed properly. Make sure the ignition is switched OFF and lock the vehicle again. If the mislock persists, consult your Retailer/Authorised Repairer.

GLOBAL CLOSING



Make sure no children, pets, or obstructions are in any open aperture before operating Global closing.

With all of the doors closed, press and hold the Smart key lock button for three seconds. The vehicle Single locks and the Perimeter alarm is armed immediately. After three seconds, any open windows close.

Keyless Global closing (if enabled) can be achieved if a valid Smart key is on the driver's person or in a non-metallic bag or briefcase. Operate by touching the door lock sensor for three seconds. The vehicle Single locks and the Perimeter alarm is armed immediately.

Note: The windows will close only while the door lock sensor is being touched. To fully secure the vehicle, continue to touch the door lock sensor until all of the windows are fully closed.