

## TIRE PRESSURE MONITORING SYSTEM (TPMS)

### **⚠ WARNING**

TPMS provides a low pressure warning and does not re-inflate your tires. Tire pressures should be checked regularly using an accurate pressure gauge when cold.

### **⚠ WARNING**

TPMS can NOT register damage to a tire. Regularly check the condition of your tires, especially if the vehicle is driven off-road.


### **NOTICE**

When inflating tires, care should be taken to avoid bending or damaging the TPMS valve. Always ensure correct alignment of the inflation head to the valve stem.

**Note:** Non-approved accessories may interfere with the system. If this occurs, **TIRE PRESSURE MONITORING FAULT** is displayed in the message center.

**Note:** Different types of tire may affect the performance of the TPMS. Always replace tires in accordance with recommendations.

Your vehicle is equipped with a TPMS which monitors pressure in each tire, including the full-size spare tire. Compact spare tires are not fitted with sensors and are consequently not monitored.

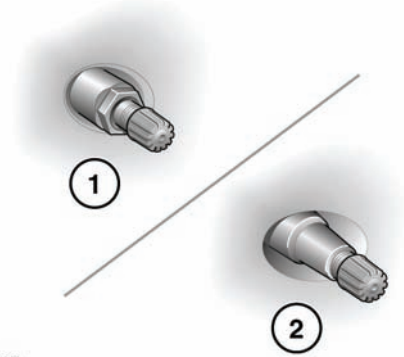

SL1302

1. TPM system external metal lock nut and valve.
2. Non TPM system rubber valve.

## TPMS OPERATION

The TPMS monitors the pressure of the tires via sensors located in each wheel and a receiver located within the vehicle. Communication between sensor and receiver is via Radio Frequency (RF) signals.

**⚠** The yellow tire pressure warning telltale illuminates when one or more of the tires is significantly under-inflated.



This will be accompanied by a graphic and message in the message center. The graphic and message will indicate which of the TPMS tires needs attention.

You should stop and check the tires as soon as possible and inflate them to the recommended pressure. See **202, TIRE PRESSURE LABEL (USA only)**.

## Tire pressure monitoring system

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label. (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires.)

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure telltale when one or more of your tires is significantly under-inflated.

Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life and may affect the vehicle's handling and stopping ability.

Please note that the TPMS is not a substitute for proper tire maintenance and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.

The TPMS may issue a warning if the under-inflation becomes significant. When driving through variable climatic conditions, the TPMS warnings may be intermittent.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly.

The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists.

When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.

A supplementary text message will accompany the system indicator and will display **TIRE PRESSURE MONITORING FAULT**.

### **TPMS - TEMPORARY SPARE WHEEL AND TIRE CHANGE**

If a non TPMS temporary spare wheel is fitted, the system will automatically recognise the change in wheel positions. After approximately 10 minutes of driving above 18mph (25km/h), the message **FRONT (REAR) RIGHT(LEFT) TIRE PRESSURE NOT MONITORED** will be displayed, accompanied by illumination of the warning telltale lamp.

This TPMS display sequence will be activated at every ignition cycle, until the temporary spare wheel is replaced by a full size TPMS road wheel.

Always have your tires serviced or changed by a qualified technician.

Care must be taken to avoid contact between the bead of the tire and the sensor during removal and refitting of the tire, otherwise the sensor may become damaged and/or inoperable.

## **NOTICE**

*Valve stem seal, washer, nut, valve core and cap should be replaced at every tire change. Valve stem seal, washer and nut must be replaced if valve retention nut is loosened. Sensor units and nuts must be refitted using correct torque figures and associated profile. Damage to the vehicle may result if these precautions are not taken.*

## **REPLACEMENT SENSOR**

Should the sensor require replacing, it should be carried out by a Retailer/Authorized Repairer.

A replacement sensor must be fitted to a running wheel in order to be recognized by the TPMS. Recognition only occurs when the vehicle is driven above 18mph (25km/h) for approximately 10 minutes.

Should the TPMS warning for any wheel not clear, even after ensuring correct inflation and driving for more than 10 minutes above 18mph (25km/h), consult your Retailer/Authorized Repairer.

## **TYPE APPROVAL**

### **USA**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

### **Canada**

IC-RSS-210:

Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. this device must accept any interference, including interference that may cause undesired operation of the device.

**Note:** *Changes or modifications not expressly approved by the manufacturer could void the user's authority to use the equipment.*

The TPMS radio frequency approval numbers for the USA and Canada are:

### **USA FCC ID:**

KR5S120123

KR5S180021

5WK49097

### **Canada IC:**

267T-S120123

267T-S180021

267T-5WK49097