











## WHEEL CHANGING

Before raising the vehicle or changing a wheel, ensure that you read and comply with the following warnings.


-  **Ensure that the jack is on firm level ground.**
-  **Never place anything between the jack and the ground, or the jack and the vehicle.**
-  **Position the jack from the side of the vehicle, in line with the appropriate jacking point.**
-  **Do not attempt to raise the vehicle unless the jack head is fully engaged in the jacking point. Only jack the vehicle using the approved jacking points.**
-  **WARNING - THAT NO PERSON SHOULD PLACE ANY PORTION OF THEIR BODY UNDER A VEHICLE THAT IS SUPPORTED BY A JACK.**
-  **The jack is designed for wheel changing only. Never work beneath the vehicle with the jack as the only means of support. Always use correctly rated vehicle support stands, before putting any part of your body beneath the vehicle.**
-  **Always use the complete jacking lever assembly throughout the tyre changing process, to minimise any chance of accidental injury.**
-  **Take care when loosening the wheel nuts. The wheel brace may slip off if not properly attached and the wheel nuts may give way suddenly. Either unexpected movement, may cause an injury.**
-  **Do not start or run the engine while the vehicle is supported only by a jack.**

-  **Only jack the vehicle using the jacking points described, or damage to the vehicle could occur.**


**Note:** *Your vehicle may be fitted with a tilt sensor which activates the alarm if the vehicle is tilted in any direction after it has been locked. To lock the doors while changing the wheel, and avoid the alarm activating, tilt sensor can be temporarily disabled. **63, INSTRUMENT PANEL MENU***

**Note:** *If side steps or tubes are fitted, the jacking points are located on the underside of the side step or tube brackets.*

Before raising the vehicle, use the wheel nut brace to slacken the wheel nuts of the wheel to be replaced by half a turn counter-clockwise.

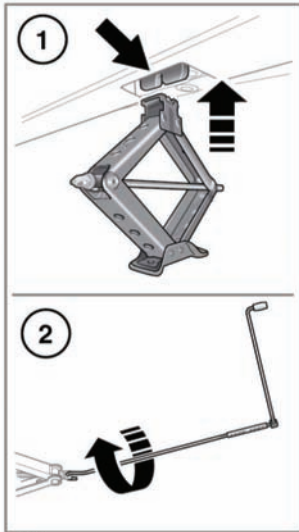

E142348

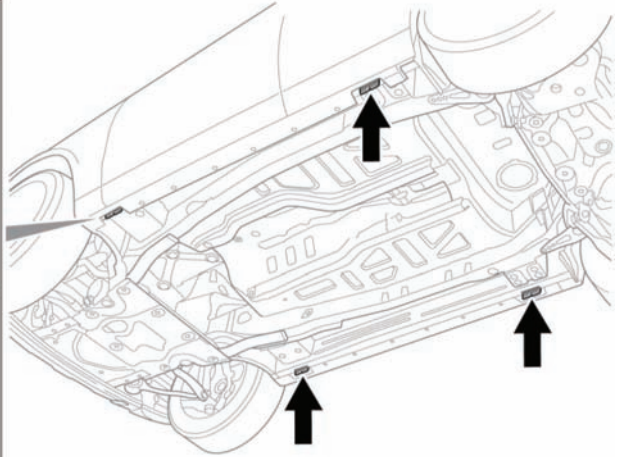


1. Position the jack under the relevant jacking point under the chassis.

**Note:** Do not allow the jack to contact the sill at any other point as damage may result.

2. Turn the jack lever clockwise to raise until the jack pin locates into the jacking point. Ensure that the base of the jack is in full contact with the road surface.
3. Raise the vehicle using the jack with a slow steady operation. Avoid rapid, jerky actions as they may cause the vehicle/jack to become unstable.
4. Remove the wheel nuts and place them together where they cannot roll away.
5. Remove the wheel and place to one side. Do not lay the wheel on its face, as this may damage the finish.
6. Fit the temporary spare wheel to the hub.
7. Re-fit the wheel nuts and lightly tighten them. Ensure that the wheel is making contact with the hub evenly.

8. Ensure that the space under the vehicle is clear of obstructions, then lower the vehicle slowly and smoothly.
9. With all wheels on the ground and the jack removed, fully tighten the wheel nuts. The wheel nuts must be tightened in sequence (see illustration) to the correct torque of 133 Nm (98 lb.ft).

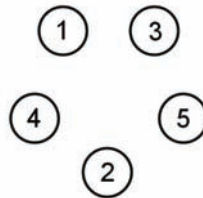

E132675

**Note:** If it is not possible to torque the wheel nuts when a wheel is replaced, they should be set to the correct torque as soon as possible.