
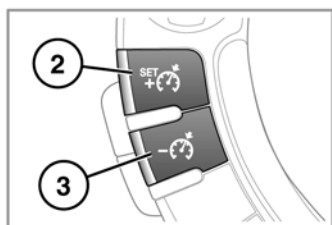


## SELECTING HDC

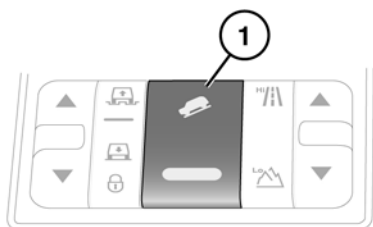

SL1359

1. Press to switch HDC on and off.
2. Press to increase the set speed.
3. Press to decrease the set speed.

HDC can be selected at speeds below 50mph (80km/h) but will not activate until vehicle speed drops to less than 30mph (50km/h).

The green warning lamp in the message center will illuminate while HDC is active.

HDC can be used in **D**, **R** or CommandShift **1** when in Hi range and in **D**, **R** and all CommandShift gears when in Lo range. When in **D**, the vehicle will select the most appropriate gear.

**Note:** *HDC is automatically selected by some of the Terrain response special programs.*

To select HDC, press and release the HDC on/off switch (1).

If the HDC lamp flashes, HDC has been selected but is not operating. This is caused by the system's operating conditions not being met (e.g. vehicle speed too high).

If HDC is deselected while operating (either manually or due to a fault developing), the HDC lamp will flash and the system will fade out, allowing the vehicle speed to gradually increase.

If the vehicle speed exceeds 50mph (80km/h) HDC will disengage and the HDC lamp will extinguish.

**Note:** *HDC is automatically deselected if the ignition is switched off for more than 6 hours.*

## HDC OPERATION

With HDC engaged, the speed of descent can be altered using the cruise control steering wheel switches, as follows:

- To increase speed press and hold the + switch (2) until the desired speed is achieved. Maximum HDC descent speed is 12mph (20km/h) in Low range and 19mph (30km/h) in High range.
- To decrease speed press and hold the - switch (3) until the desired speed is achieved.

**Note:** *HDC can achieve a lower descent speed in Low range gears.*

When the switch is released, the selected speed will be maintained. The target speed will be displayed in the message center.

To increase or decrease speed gradually, tap the + or - switch as required. Each tap of the switch will increase/decrease the speed in increments/decrements of 0.3mph (0.5 km/h).

The accelerator pedal can also be used to increase speed, up to the threshold in each gear.

**Note:** *Each gear has a pre-determined minimum speed.*

Descent speed will only increase on a slope steep enough to provide additional momentum. Therefore, use of the + switch on a gentle slope may not increase the speed.

If the brake pedal is depressed, HDC will be overridden and the brakes will operate as normal. When the brake pedal is released, HDC will resume control of the descent.

If HDC is switched off during a descent via the brake pedal, HDC assistance will fade out gradually. This is to prevent loss of control if HDC is switched off in error. HDC will resume control when switched back on if assistance is still required, but at the speed the vehicle is travelling when the brake pedal is released.



**WARNING: Do not attempt a steep descent if HDC is inoperative or warning messages are displayed.**

### GRADIENT RELEASE CONTROL (GRC)

With HDC activated, if the vehicle is stopped on a slope using the foot brake, GRC will become active (except in Terrain response Sand program).

During a hill ascent when the foot brake is released GRC will automatically delay and graduate the brake release, to allow the vehicle to move away smoothly.

When descending a hill, a similar brake hold and gradual release is employed to provide a smooth transition into HDC control.

GRC operates in forward and reverse gears and requires no driver intervention.

### BRAKE TEMPERATURE

In extreme circumstances, the HDC system may cause brake temperatures to exceed their pre-set limits. An **HDC** warning will be displayed in the message center. HDC will then fade out and become temporarily inactive.

Once the brakes have reached an acceptable temperature, the message will disappear (or the warning indicator will extinguish) and HDC will, if required, resume operation.

### SYSTEM FAULT

If a fault is detected in the HDC system, an **HDC** warning will be displayed in the message center.

If the fault is detected while the system is operating, HDC assistance will fade out.

If a fault is detected, contact your Land Rover Retailer as soon as possible.

### AUTOMATIC SYSTEMS

Gradient Acceleration Control (GAC) and Hill Start Assist are not active while HDC is operating.

GAC will limit vehicle acceleration on steep descents, allowing the driver to feel more in control of the vehicle.

Hill Start Assist activates when starting a hill ascent from a stationary position. When the foot brake is released Hill Start smoothly releases the brake pressure, allowing the vehicle to move away without rolling backwards.

Any fault with GAC or Hill Start Assist will be indicated by the DSC warning lamp being illuminated and a message in the message center.