HOMELINK® TRANSMITTER


The Land Rover HomeLink® universal transmitter is built into the underside of the rear view mirror and provides a convenient way to replace up to three hand-held transmitters with a single built-in device. This innovative feature will learn the radio frequency codes of most current transmitters to operate garage doors and gates. With the available accessory package, the HomeLink® transmitter can also control home or office lighting and security systems. For reliability, the HomeLink® transmitter is powered by your vehicle's battery and charging system.

Note: HomeLink[®] is a registered trademark owned by the Johnson Controls, Inc. Milwaukee. Wisconsin.

Precautions

When programming your HomeLink® transmitter, you will be operating the garage door or gate. Be sure that people and objects are out of the way, to prevent potential harm or damage.

Do not use this HomeLink[®] transmitter with any garage door that lacks safety stop and reverse features. A garage door opener which cannot detect an object in the path of a closing door and then automatically stop and reverse the door does not meet current safety standards. Using a garage door opener without these features increases the risk of serious injury or death.

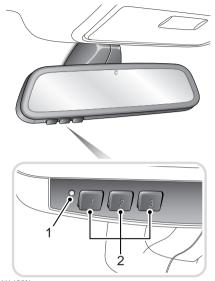

- H6480N
- 1. Status indicator light (red)
- 2. Channel buttons

Before programming the HomeLink[®] transmitter

If you intend programming a door or gate that may require you to press and re-press the original hand held transmitter (cycle), disconnect the power supply to the device motor, before using the cycling process, to prevent possible motor failure.

To achieve best results, fit a new battery to the original hand-held transmitter before starting the HomeLink[®] programming. If your opening device receiver is equipped with an antenna, ensure that the antenna is hanging straight down.

Programming

- 1. Switch on the ignition.
- 2. If you have previously programmed your HomeLink[®] transmitter, proceed to step 3. Otherwise, hold down the two outside buttons on the HomeLink[®] transmitter until the indicator light begins to flash (approximately 20 seconds). Release both buttons.

This initializes the HomeLink[®] transmitter and erases previous settings from all three channels.

Note: Do not perform this step when programming additional hand-held transmitters.

- **3.** Decide which one of the three channels you want to program.
- 4. Hold the signal-emitting end of your original hand-held transmitter 50 150mm (2 6 in.) away from the HomeLink[®] transmitter buttons so that you can still see the status indicator light.
- 5. With one hand, push the hand-held transmitter button, and with the other, the desired button on the HomeLink[®] transmitter. Continue to press both buttons through step 6.
- 6. Hold down both buttons until you see the indicator light on the HomeLink[®] transmitter flash, first slowly and then rapidly (this could take up to a minute). The rapid flashing indicates that you have successfully programmed the HomeLink[®] transmitter to learn the new frequency signal. Release both buttons.
- 7. Switch off the ignition.

If after repeated attempts you do not successfully program the HomeLink® transmitter to learn the signal of the original hand-held transmitter, check that the operating frequency of your device is approved for use in your country. A table at the back of this supplement lists all approved frequencies.

If you still have a problem after checking frequency applicability, contact your Land Rover Dealer/Authorised Repairer or consult www.eurohomelink.com.

Operating the Land Rover HomeLink® transmitter

When programmed, the HomeLink[®] transmitter can be used in place of your original hand-held transmitter(s). To operate, simply press the appropriate button on the HomeLink[®] transmitter. The indicator light illuminates when the signal is being transmitted.

Note: If your hand-held transmitter appears to program the HomeLink[®] transmitter, but does not open your garage door and if your garage door was manufactured after 1995, your garage door opener may have a code protected or rolling code feature.

A rolling code type of system will change the code of your garage door opener every time you open or close your garage door.

To determine if you have one of these systems, depress the button on your HomeLink[®] transmitter that you programmed. If the indicator light on the HomeLink[®] transmitter flashes rapidly for 1-2 seconds, then lights continuously, your garage door opener has a rolling code system.

Rolling code system programming

To train your rolling code device to operate from your HomeLink[®] transmitter:

- 1. Switch on the ignition.
- Program your original hand-held transmitter to the HomeLink[®] transmitter as previously described.
- Remove the cover panel from your garage door opener receiver (the receiver should be located by the garage door motor).
- Locate the training button on the garage door opener receiver. The exact location and colour of the button may vary by garage door opener brand.
- Press and release the training button on the garage door opener receiver then perform the next step within 30 seconds.
- **6.** Return to the HomeLink[®] transmitter in the vehicle and press the programmed button for two seconds and release.
- 7. Repeat step 6 three times to complete the process.

Your HomeLink[®] transmitter should now open your garage door.

Erasing channels

To erase all three programmed channels, hold down the two outside buttons until the indicator light begins to flash, then release both buttons.

All memories in the HomeLink[®] transmitter have now been cleared. Channels cannot be erased individually.

Reprogramming a single button

To program a device to the HomeLink[®] transmitter using a previously trained button:

- **1.** Switch on the ignition.
- Press and hold the desired button. Do not release the button until step 5 has been completed.
- 3. When the indicator light begins to flash slowly (after 20 seconds), position the original hand-held transmitter 50 150 mm (2 6 in.) away from the HomeLink® transmitter surface.
- Press and hold the hand-held transmitter button. The HomeLink[®] indicator light will flash, at first slowly and then rapidly.
- **5.** When the indicator light begins to flash rapidly, release both buttons.

Note: Be sure to retain your original transmitter for future programming procedures (i.e. new vehicle purchase).

When selling your vehicle, be sure to erase all your personal channels from the HomeLink® transmitter.

Accessories and assistance

Accessories for your HomeLink® transmitter are available from the manufacturer of the device. If you would like additional information or would like to purchase other accessories such as home lighting or security products that can be operated by the HomeLink® transmitter, please call the toll-free from anywhere within Europe on; 0 0800 0466 354 65. If calling from within Germany, the first zero is not required. If difficulty is experienced with this telephone number, try the alternative 0049 6838 907227.

Contact can also be made via email to info@eurohomelink.com.

Approval numbers / dates for EuroHomeLink radio transceiver

| Country | Frequencies | Approval No. / Date |
|---|-------------------------|---------------------------|
| Austria | 27, 40, 433, 868MHz | GZ104569-ZB/98 |
| Belgium | 27, 40, 433, 868MHz | RTT/D/X2064 |
| Czech Republic | 27, 40, 433, 868MHz | CTU 2000 3 R 1194 |
| Cyprus | 27, 40, 433, 868MHz | MCW129/95 12/2000 |
| Denmark | 27, 40, 433, 868MHz | 98.3142-266 |
| Finland | 27, 40, 433, 868MHz | FI98080106 |
| France | 27,30,40,433, 868MHz | 97619 RD |
| Germany | 27, 40, 433, 868MHz | D800038K |
| Gibraltar | 27,40,418,433, 868MHz | RTTE 20754/0087847 |
| Greece | 27, 40, 433, 868MHz | JCI 05JUL2000 RTTE |
| Hungary | 27, 40, 433, 868MHz | BB-5793-1/2000 |
| Ireland | 27, 40, 433, 868MHz | TRA 24/5/109/5 |
| Iceland | 27, 40, 433, 868MHz | IS-3418-00 |
| Italy | 27, 30, 40, 433, 868MHz | DGPGF/4/341032/TB 0002573 |
| Luxembourg | 27, 40, 433, 868MHz | L2433/10510-03J |
| Malta | 27, 40, 433, 868MHz | WT/122/98 |
| Netherlands | 27, 40, 433, 868MHz | NL99030970 |
| Norway | 40, 433, 868MHz | NO2000026 |
| Poland | 27, 40, 433, 868MHz | URT-GP-CLBT-431-66/2002/C |
| Martinique (DOM) | 27, 40, 433, 868MHz | 97619 RD |
| Reunion, La (DOM) | 27, 40, 433, 868MHz | 97619 RD |
| Portugal | 27, 40, 433, 868MHz | JCI 03JUL2000 RTTE |
| Slovak Republic | 27, 40, 433, 868MHz | R 267 2001 N |
| Spain | 27, 40, 433, 868MHz | 0416 00 |
| Sweden | 40, 433, 868MHz | Ue990195 |
| Switzerland/Fürstentum Liechtenstein | 27, 40, 433, 868MHz | BAKOM 98.0746.K.P |
| Turkey | 27, 40, 433MHz | 0425/TGM-TR/JOCO-EURO |
| U.K. | 27,40,418,433, 868MHz | RTTE 20754/0087847 |
| South Africa | 27, 40, 433MHz | TA 598/2002 |

| Country | Frequencies | Approval No. / Date |
|--------------|------------------------------|-----------------------|
| Australia | 30, 40, 433MHz | 27NOV2002 |
| New Zealand | 27, 30, 40, 433MHz | 02DEC2002 |
| Jordan | 27, 30, 40, 433, 868MHz | TRC/LPD/2002/20 |
| Kuwait | 27, 30, 40, 418, 433, 868MHz | 14JAN2002 |
| Saudi Arabia | 27, 40, 418, 433MHz | SAP20554184 |
| UA Emirates | 433MHz | K8133510-CC |
| Monaco | 27,30,40,433, 868MHz | PC/cp-CI.T55-03/04672 |
| Andorra | 27, 30, 40, 433, 868MHz | 16SEP2003 |
| Chile | 40, 433MHz | 12DEC2001 |
| Croatia | 27, 40, 433, 868MHz | SRD-156/03 |
| Estonia | 27, 40, 433, 868MHz | 5-4796/04_1_2 |
| Latvia | 27, 40, 433, 868MHz | (27.4)-1B-2269 |
| Slovenia | 27, 40, 433, 868MHz | 500-11/2004-146 |
| Russia | 433MHz | POCC DE.MJ05.H00016 |
| Lithuania | 27, 40, 433, 868MHz | TBC |