Fluid level checks


ENGINE OIL CHECK

The oil consumption of an engine is influenced by many factors. Under high loads an engine will consume more oil than usual. Diesel engines consume slightly more oil than petrol engines.

Check the oil level weekly, when the engine is cold and with the vehicle resting on level ground.

CHECKING THE OIL LEVEL

Note: If it is necessary to check the oil level when the engine is hot, switch off the engine and let the vehicle stand for five minutes to allow the oil to drain back into the sump. Do not start the engine.

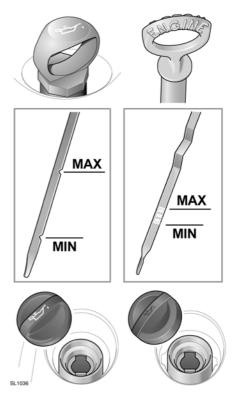

- 1. Withdraw the dipstick and wipe the blade clean with a lint free cloth.
- Fully re-insert the dipstick and withdraw again to check the oil level. Never allow the oil level to fall below the lower mark or notch on the dipstick.

As a general guide, if the level on the dipstick:

- Is nearer to the upper mark or notch than the lower, add no oil.
- Is nearer to the lower mark or notch than the upper, add half a litre (one pint) of oil.
- Is below the lower mark or notch, add one litre (two pints) of oil and re-check the level after a further five minutes.

TOPPING UP THE OIL

- Your vehicle warranty may be invalidated if damage is caused by using oil that does not meet the required specification.
- Failure to use an oil that meets the required specification could cause excessive engine wear, a build up of sludge and deposits, and increase pollution. It could also lead to engine failure.
- Overfilling with oil could result in severe engine damage. Oil should be added in small quantities and the level re-checked to ensure that the engine is not overfilled.
- 1. Remove the oil filler cap.
- Add oil to maintain the level between the MIN and MAX marks or notches on the dipstick. Clean up any oil spilled during topping-up.
- 3. Check the oil level again after 5 minutes. It is essential to use the correct specification oil, and to ensure it is suitable for the climatic conditions in which the vehicle is to be operated.

Note: The approximate quantity of oil required to raise the level from **MIN** to **MAX** on the dipstick is 1.2 litres (2.11 pints) - petrol models or 1.5 litres (2.64 pints) - diesel models.

ENGINE OIL SPECIFICATION


Model	Specification
Petrol engine	Use only OW-30 engine oil, meeting ACEA A5/B5 specification.

Model	Specification
Diesel engine	Use only 5W-30 oil meeting Land Rover WSS-M2C913-B
	specification.

Land Rover recommends:



CHECKING THE COOLANT LEVEL



The coolant level in the expansion tank should be checked at least weekly (more frequently in high mileage or arduous operating conditions). Always check the level when the system is cold.



Fluid level checks

Ensure the coolant level remains between the level indicator marks located on the side of the expansion tank.

If the level has dropped suddenly, or by a large amount, the system may be leaking or overheating. Arrange for the vehicle to be examined by a qualified technician as soon as possible.

TOPPING UP THE COOLANT



Never remove the filler cap when the engine is hot - escaping steam or scalding water could cause serious personal injury.



Avoid spilling antifreeze onto a hot engine - a fire may result.



Unscrew the filler cap slowly, allowing the pressure to escape before removing completely.



When travelling in territories where the water supply contains salt, always ensure you carry a supply of fresh (rain or distilled) water. Topping up with salt water will cause serious engine damage.

Top-up to the upper level indicator mark located on the side of the expansion tank. Use only a 50% mix of water and Texaco XLC antifreeze.

Note: In an emergency - and only if the approved antifreeze is unavailable - top-up the cooling system with clean water, but be aware of the resultant reduction in frost protection. Do not top-up or refill with conventional antifreeze formulations. If in doubt consult a qualified technician.

Ensure the cap is tightened fully after top-up is completed by turning the cap until the ratchet cap clicks.

ANTIFREEZE



Antifreeze is poisonous and can be fatal if swallowed - keep containers sealed and out of the reach of children. If accidental consumption is suspected, seek medical attention immediately.



If the fluid comes into contact with the skin or eyes, rinse immediately with plenty of water.



The use of non-approved antifreeze will have an adverse effect on the engine cooling system and therefore engine durability.



Antifreeze will damage painted surfaces; soak up any spillage with an absorbent cloth immediately and wash the area with a mixture of car shampoo and water.

Antifreeze contains important corrosion inhibitors. The antifreeze content of the coolant must be maintained at $50\% \pm 5\%$ all year round (not just in cold conditions). To ensure that the anti-corrosion properties of the coolant are retained, the antifreeze content should be checked once a year and completely renewed every ten years, regardless of distance travelled. Failure to do so may cause corrosion of the radiator and engine components.

The specific gravity of a 50% antifreeze solution at 20°C (68°F) is 1.068 and protects against frost down to -40°C (-40°F).

BRAKE FLUID CHECK



Brake fluid is highly toxic - keep containers sealed and out of the reach of children. If accidental consumption of fluid is suspected, seek medical attention immediately.



If the fluid comes into contact with the skin or eyes, rinse immediately with plenty of water.



Do not drive the vehicle with the fluid level below the MIN mark.

If the quantity of fluid in the brake/clutch reservoir drops below the recommended level, a red warning indicator in the instrument pack will illuminate

Note: If the warning indicator illuminates while the vehicle is being driven, stop the vehicle as soon as safety permits by gently applying the brakes.


Check and top-up the fluid level if necessary.

CHECKING THE FLUID LEVEL



Seek qualified assistance immediately if brake pedal travel is unusually long or if there is any significant loss of brake fluid. Driving under such conditions could result in extended stopping distances or complete brake failure.

With the vehicle on level ground, check the fluid level at least every week (more frequently in high mileage or arduous operating conditions).

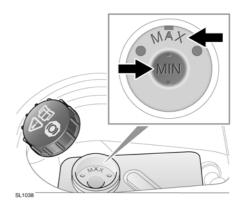

- 1. Clean the filler cap before removing to prevent dirt from entering the reservoir.
- 2. Remove the filler cap.
- 3. The brake fluid level should be between the MIN and the MAX marks.

The fluid level may drop slightly during normal use as a result of brake pad wear but should not be allowed to drop below the **MIN** mark.

TOPPING UP THE FLUID



Brake fluid will damage painted surfaces. Soak up any spillage with an absorbent cloth immediately and wash the area with a mixture of car shampoo and water.

Fluid level checks

- Only use new fluid from an airtight container. Fluid from opened containers or fluid previously bled from the system will have absorbed moisture, which will adversely affect performance, and must not be used.
- Top-up the reservoir to the MAX mark using Shell DOT4 ESL brake fluid. If Shell DOT4 ESL is not available, a low viscosity DOT4 brake fluid that meets ISO 4925 class 6 and Land Rover LRES22BF03 requirements may be used.
- 2. Replace the cap.
- **3.** Fit the reservoir cover in the reverse order of removal.

POWER STEERING FLUID CHECK

⚠

Power steering fluid is highly toxic. Keep containers sealed and out of reach of children. If accidental consumption of fluid is suspected, seek medical attention immediately.




If the fluid comes into contact with the skin or eyes, rinse immediately with plenty of water.

CHECKING THE FLUID LEVEL

- Do not start the engine if the fluid level has dropped below the MIN mark.

 Severe damage to the steering pump could result.
- Seek qualified assistance immediately if there is a noticeable drop in the fluid level. Severe damage to the steering pump could result.



vehicle

Check and top-up the fluid with the vehicle on level ground, engine switched off, and the system cold. Ensure that the steering wheel is not turned after stopping the engine.



The level of fluid can be seen through the translucent body of the reservoir.

The fluid level should be between the **MIN** and the **MAX** marks.

TOPPING UP THE FLUID



Power steering fluid will damage painted surfaces. Soak up any spillage with an absorbent cloth immediately and wash the area with a mixture of car shampoo and water.

- ① Do not fill the reservoir above the **MAX** mark.
- Clean the filler cap before removing to prevent dirt from entering the reservoir.

- 2. Remove filler cap.
- Using Pentosin CHF202 fluid, top-up the reservoir until the fluid level is between the MIN and MAX marks.
- 4. Replace filler cap.

WASHER FLUID CHECK



Some screen washer products are inflammable, particularly if high or undiluted concentrations are exposed to sparking. Do not allow screen washer fluid to come into contact with naked flames or sources of ignition.




If the vehicle is operated in temperatures below 4°C (40°F), use a washer fluid with frost protection. In cold weather, failure to use a washer fluid with frost protection, could result in impaired vision and increase the risk of a vehicle crash.

- Do not use an antifreeze or vinegar/water solution in the washer reservoir antifreeze will damage painted surfaces, while vinegar can damage the windscreen washer pump.
- Body panels may suffer discolouration as a result of screen washer fluid spillage. Take care to avoid spillage, particularly if an undiluted or high concentration is being used. If spillage occurs, wash the affected area immediately with water.

LOW FLUID WARNING (VEHICLES FITTED WITH HEADLAMP WASH)

If the quantity of fluid remaining in the washer reservoir drops to less than one litre, the message **LOW WASHER FLUID** will be displayed in the message centre.

TOPPING UP THE FLUID

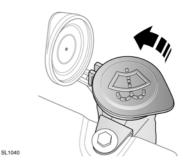

The washer reservoir supplies both front and rear screen washer jets and headlamp washer jets.

Check and top-up the reservoir level at least every week. Always top-up with screen washer fluid to prevent freezing.

Operate the washer switches periodically to check that the nozzles are clear and properly directed.

- 1. Clean the filler cap before removing to prevent dirt from entering the reservoir.
- 2. Remove filler cap.
- 3. Top-up the reservoir until the fluid is visible in the filler neck.
- **4.** Replace filler cap.

Washer reservoir capacity

- Models without headlamp wash 3.1 litres (5.45 pints).
- Models with headlamp wash 5.8 litres (10.2 pints).