



LIGHTING CONTROL

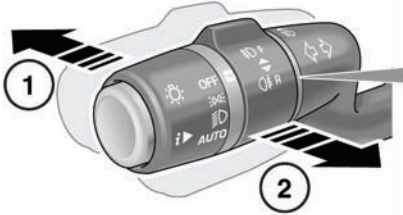

SL1727

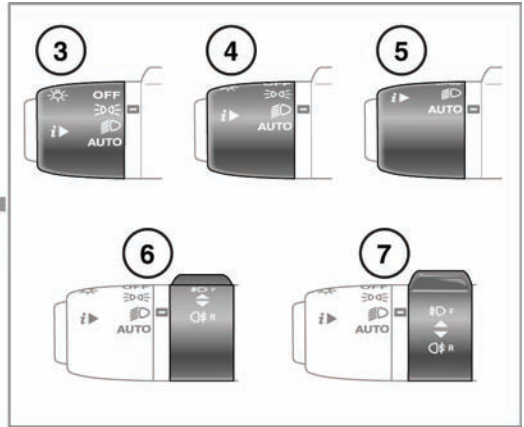

1. With the headlamps on, push the control away from the steering wheel to select high beam. The instrument pack warning lamp will illuminate.

Note: Do not use high beam where it may distract other road users.

2. Pull the control towards the steering wheel and release to flash the high beam on and off. The high beam will remain on for as long as the switch is held.
3. Sidelights.
4. Headlamps.
5. **AUTO.** With Auto lamps selected, when ambient light fades and the ignition is on, the side lamps, tail lamps, low beam headlamps and license plate lamps will switch on automatically. Headlamp courtesy delay, High beam assist and Windshield wipers detection may also be activated.

Note: Low exterior light levels, caused by adverse weather conditions, may also cause the autolamp system to activate.

6. Rear fog lamps. Will operate only while sidelights, headlamps or Auto lamps are selected. Turn the collar towards the steering wheel and release. The instrument pack warning lamp will illuminate.
7. Front fog lamps. Will operate only while sidelights, headlamps or Auto lamps are selected. Turn the collar away from the steering wheel and release. The instrument pack warning lamp will illuminate.

HEADLAMP COURTESY DELAY

This feature operates whenever the lamps master switch is in the AUTO (5) position and the ignition is turned off. The headlamps will remain illuminated for up to 240 seconds.

Note: The time delay may be changed via the Vehicle settings menu. See **63, VEHICLE INFORMATION AND SETTINGS MENU.**

Courtesy lamps can be switched off at any time by pressing the headlamps button on the Smart Key.

HIGH BEAM ASSIST

This feature automatically selects and deselects high beam, under specific conditions of road lighting and in the absence of other vehicle's lights. The system is only active when the ambient light drops below a predetermined level.

Note: It is not recommended that high beam assist is used while driving off road.

For High beam assist to become operational, the main lighting switch must be in the AUTO position (5), with low beam headlamps selected.

High beam assist will activate only when the vehicle speed exceeds 40km/h (25mph). The system will deactivate when vehicle speed drops below 24km/h (15mph).

To manually select high beam, move the stalk to the high beam position as normal. To return to High beam assist, move the stalk back to the central position.

To manually override to low beam from high beam, pull the stalk to the flash position (2) and High beam assist will be cancelled. To return to High beam assist, push the stalk to the high beam position (1) and then return it to the central position.



A green lamp in the instrument pack illuminates when High beam assist is selected.

To turn off High beam assist, turn the main lighting control from Auto to headlamps.

This feature can be disabled/enabled via the Vehicle settings menu. See **63, VEHICLE INFORMATION AND SETTINGS MENU.**

Note: The following may affect the operation of High beam assist:-

- Highly reflective road signs.
- Vehicles with dim headlamps.

- Adverse weather conditions.
- Dirty sensor.
- Dirty, damaged, or fogged windshield.

Note: The system cannot be relied upon to activate or de-activate high beam in all possible circumstances. It remains the driver's responsibility to ensure correct use of the headlamps at all times.

Note: Ensure that the forward facing sensors on the back of the rear view mirror are not blocked or obstructed.

AUTO LAMPS WINDSHIELD WIPER DETECTION

If Auto lamps is selected and the windshield wipers are switched on for 20 seconds or more, the side lamps, tail lamps and headlamps will switch on automatically. When the wipers are switched off, the lamps will automatically switch off 2 minutes later.

DAYTIME RUNNING LAMPS - CANADA ONLY

Daytime running lamps are LED lamps.

With the lighting control in the OFF position or in AUTO position while lighting conditions do not require headlamps on, then daytime running lamps will switch on automatically under the following conditions:

- The engine is running.
- The transmission is out of park (P).
- The parking brake is not applied - market dependent.




Unless required or prohibited by law, daytime running lamps can be disabled or enabled by your Retailer.

CONDENSATION

Fogging of lamp lenses can occur under some atmospheric conditions. This will not affect the performance of the lamps and will clear during normal operation.

HEADLAMP LEVELING (Halogen only)

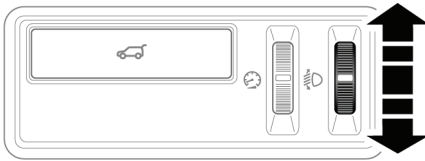

SL1779

Use the headlamp leveling control to account for vehicle loading changes.

| Vehicle load | Switch position |
|------------------------------------|----------------------------|
| Driver only | 0 |
| Driver and front seat passenger | 0 |
| Driver and passengers in all seats | Rotate down one notch. |
| Maximum gross vehicle weight | Rotate down two notches. |
| Maximum rear axle load | Rotate down three notches. |

ADAPTIVE FRONT LIGHTING SYSTEM (AFS)

With the headlamps on, AFS will adjust the beams when cornering to provide improved illumination in the direction of travel.

When a turn signal is activated at speeds up to 25mph (40km/h), an additional lamp set at 45° in the direction of turn is illuminated. This broadens the beam of the headlamps, improving visibility when turning.

AFS is deactivated when:-


- Reverse gear is selected.
- The vehicle is stationary.
- Daytime running lamps are on.

If a system fault is detected the headlamps will attempt to move to the central position and then remain stationary. The AFS warning indicator will illuminate to indicate that a fault is present.



If the warning lamp illuminates, contact your Retailer as soon as possible.

HAZARD WARNING LAMPS

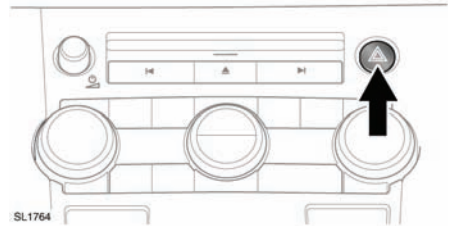

SL1764

Press to turn the hazard warning lamps on. Press again to turn off. When the hazard warning lamps are operating, the direction indicator warning lamps will flash in time with the hazard warning lamps.

Note: Hazard warning lamps can be used when the ignition is on or off.