


USING THE PARKING AID

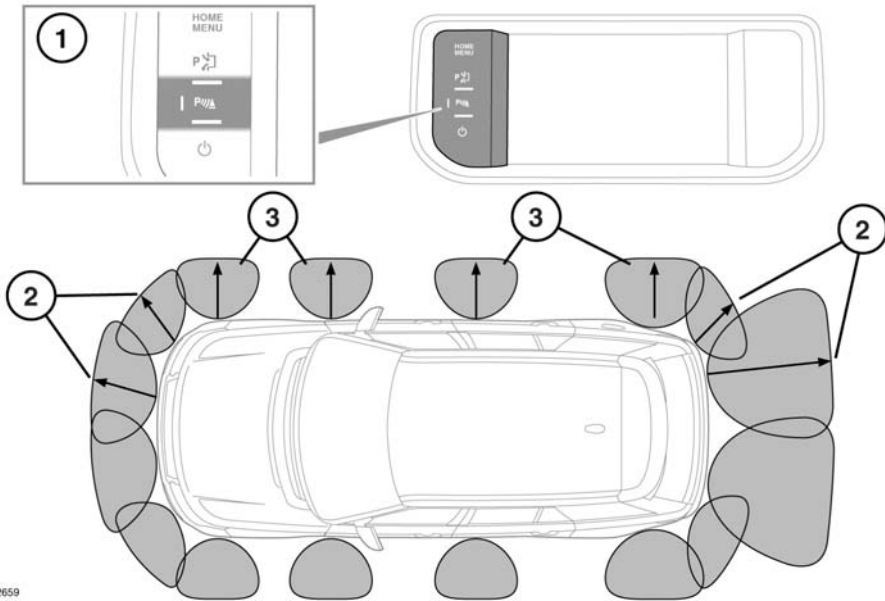

1. Parking aid button.
2. Parking aid sensor detection zones.
3. 360° Park Distance Control sensor detection zones.

⚠ The Parking aid and 360° Park Distance Control sensors will not detect moving objects such as children and animals, until they are dangerously close. Always use extreme caution when manoeuvring.

⚠ The Parking aid and 360° Park Distance Control sensors may not detect some obstructions, for example, narrow posts or small objects close to the ground.

⚠ If accessories, for example, a tow bar, are fitted to the rear of the vehicle, particular care must be taken when reversing. The rear sensors will only indicate the distance from the bumper to the obstacle.

Note: If a trailer is connected to a Land Rover approved trailer socket, the rear sensors will be disabled.

The Parking aid and 360° Park Distance Control systems assist the driver while manoeuvring the vehicle in confined spaces. When active, object tracking along the front, side, and rear of the vehicle will be displayed on the Touch screen.

The front, side, and outer rear sensors monitor a 1.2 metre (4 foot) area around the vehicle.

The inner rear sensors monitor a 1.8 metre (6 foot) area at the rear of the vehicle.

When Reverse (**R**) gear is selected, the front, rear, and side sensors become active. The sensors will remain active until the vehicle's speed reaches 16 km/h (10 mph).

If Drive (**D**) is subsequently selected, the front, rear, and side sensors will remain active until the vehicle's speed reaches 16 km/h (10 mph).

If **D** is selected directly from Park (**P**), the Parking aid and 360° Park Distance Control systems will only become active if the Parking aid button is pressed, and the vehicle's speed is less than 10 km/h (6 mph). If these conditions are met, the front and side sensors will become active. The sensors will remain active until the vehicle's speed reaches 16 km/h (10 mph).

When objects are detected, the system emits a warning tone, which increases in frequency as the vehicle gets closer to an object. The tone becomes constant when the object is within 300 millimetres (12 inches) of the vehicle.

Note: *If the Parking aid system does not detect an object likely to come into contact with the vehicle, it will not display any tracking information on the Touch screen.*